



Motion Platform Work Envelope - Heave vs Pitch






Motion Platform Work Envelope - Heave vs Roll

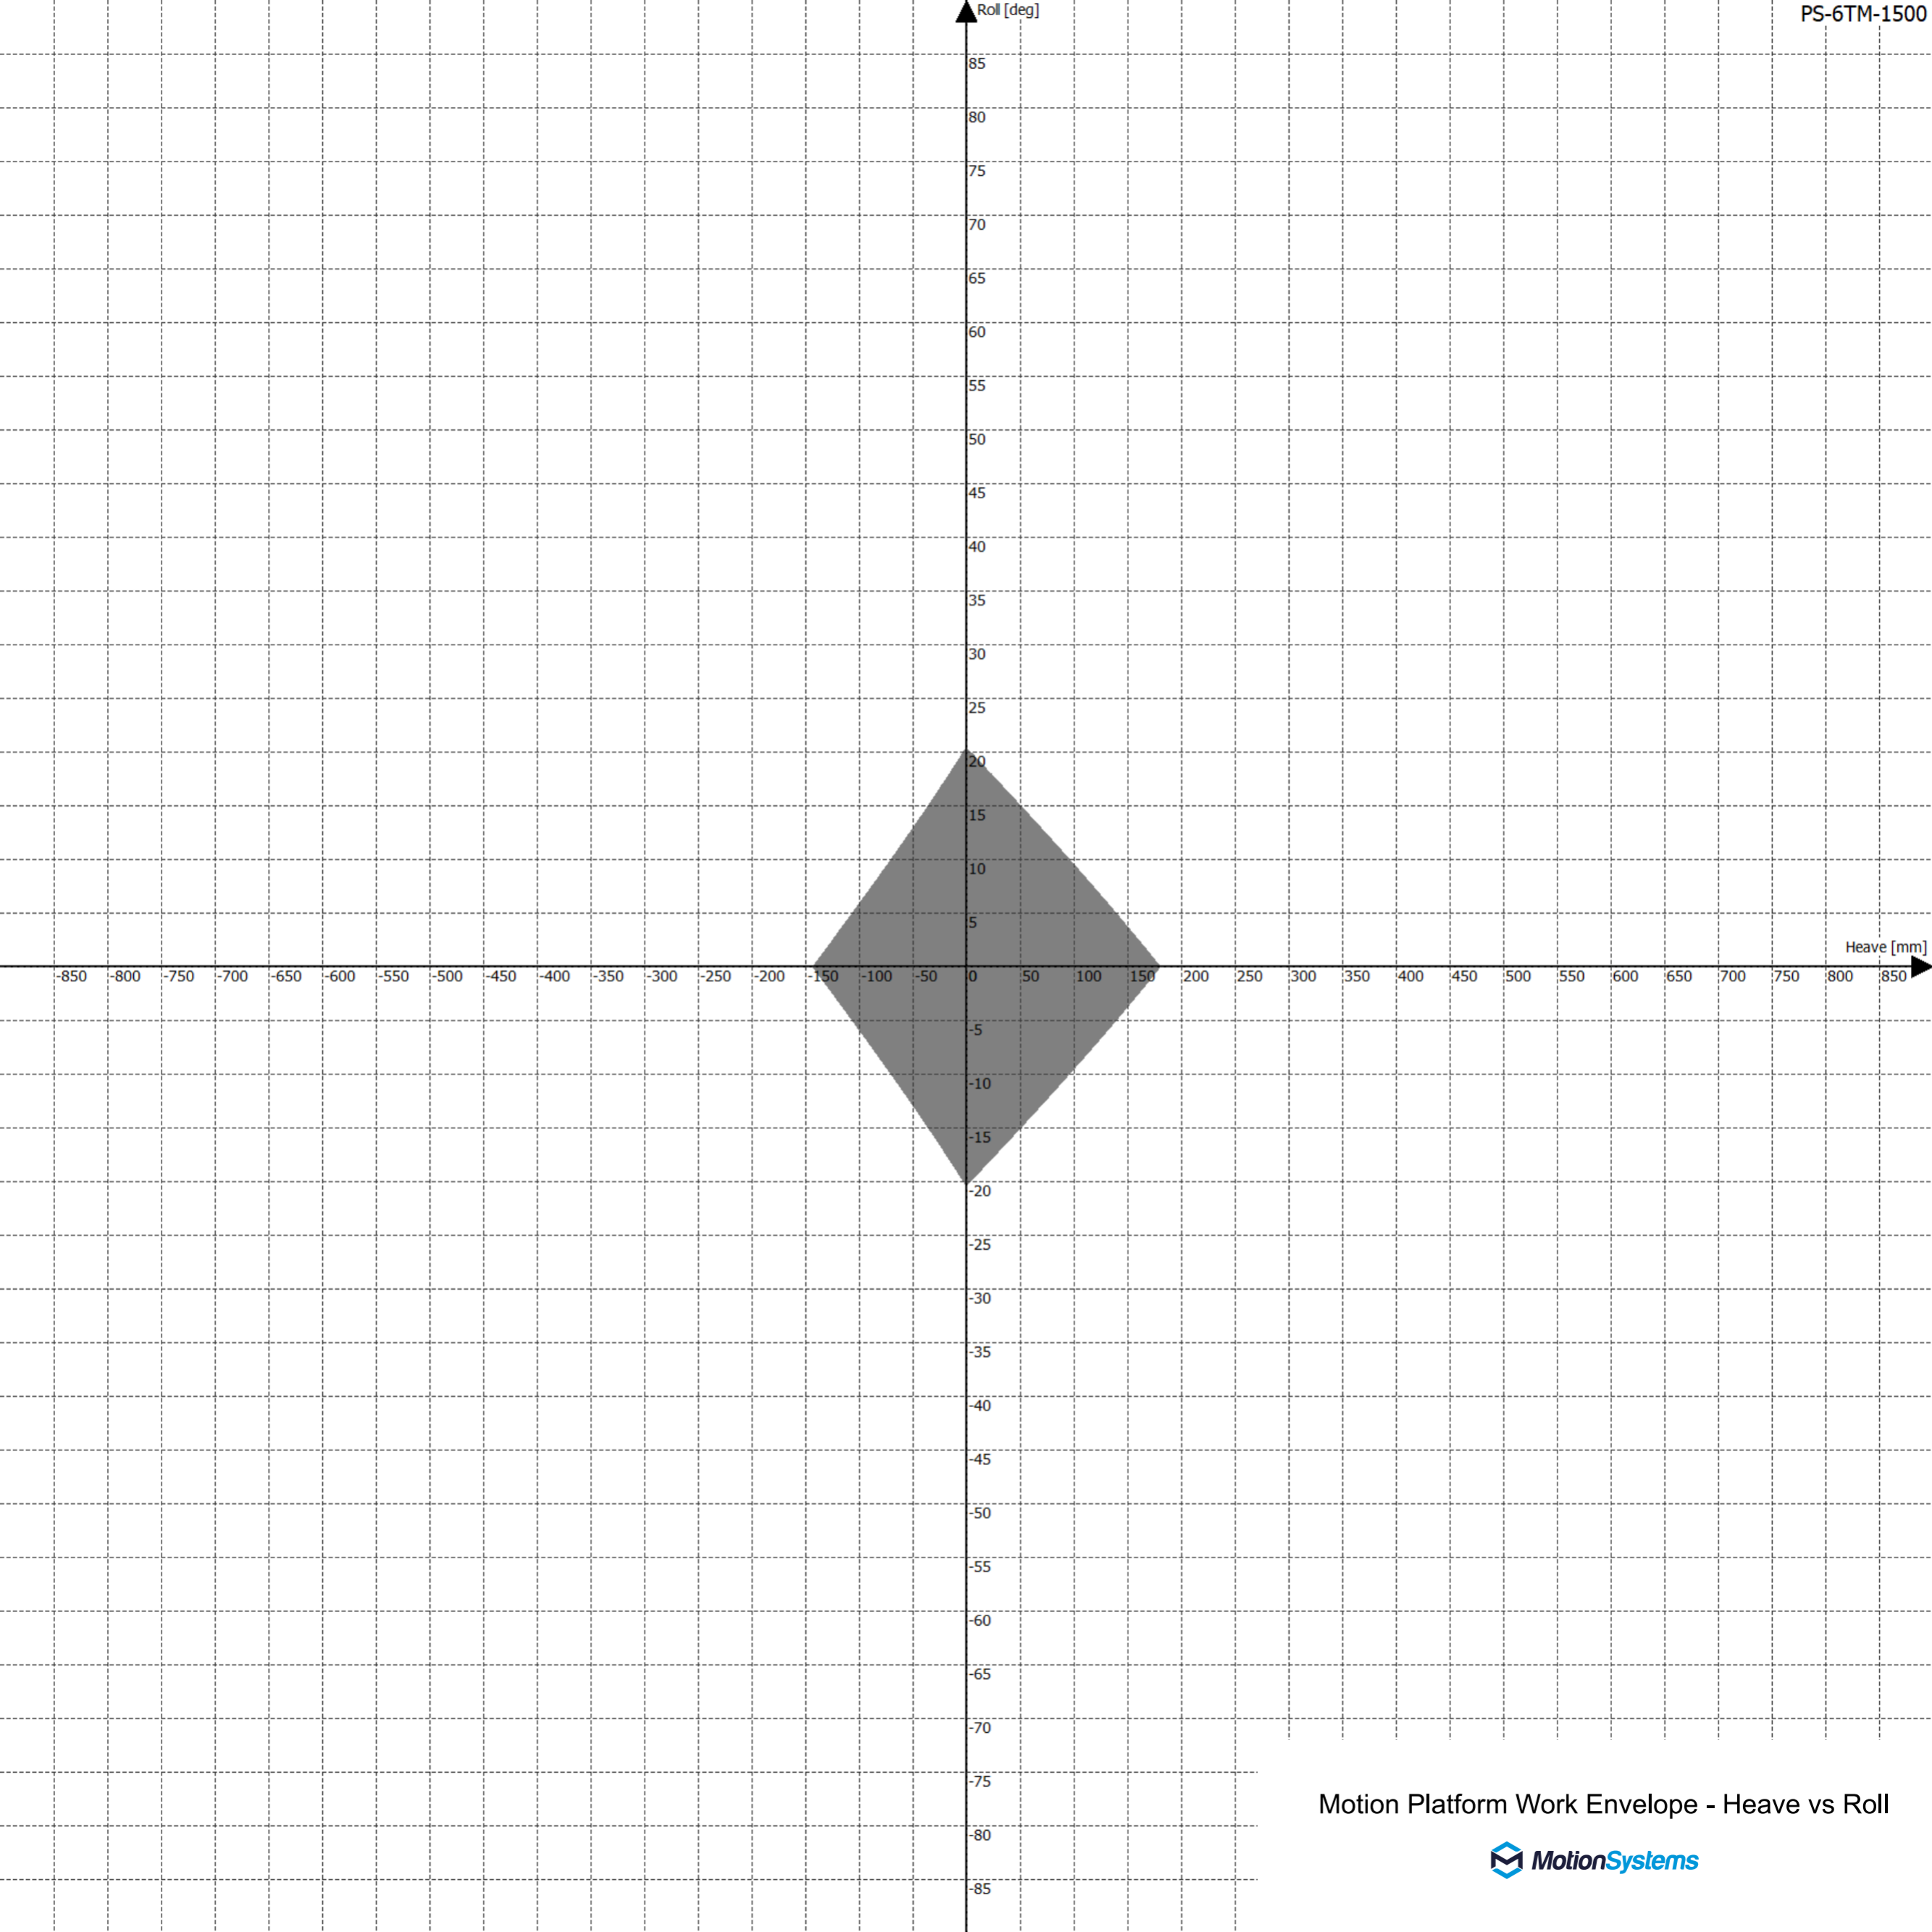

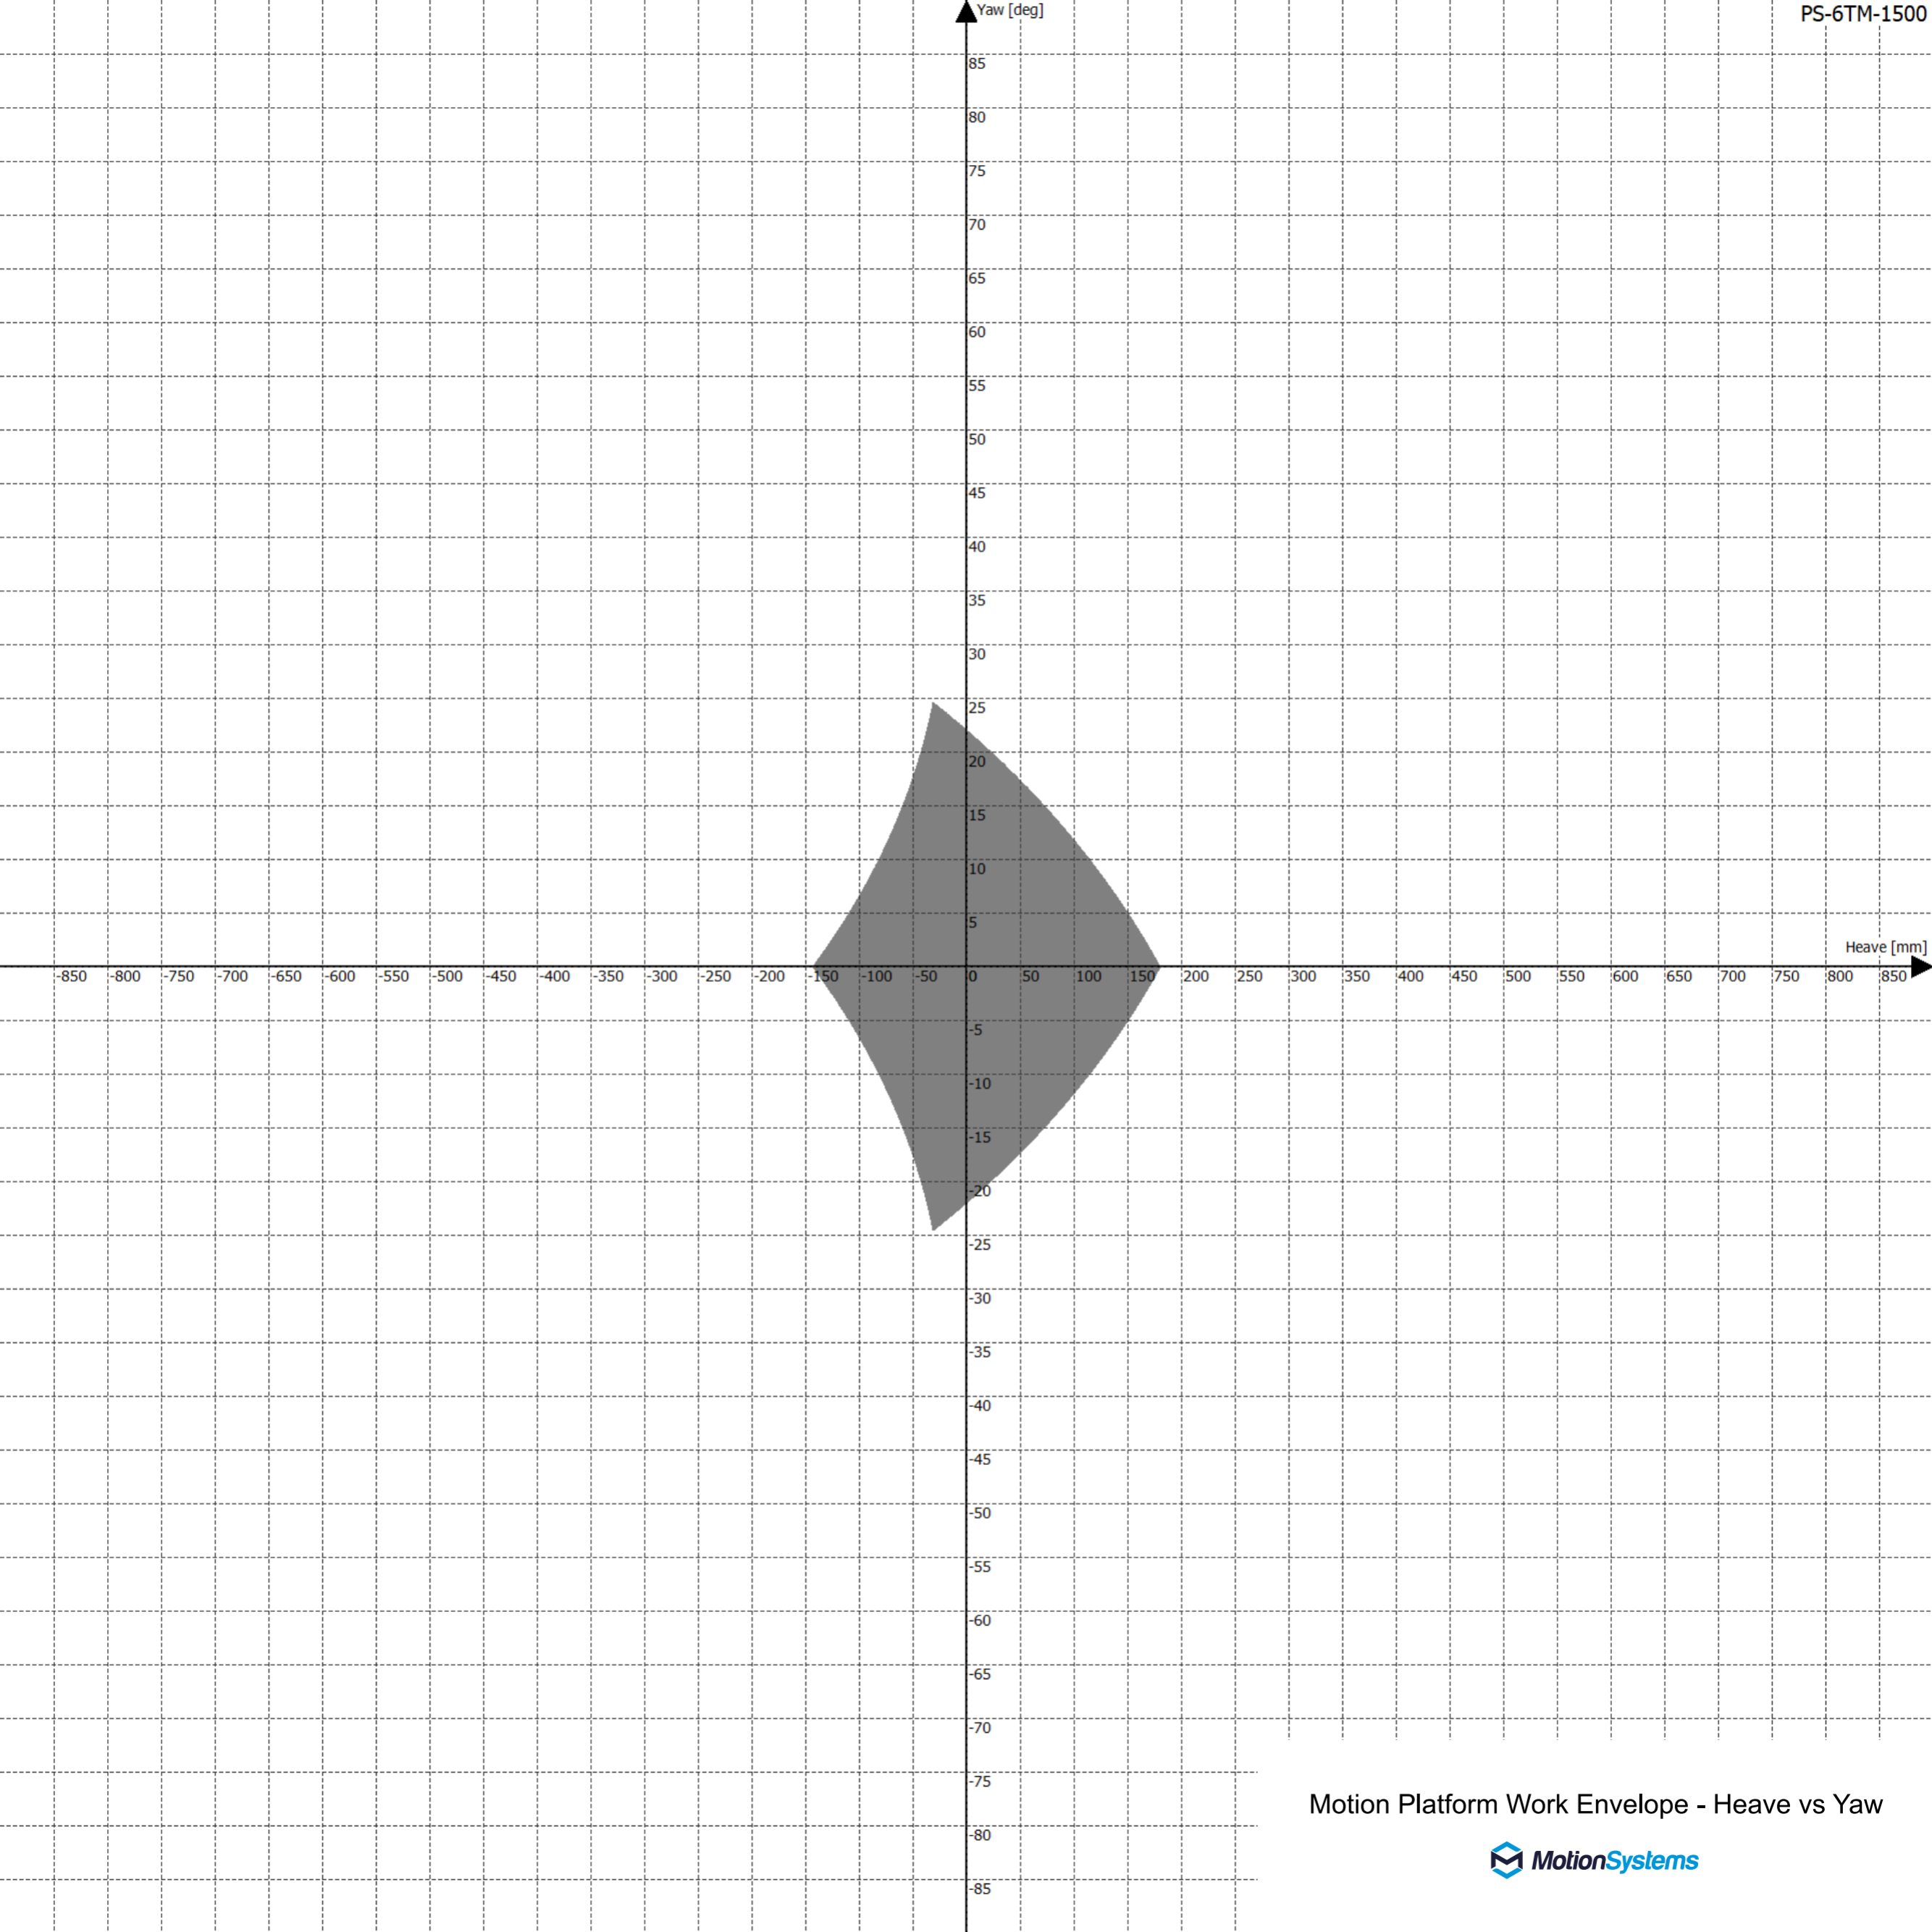


Motion Platform Work Envelope - Heave vs Yaw



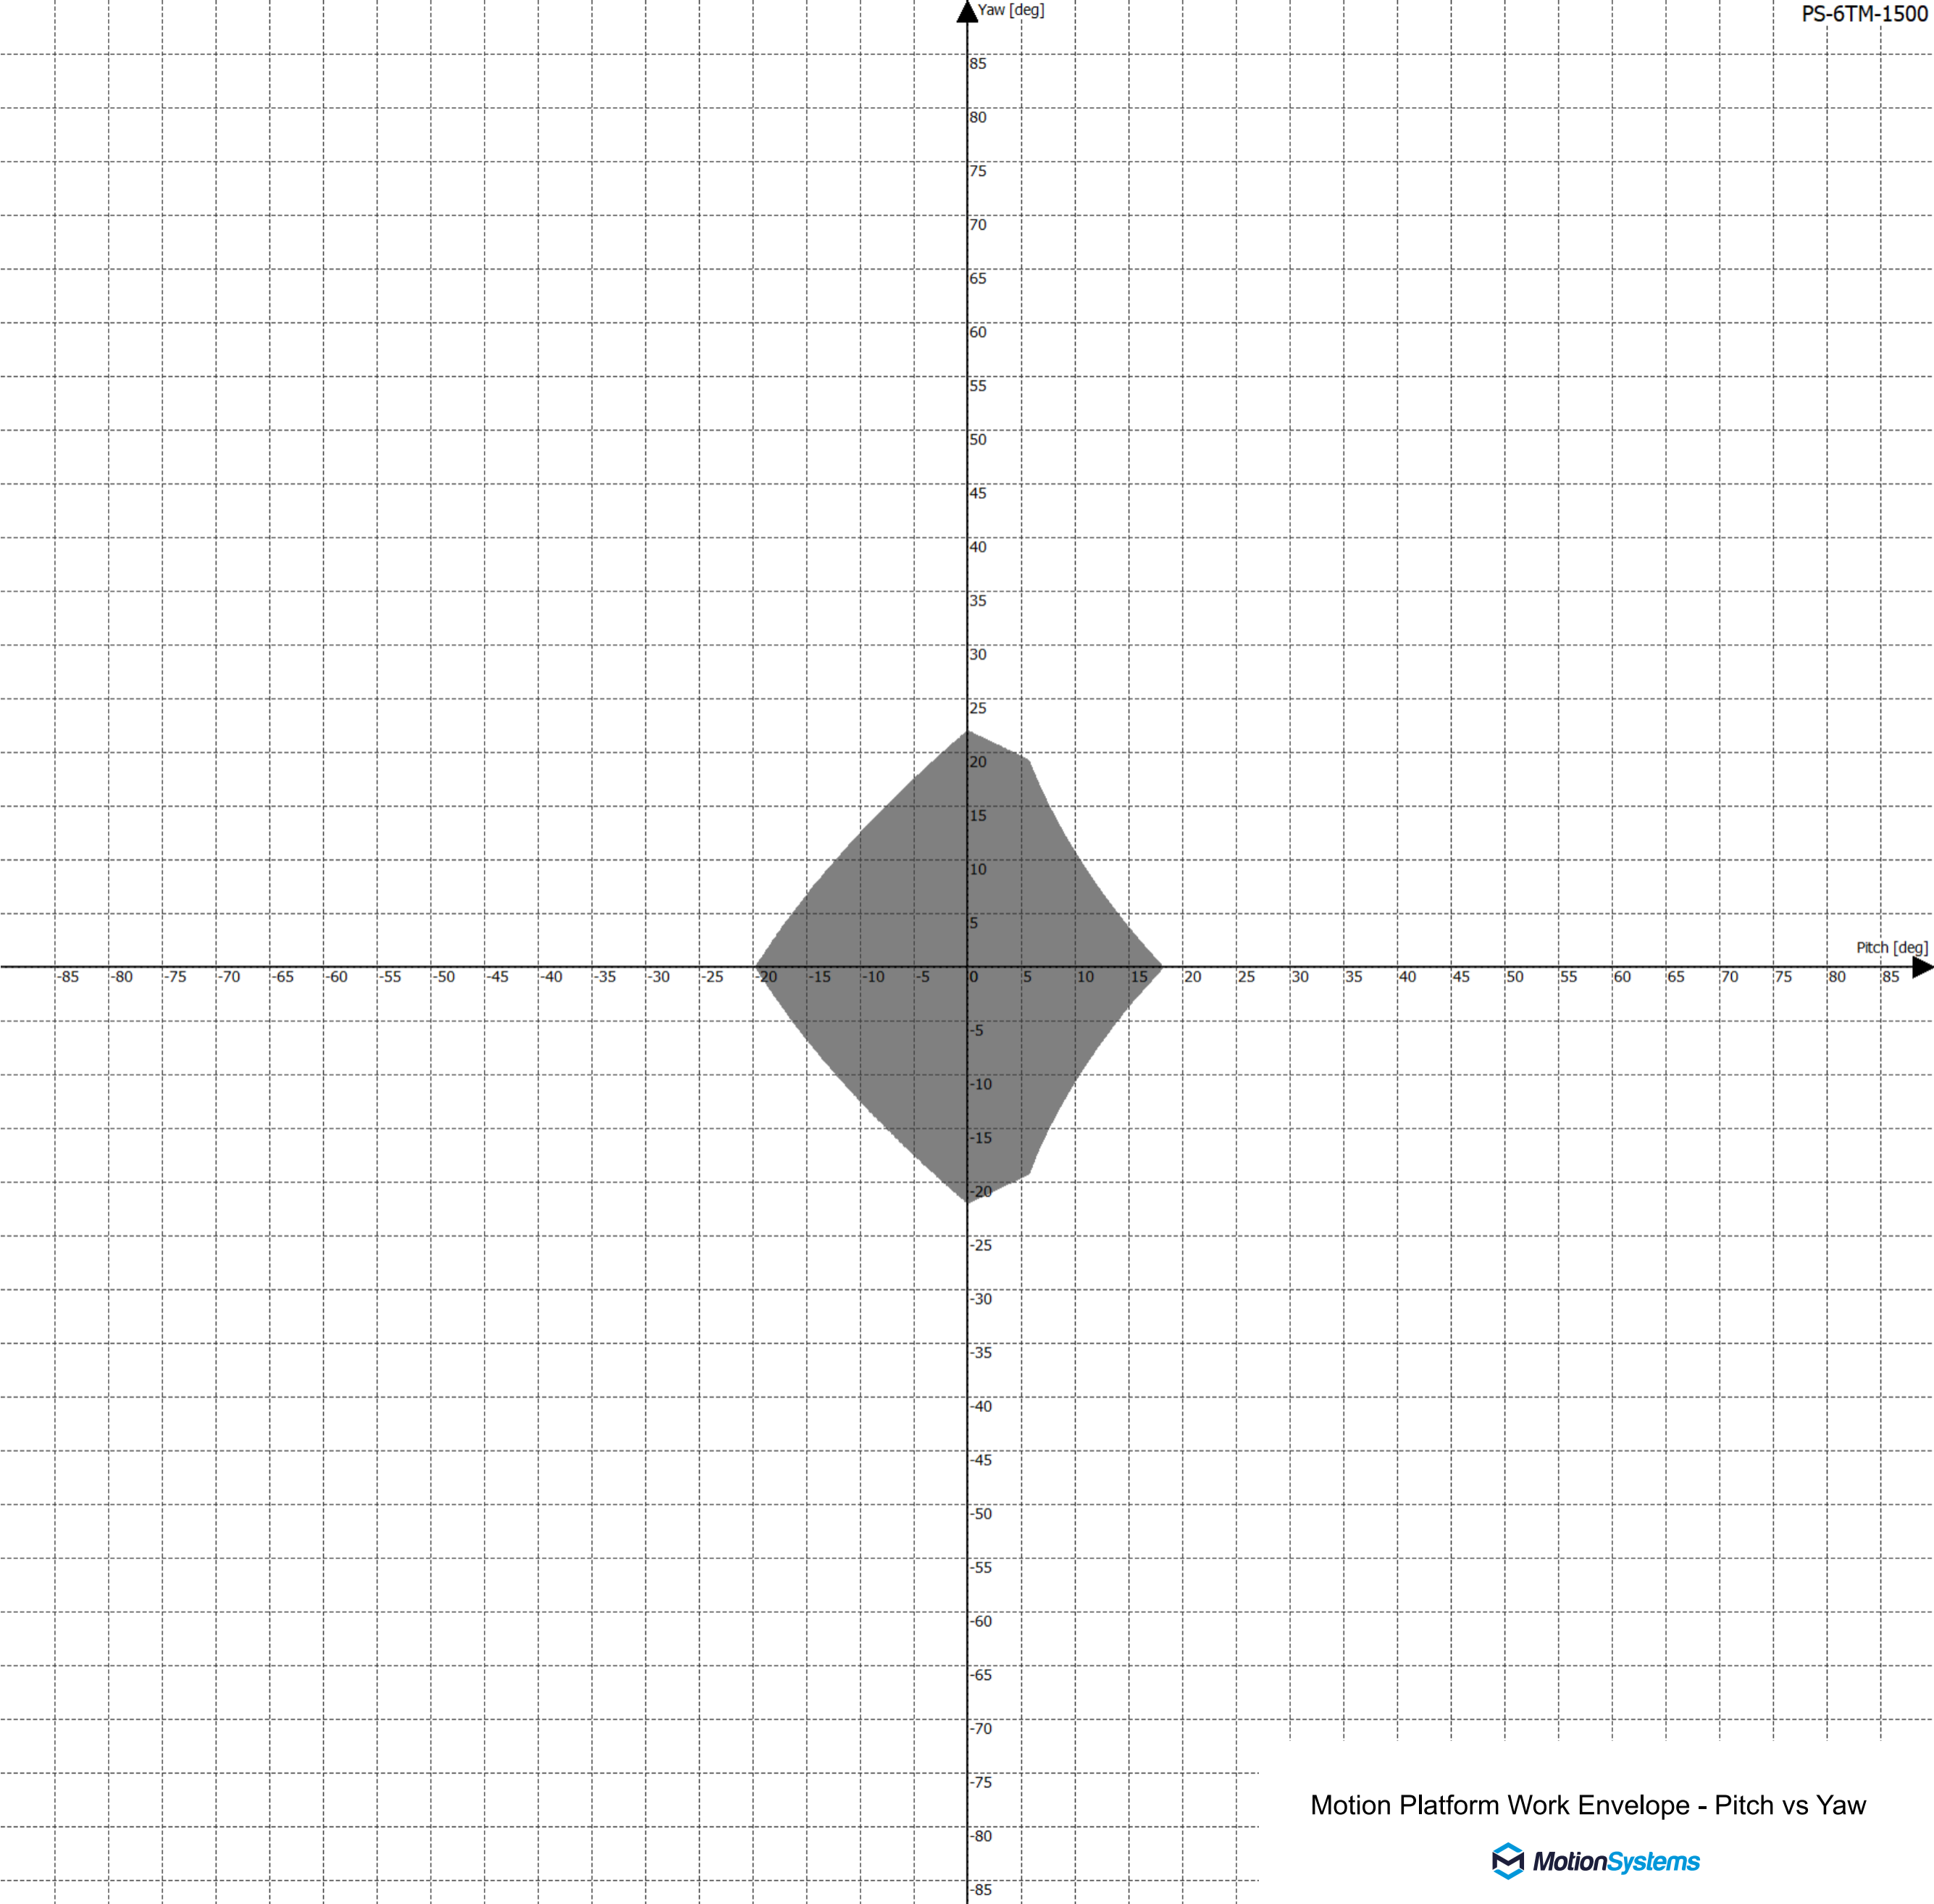


Motion Platform Work Envelope - Pitch vs Yaw



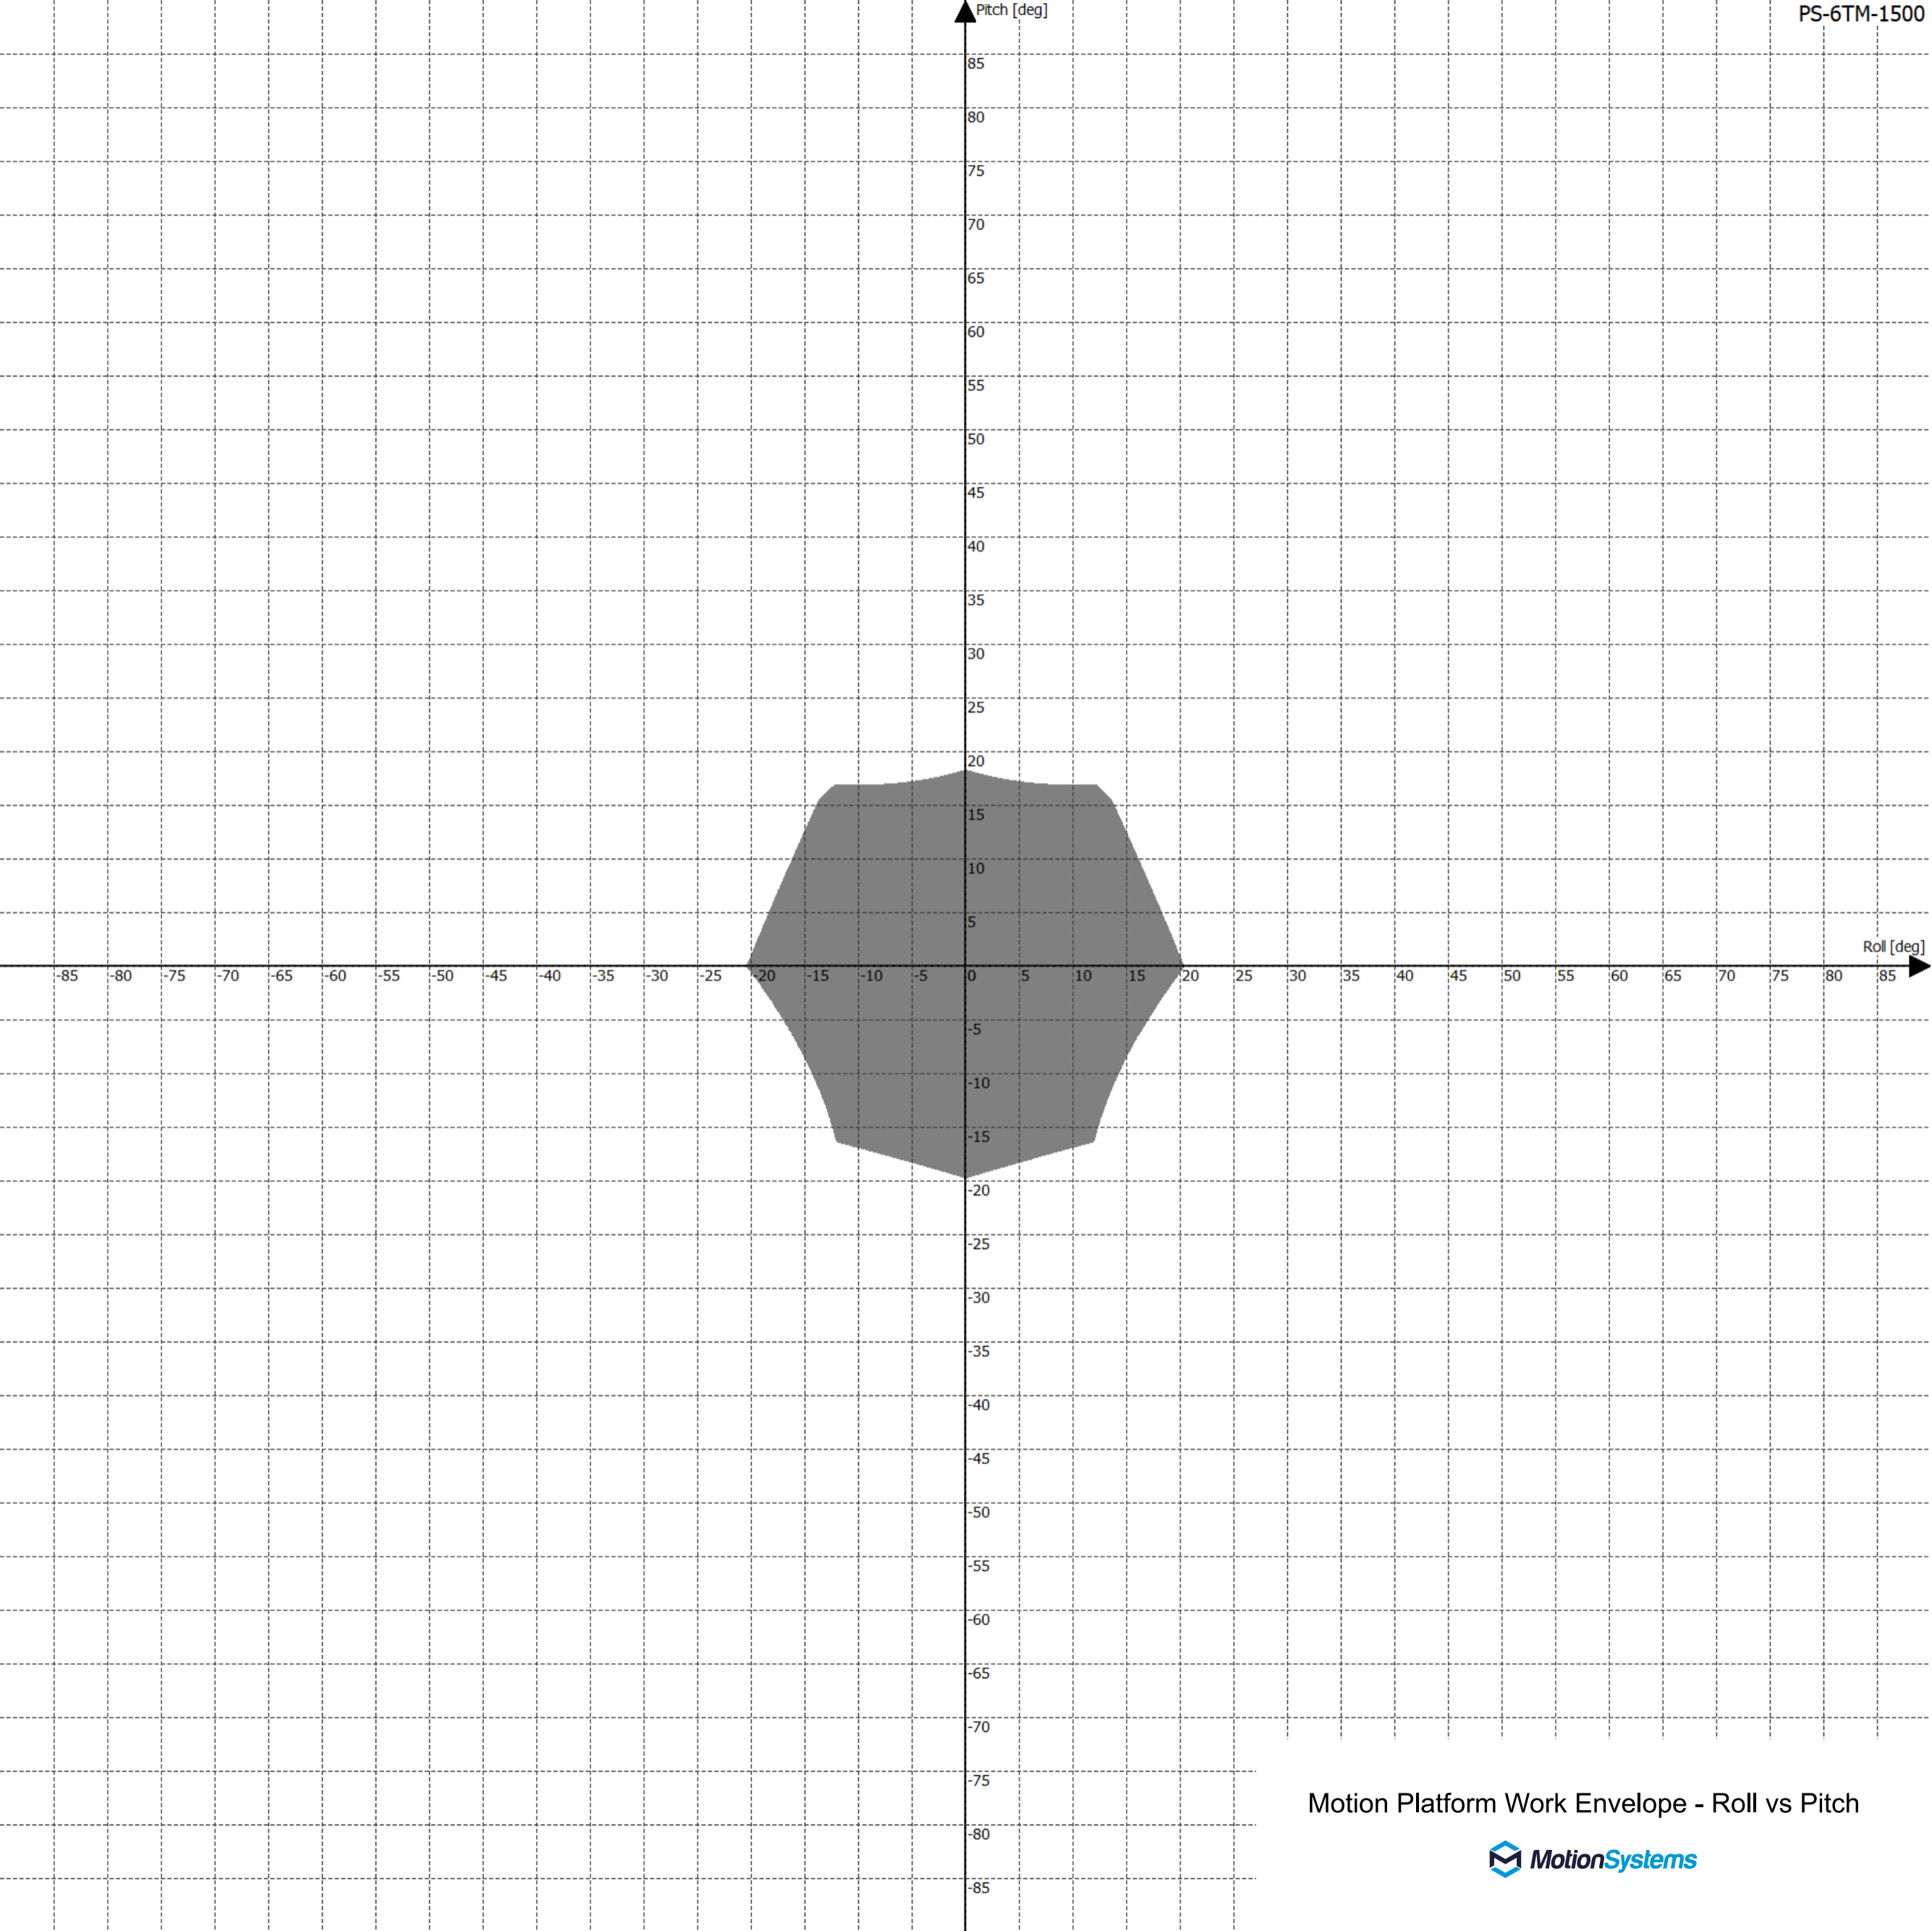


Motion Platform Work Envelope - Roll vs Pitch



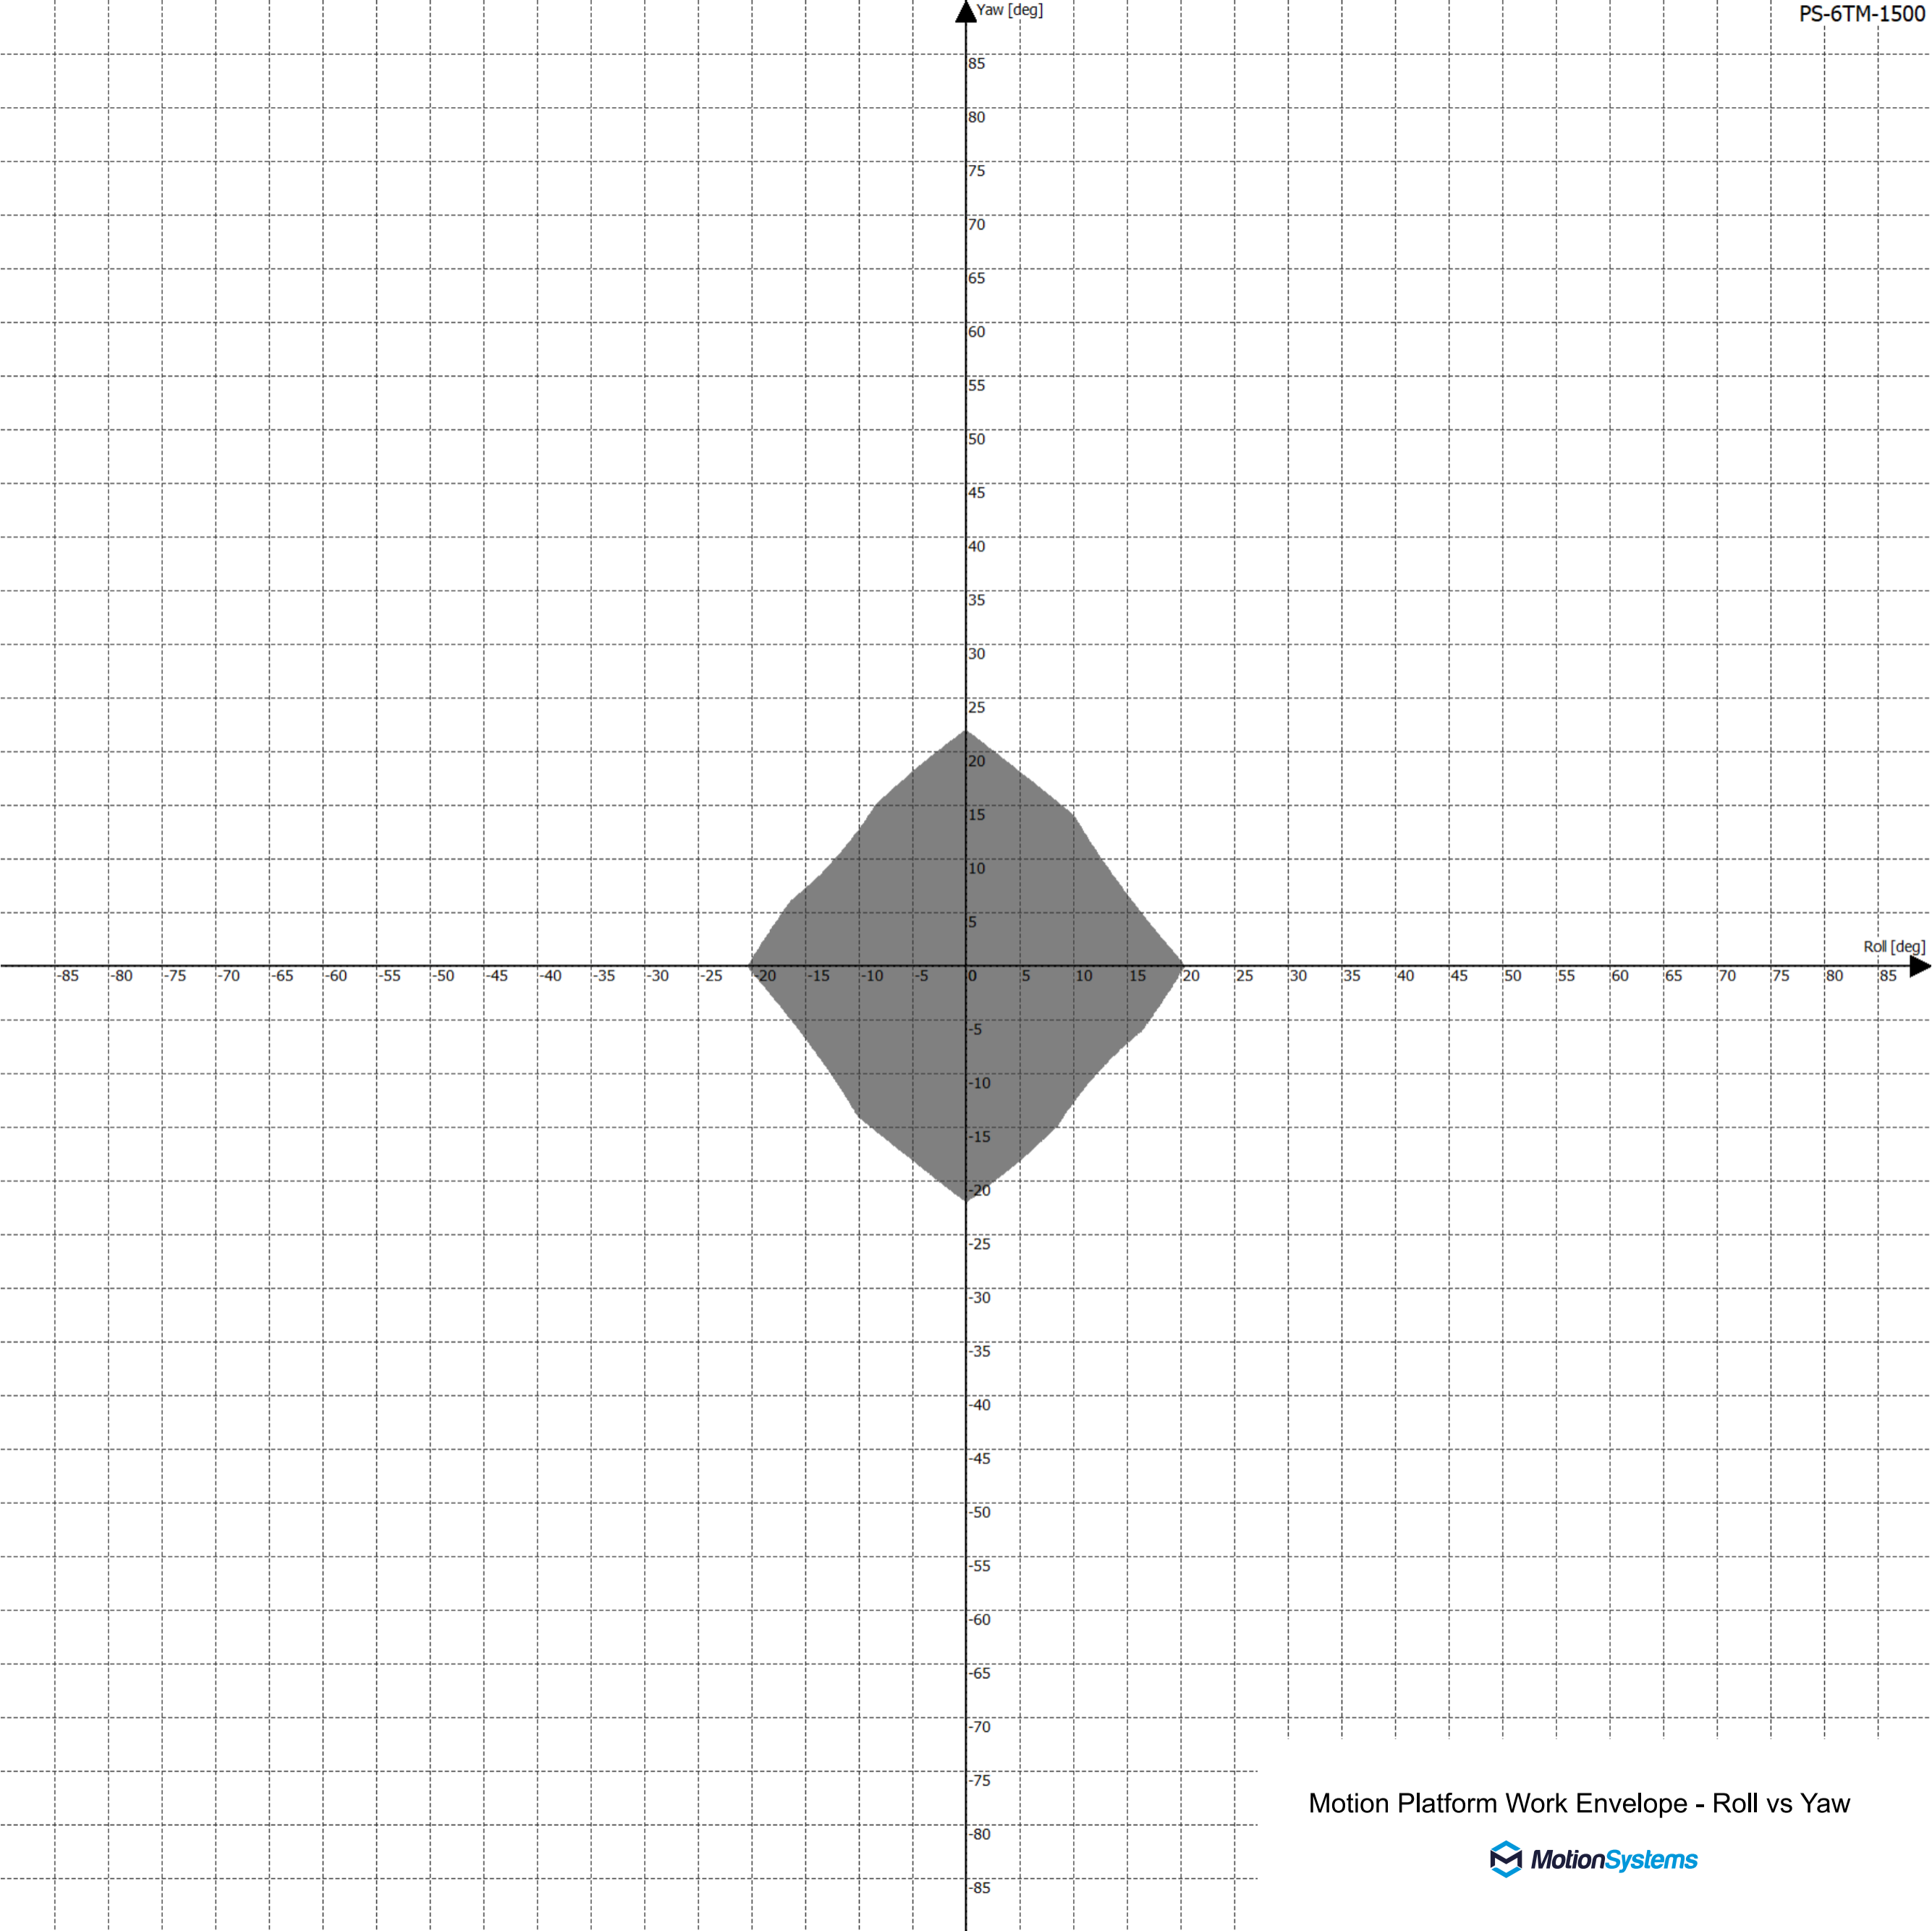

Motion Platform Work Envelope - Roll vs Yaw




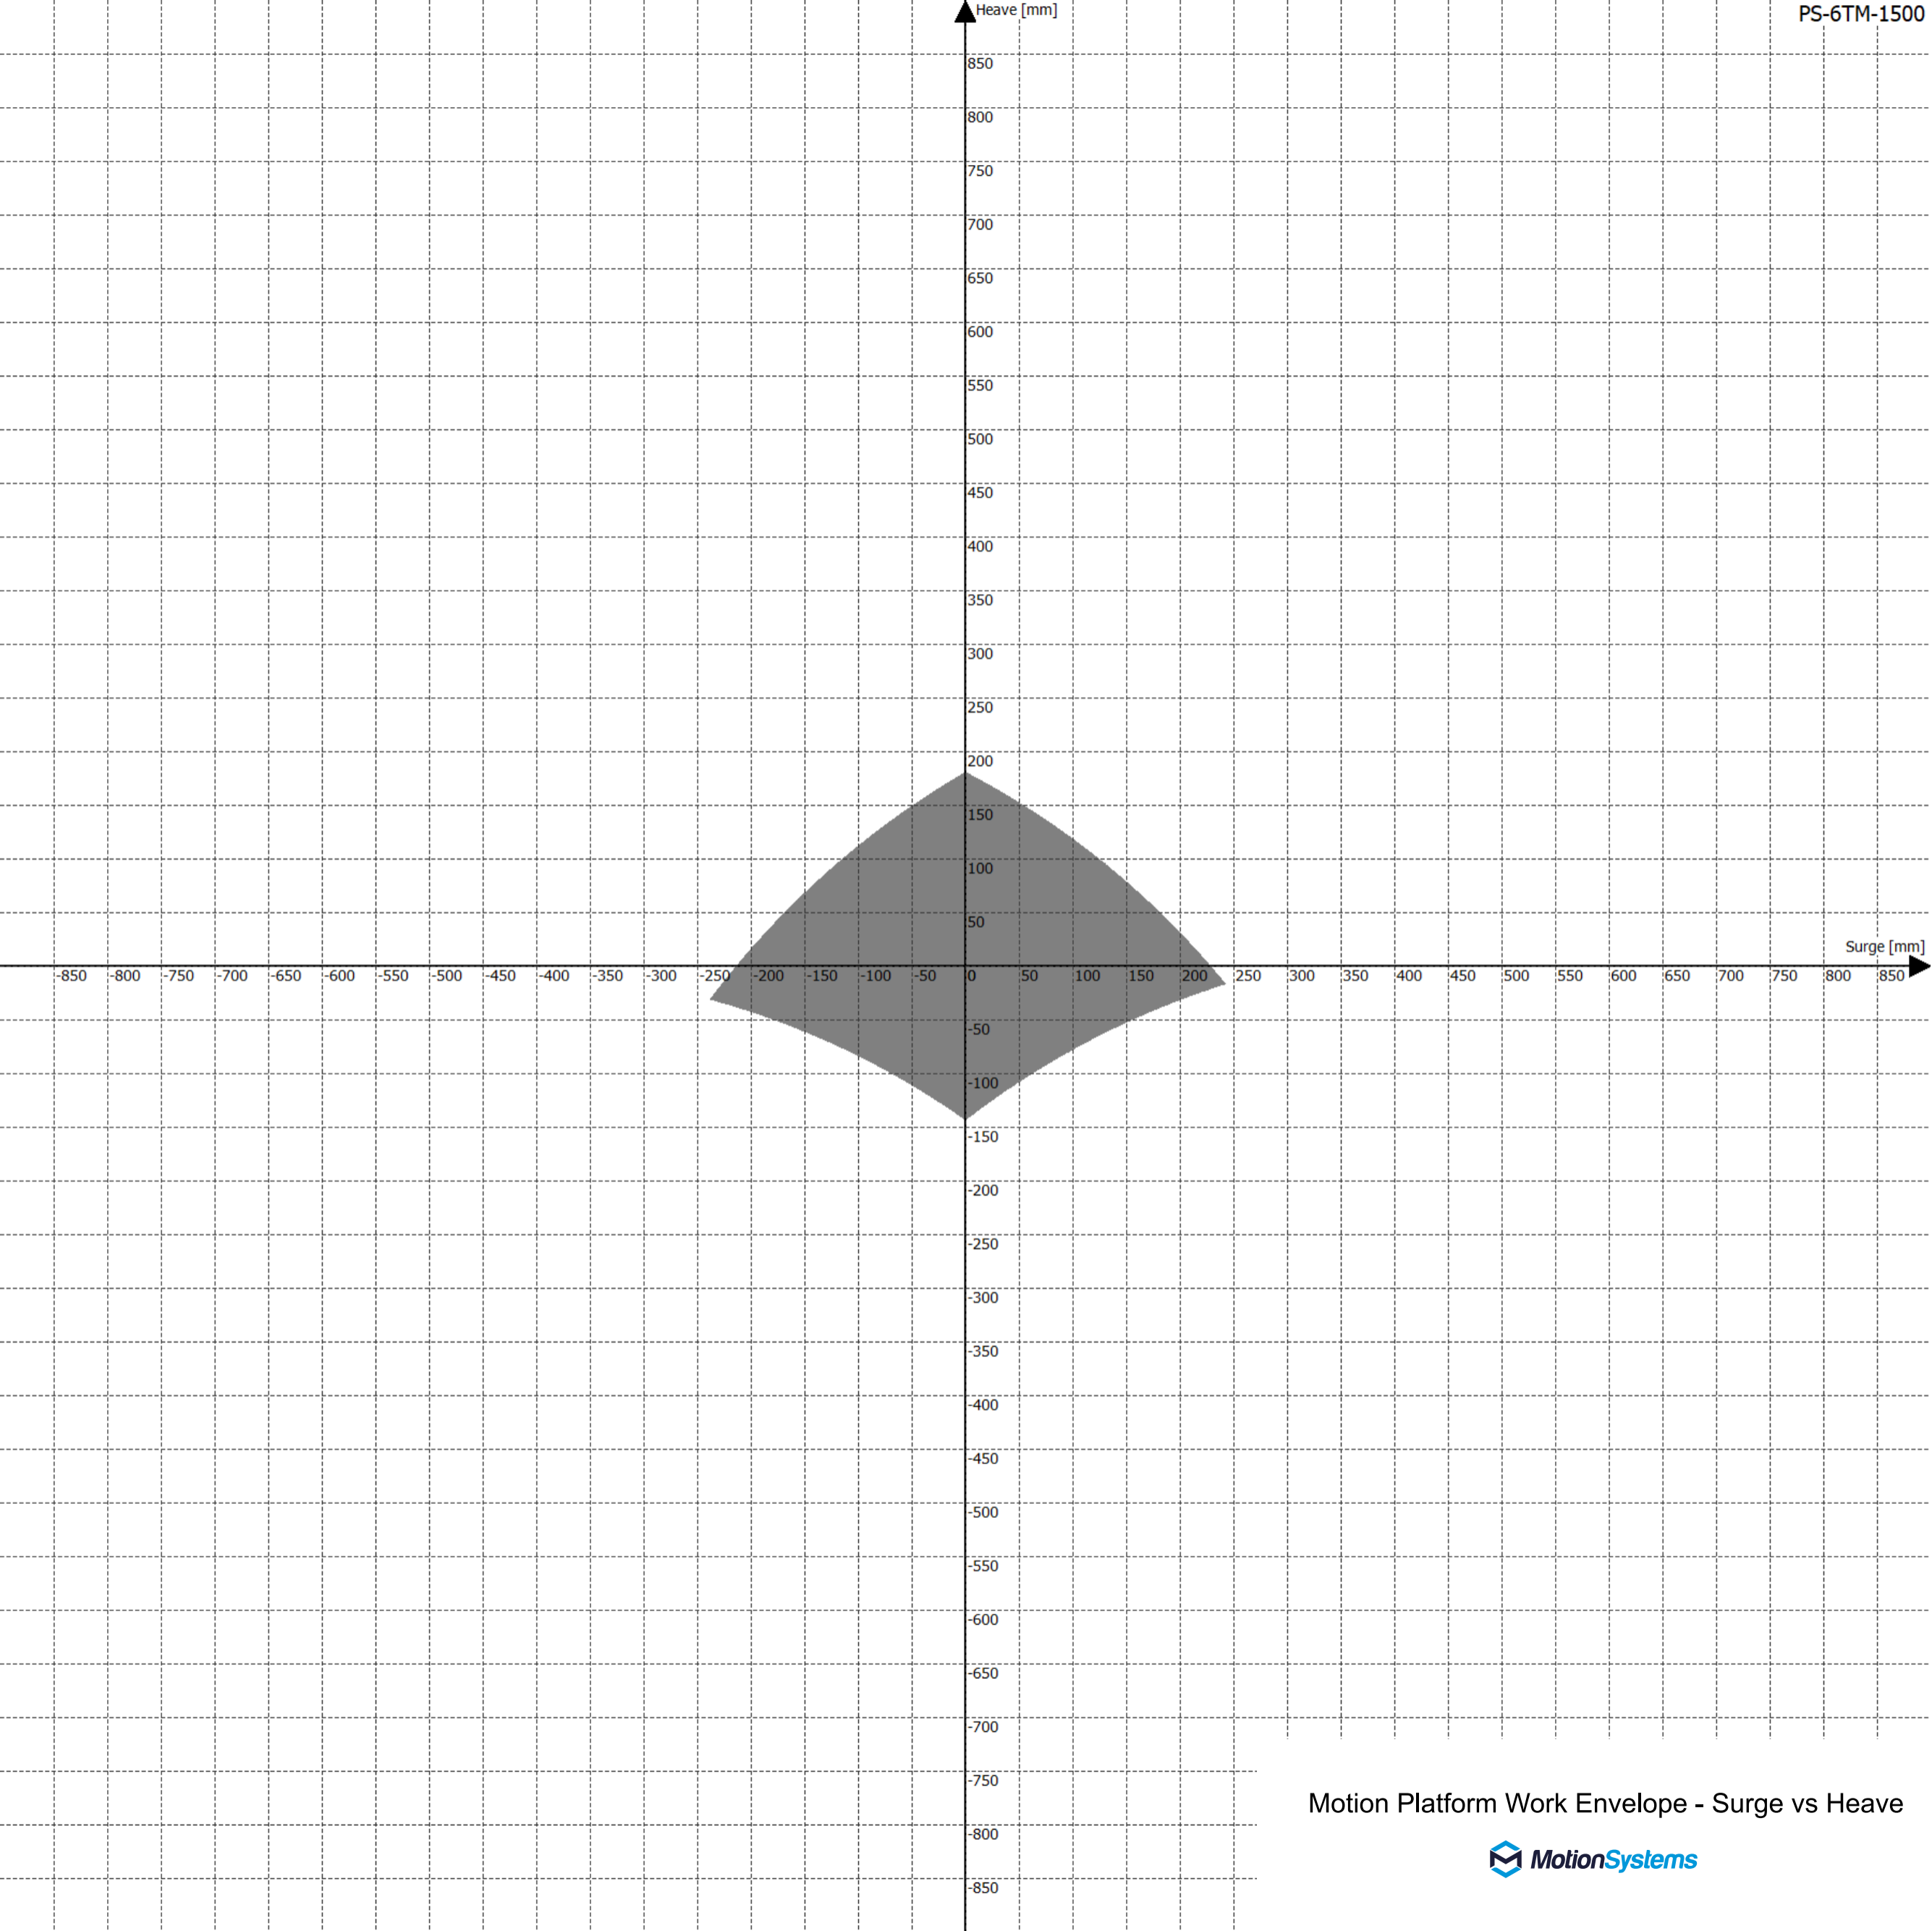

Motion Platform Work Envelope - Surge vs Heave






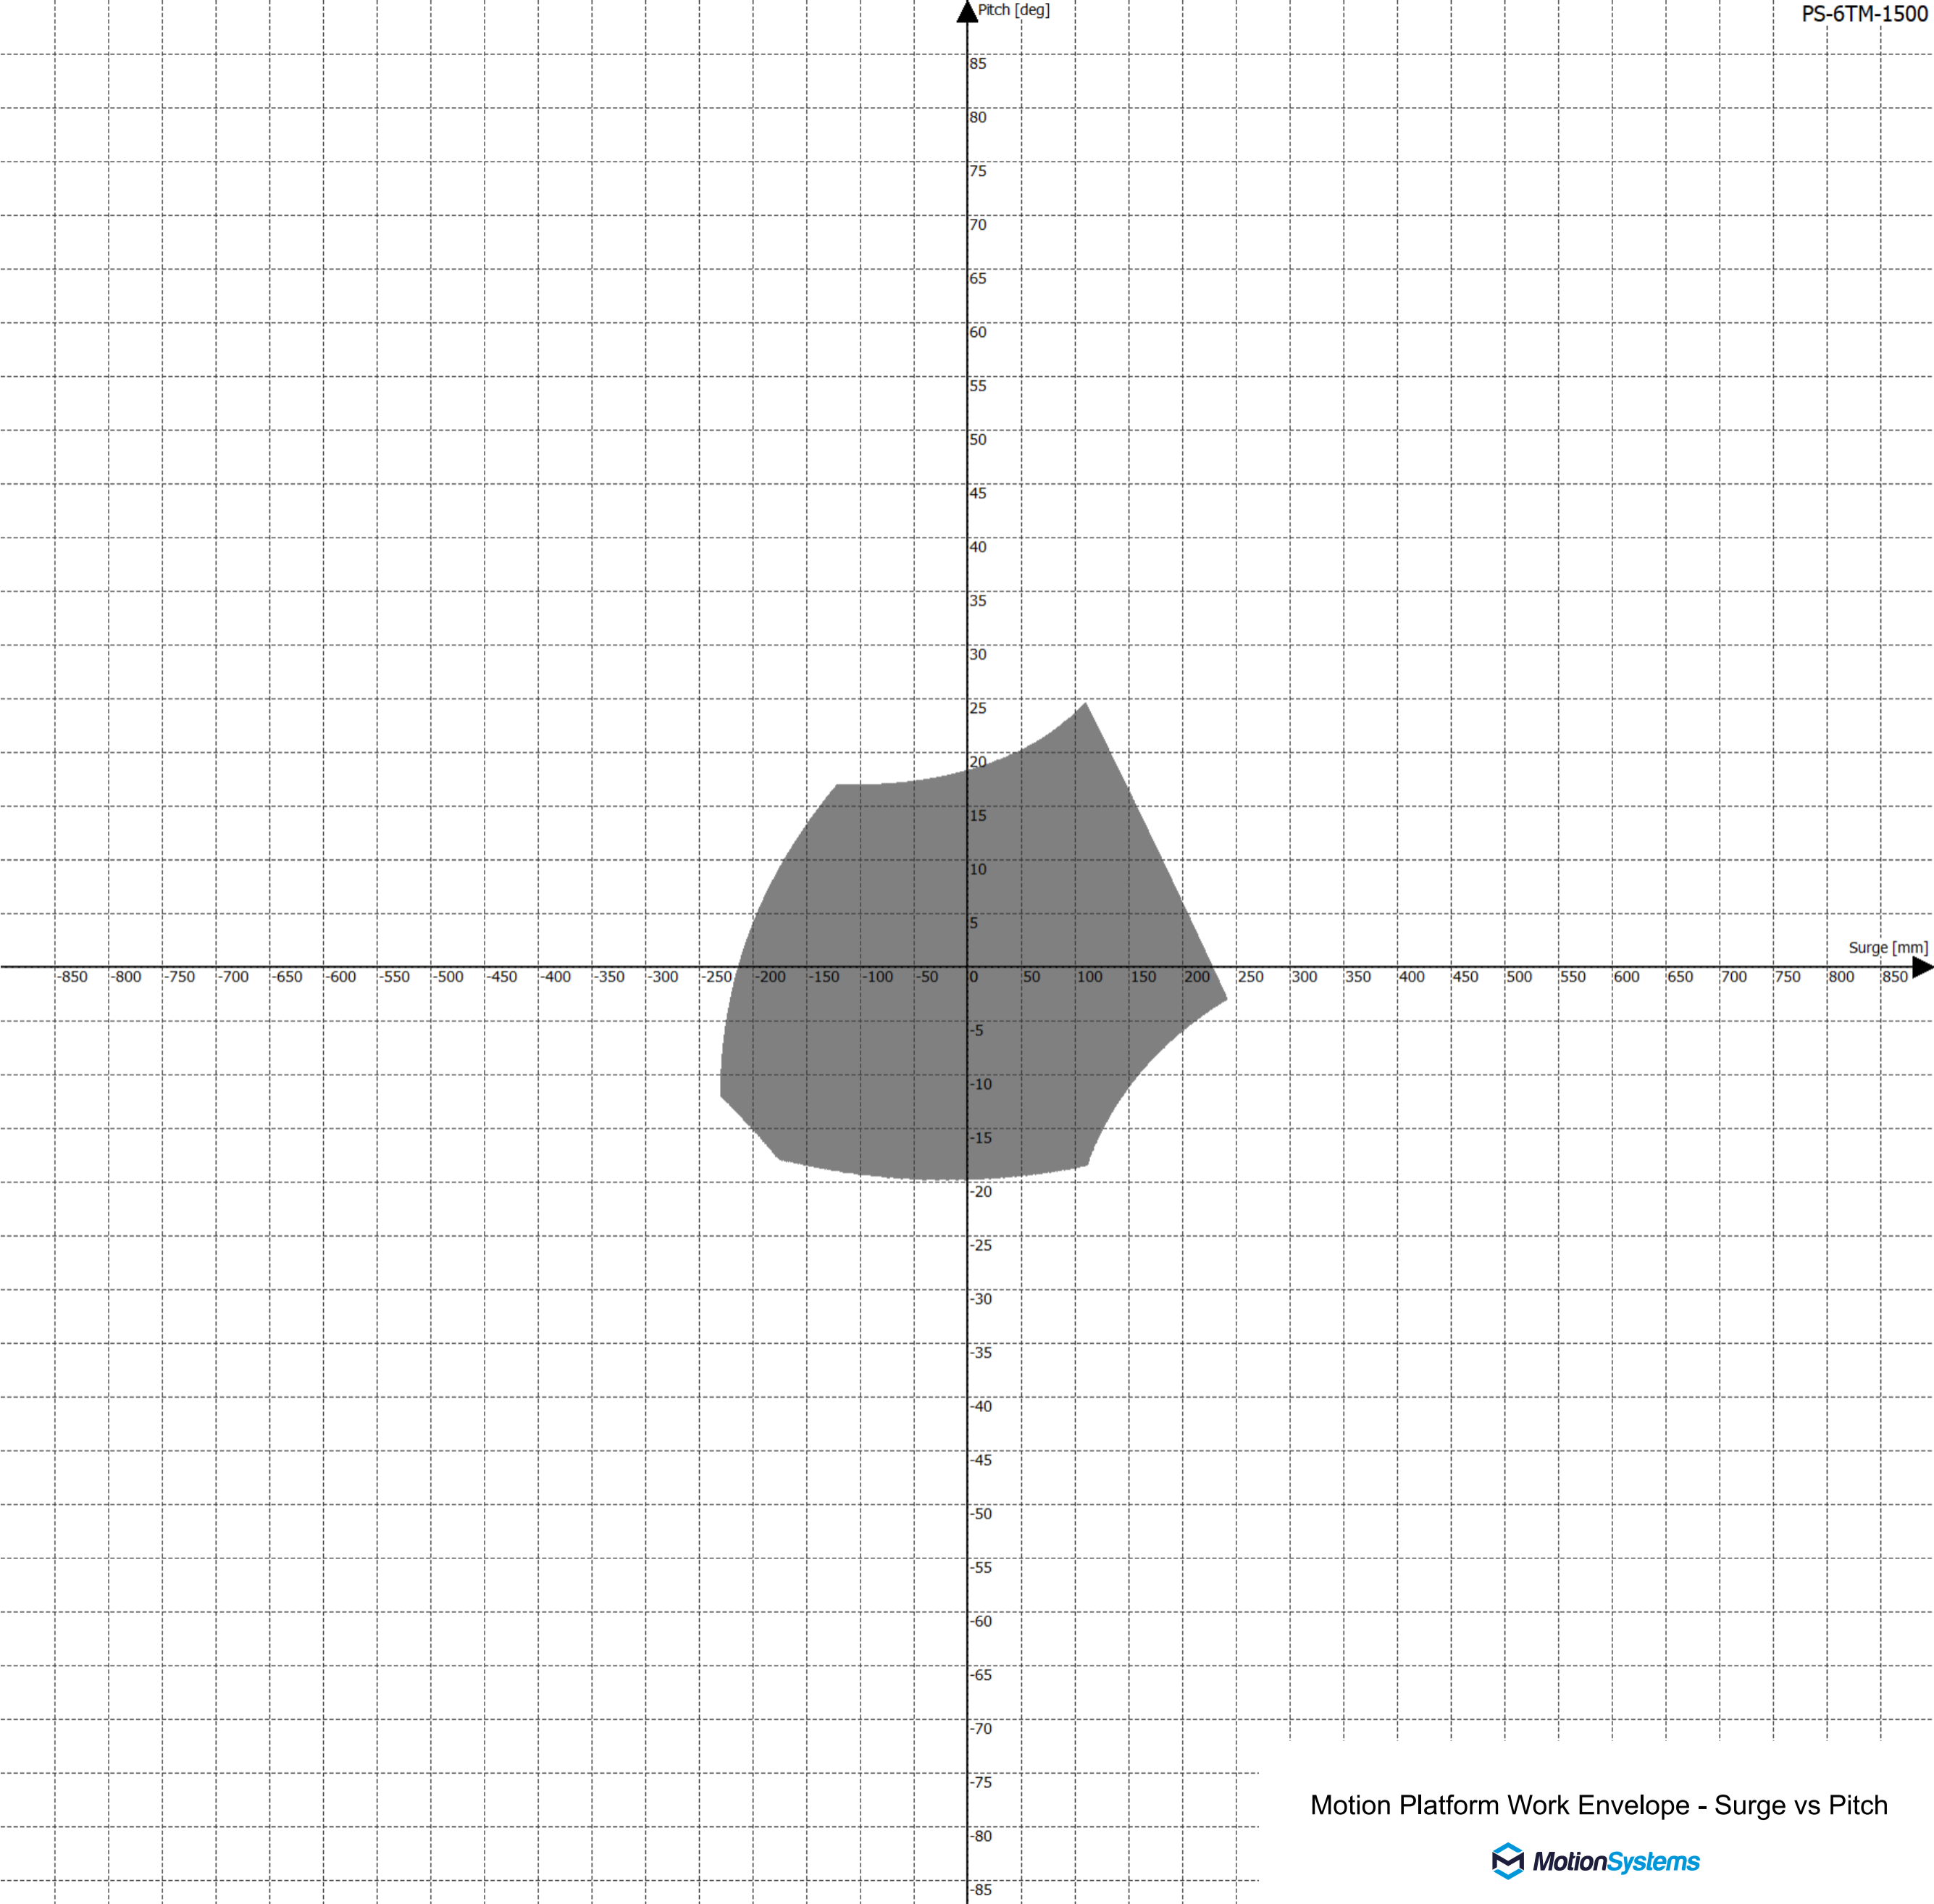

Motion Platform Work Envelope - Surge vs Pitch






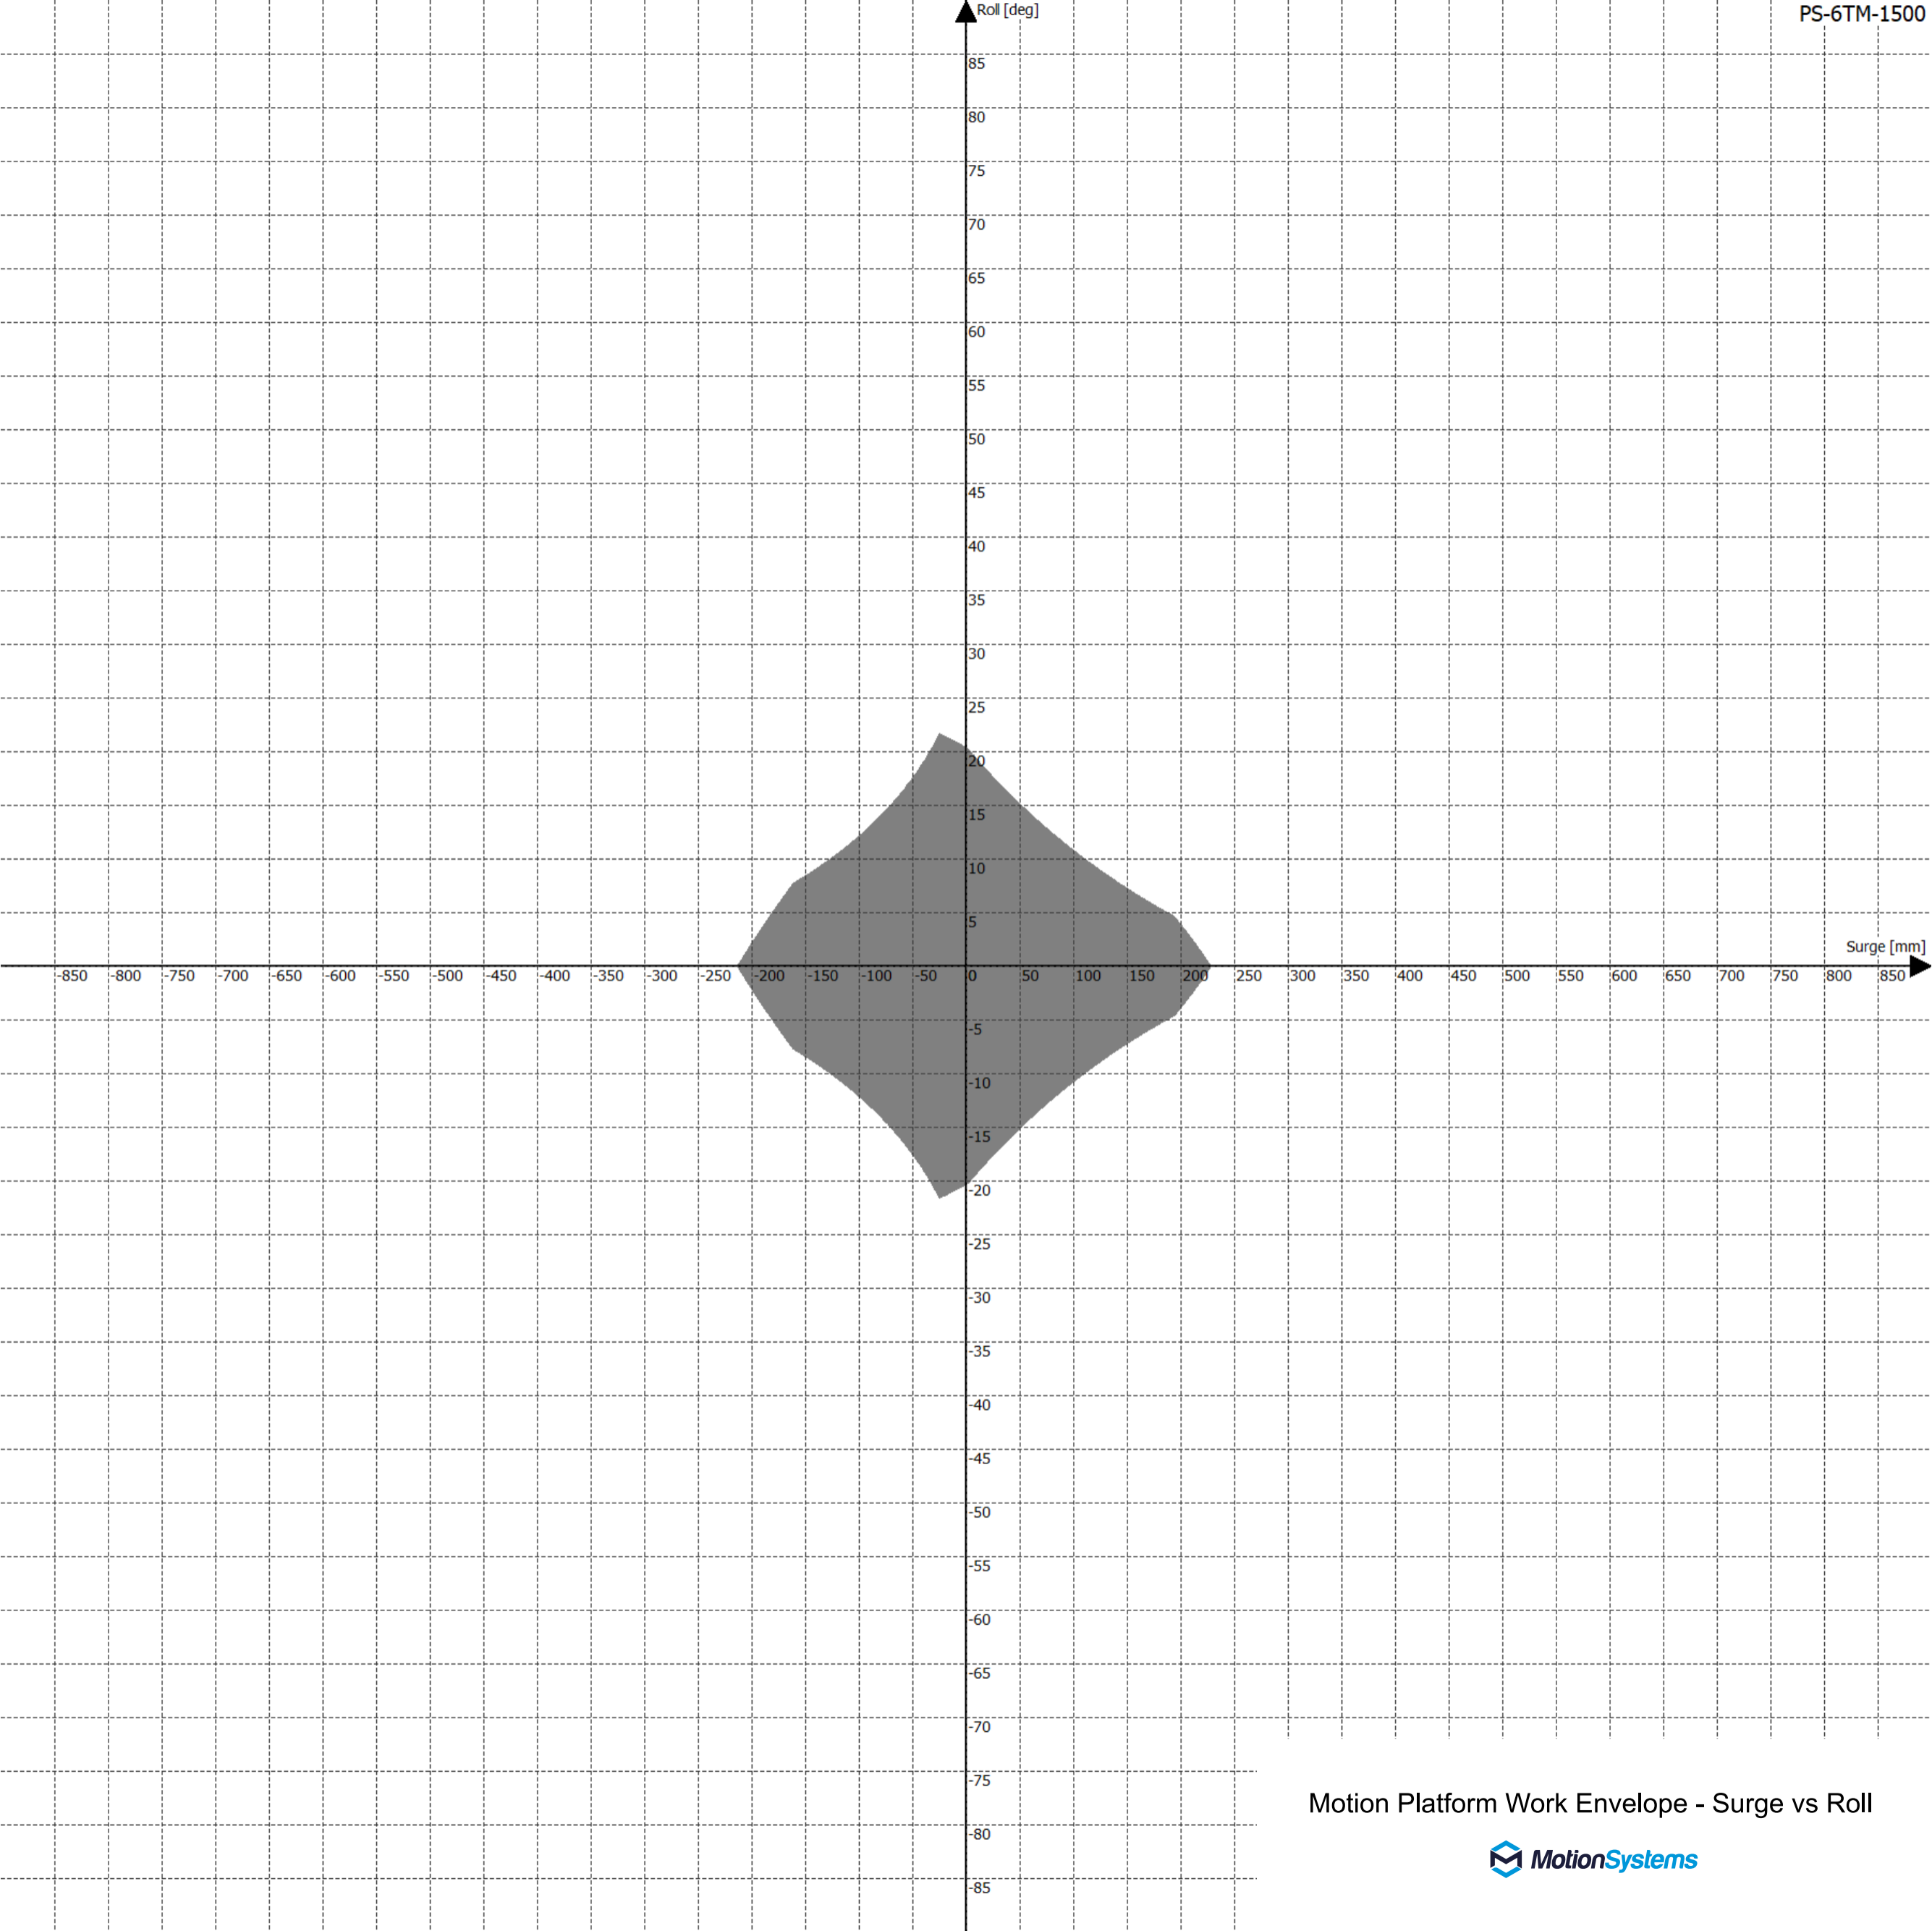


Motion Platform Work Envelope - Surge vs Roll



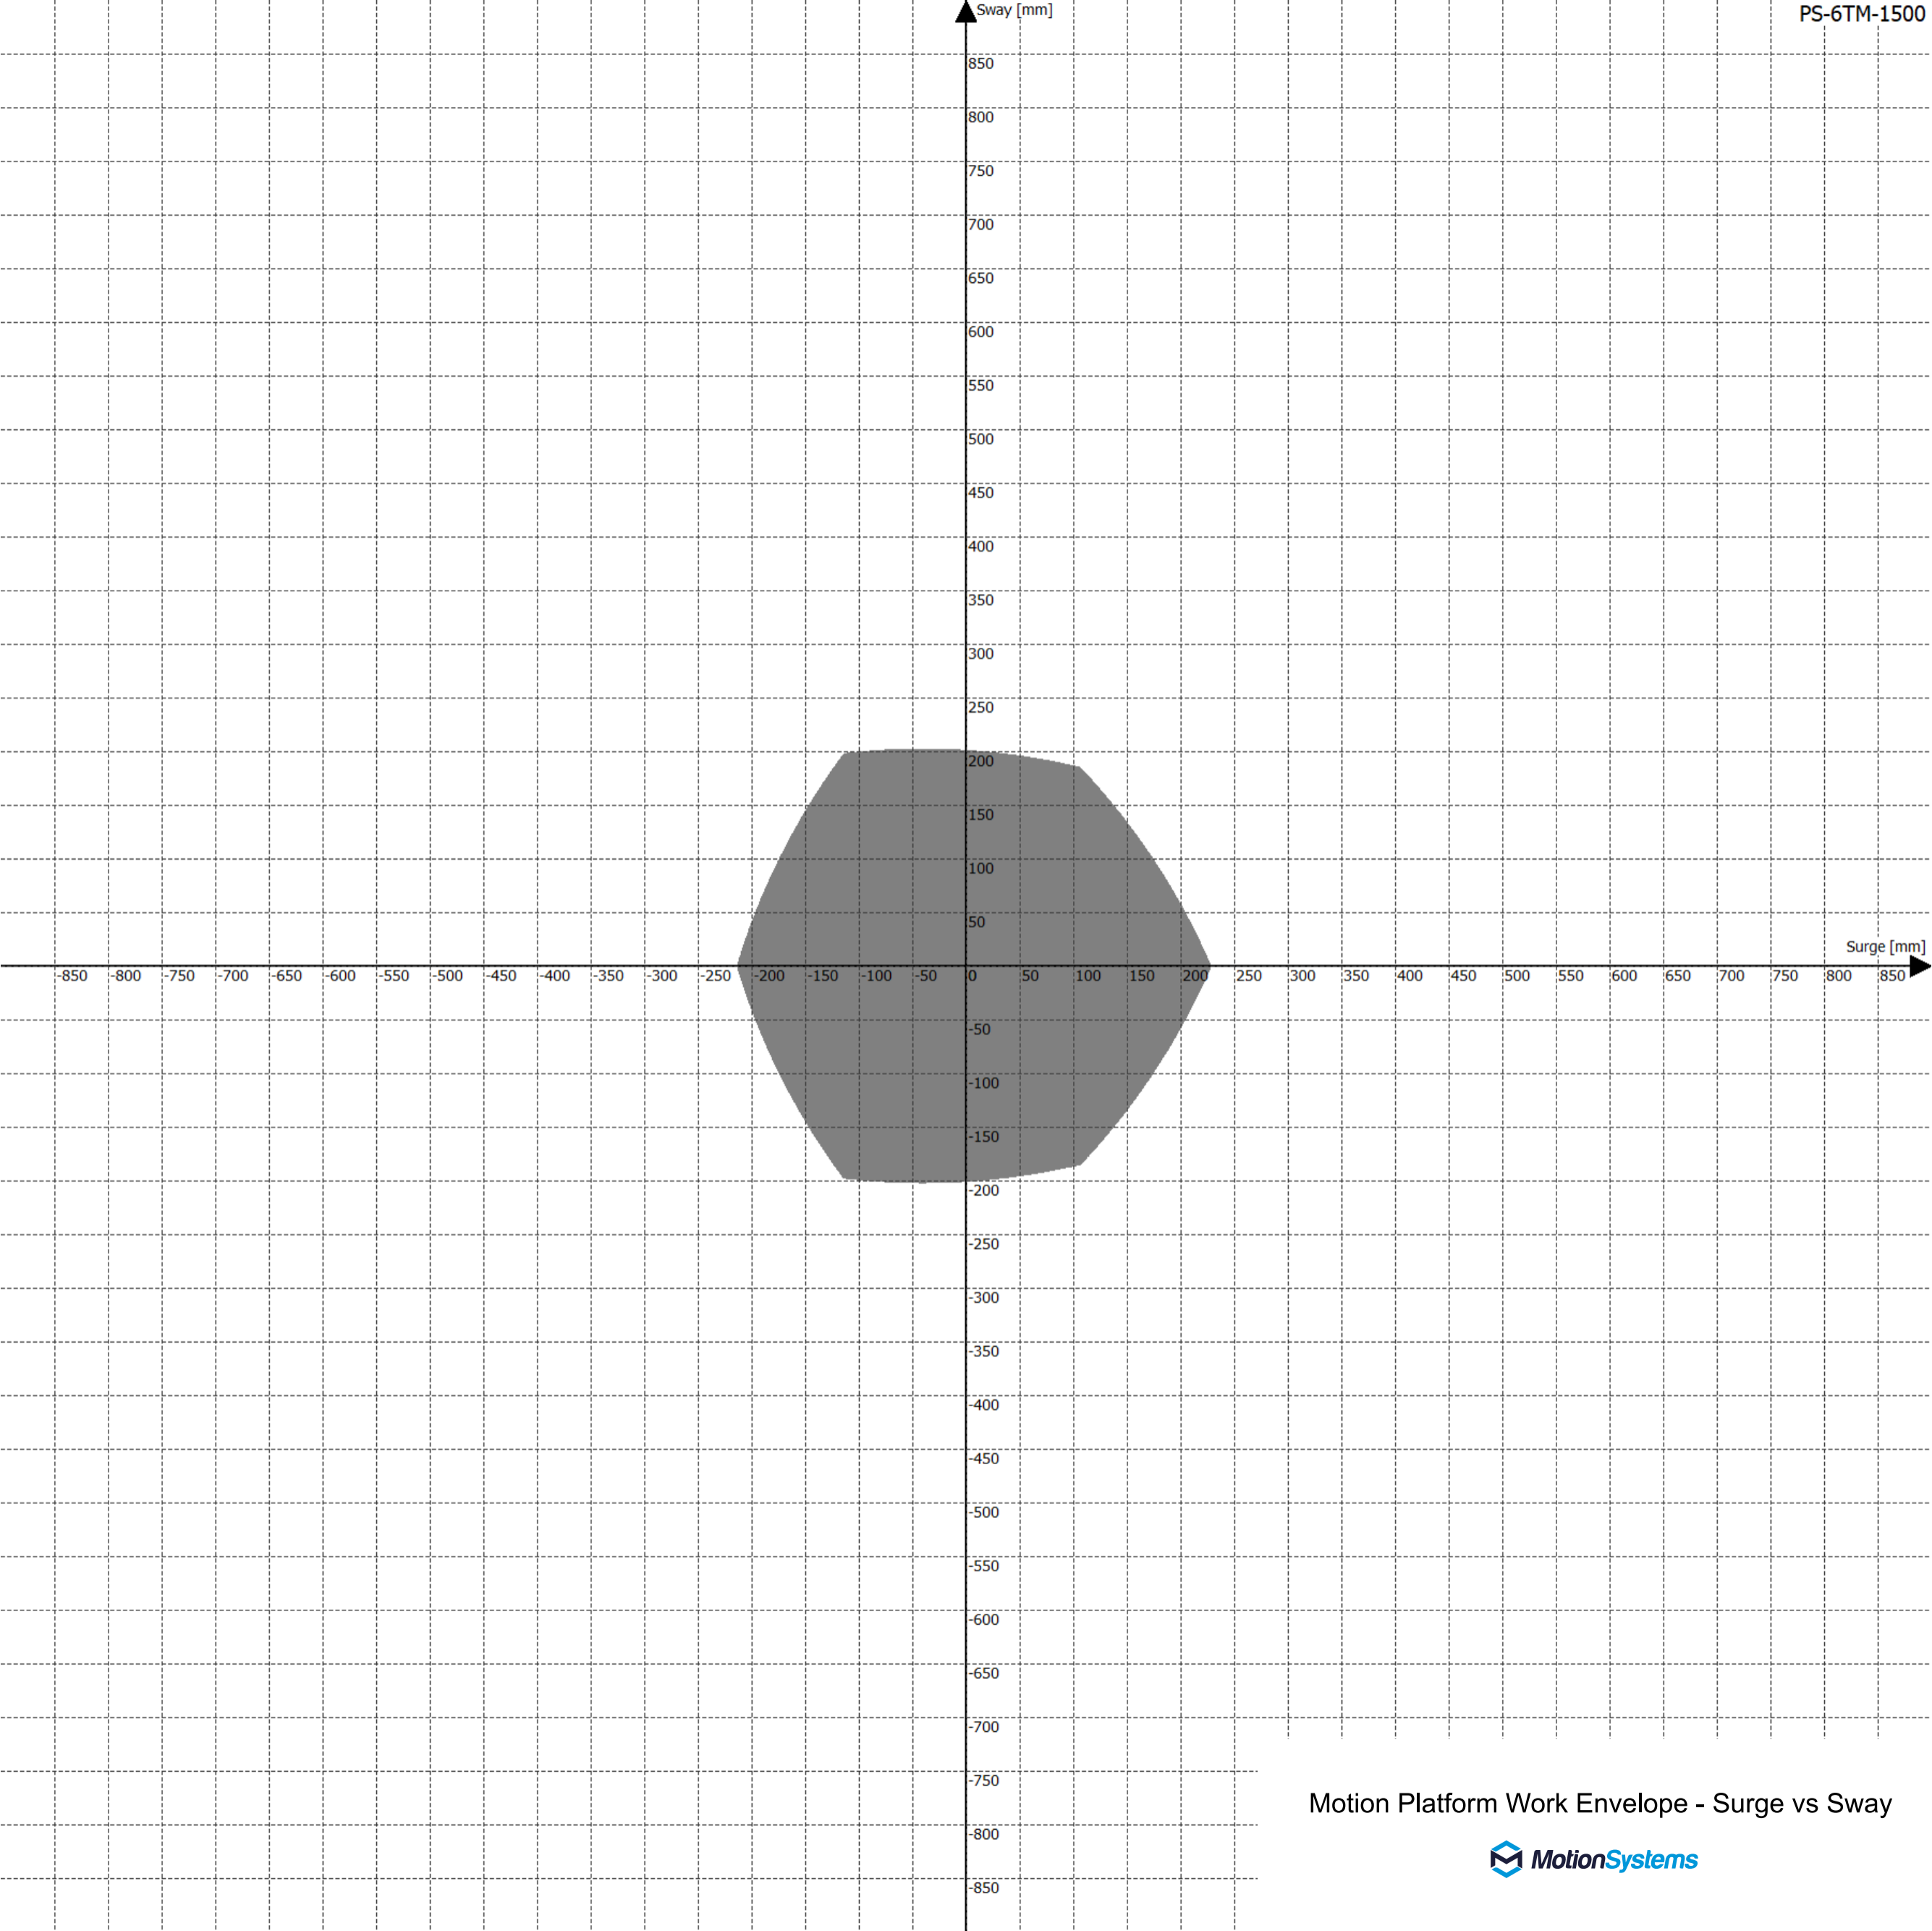


Motion Platform Work Envelope - Surge vs Sway



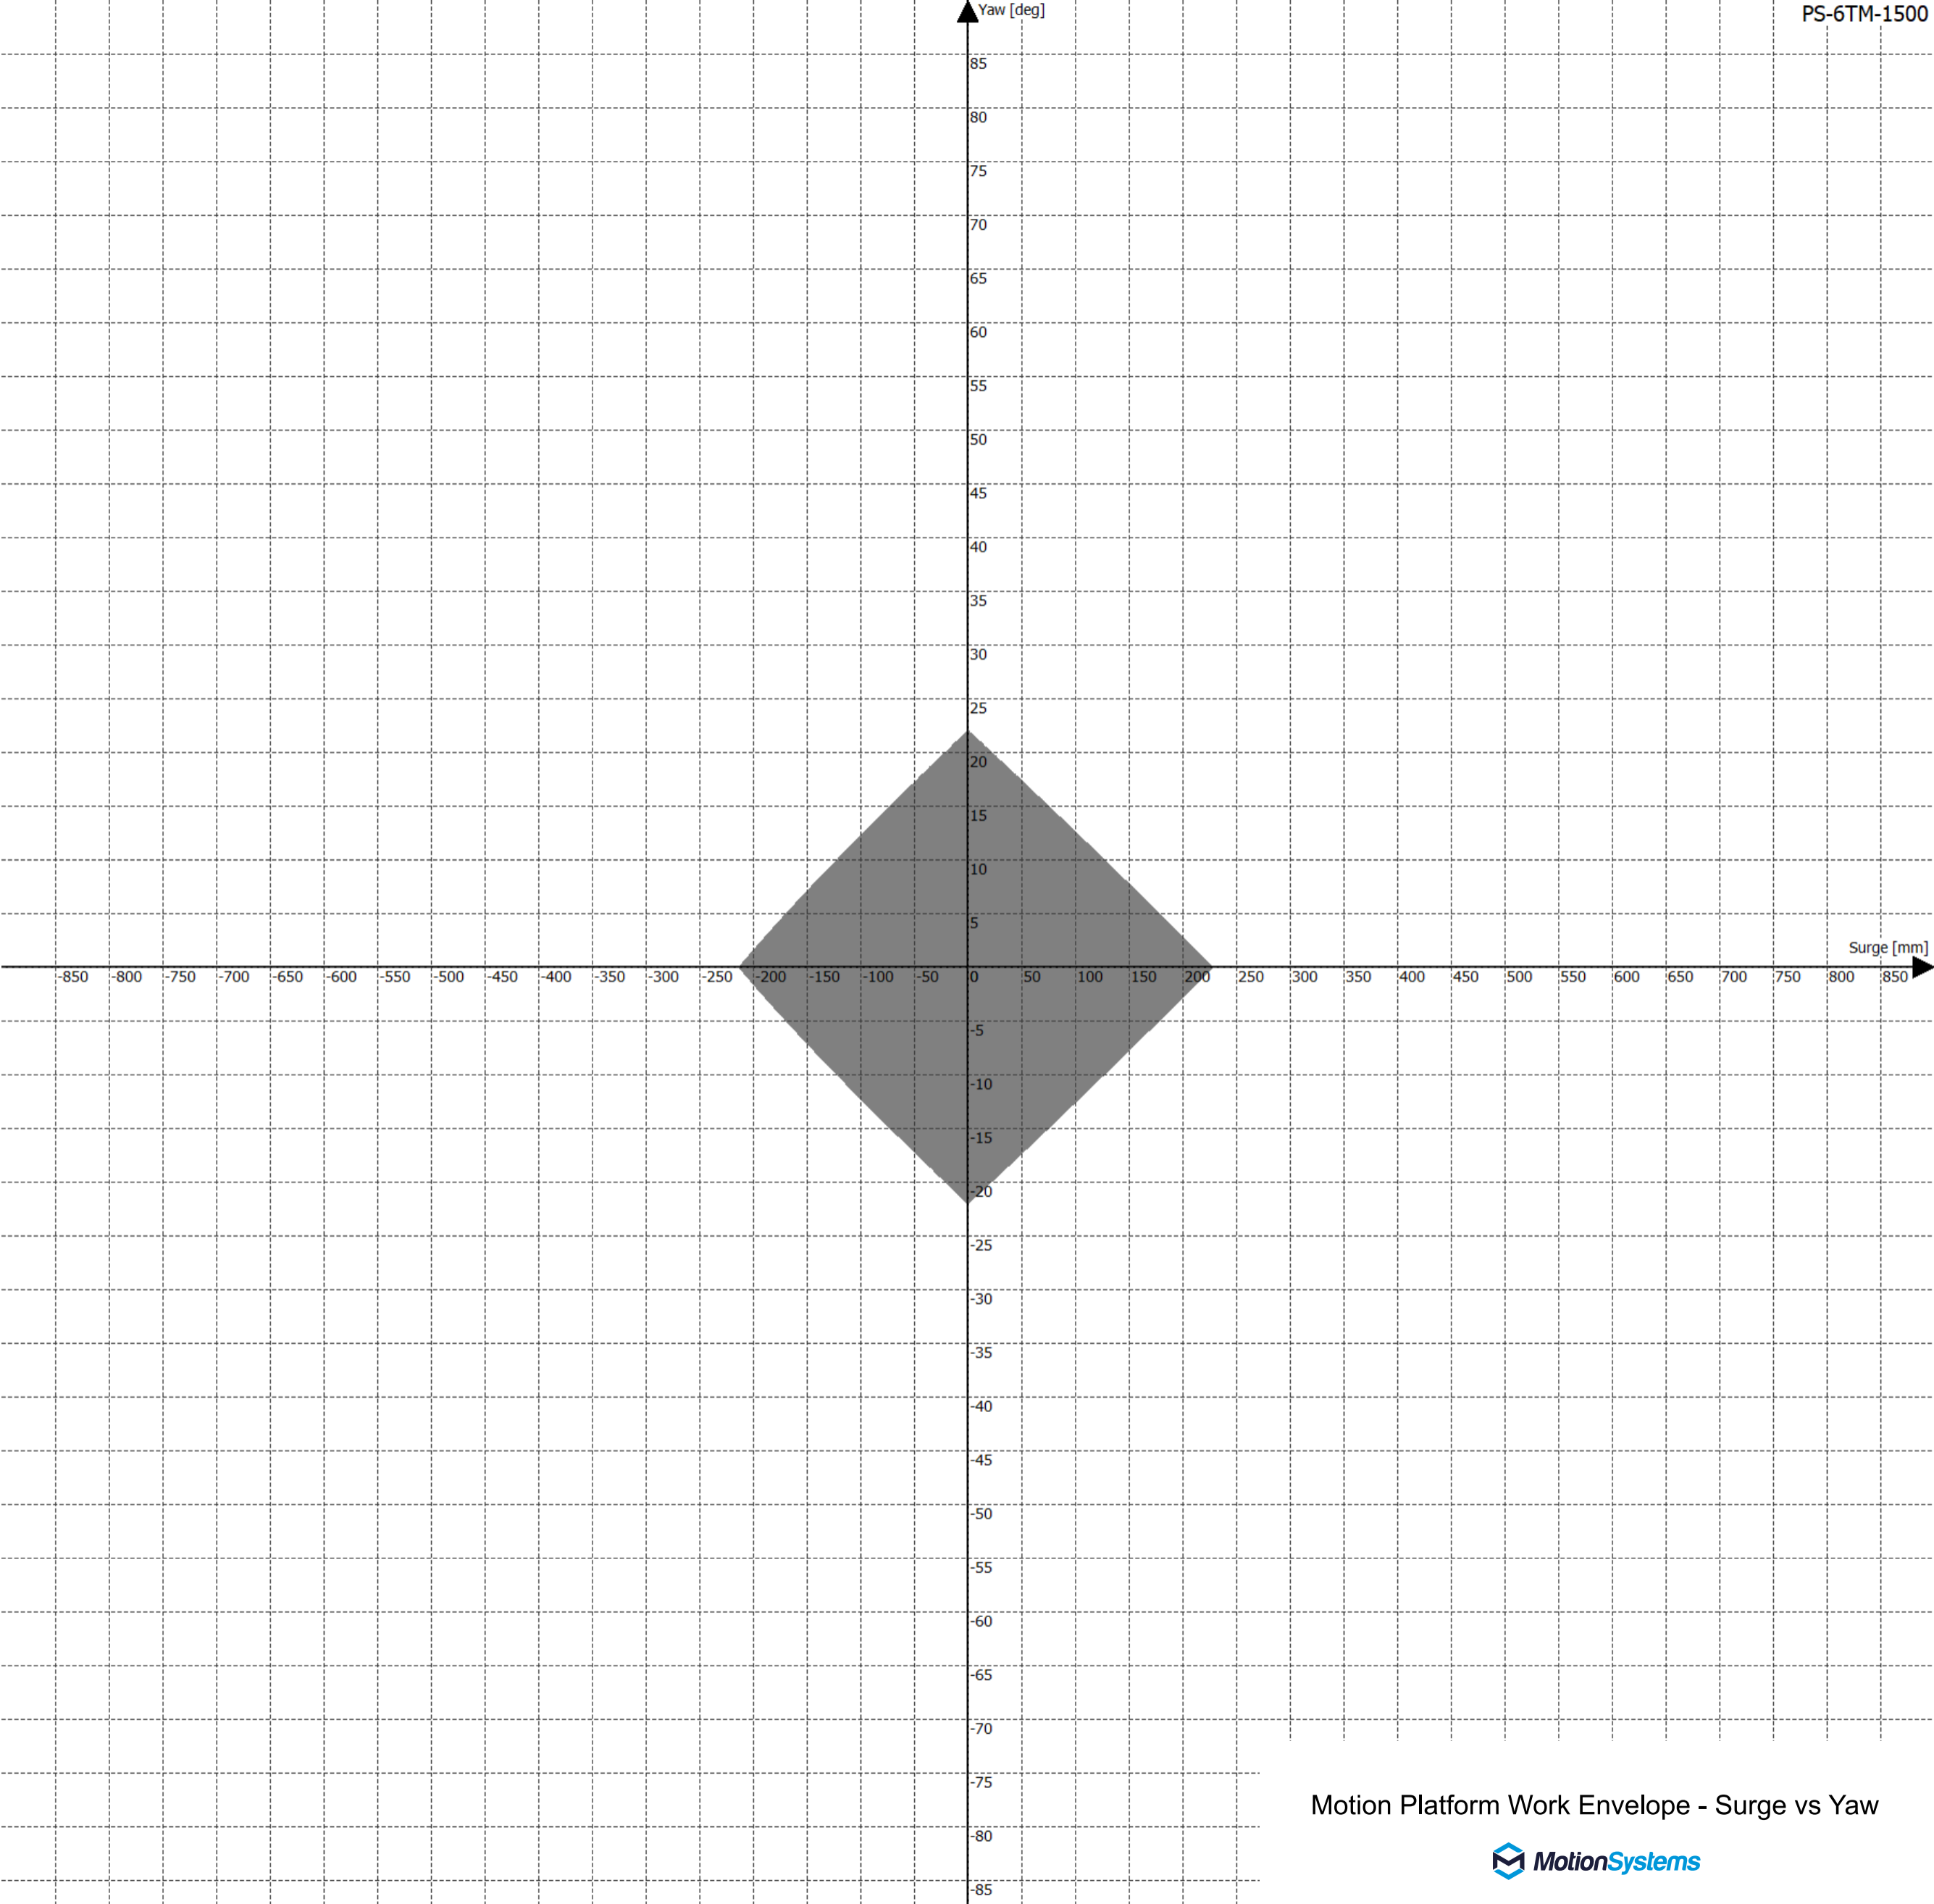


Motion Platform Work Envelope - Surge vs Yaw



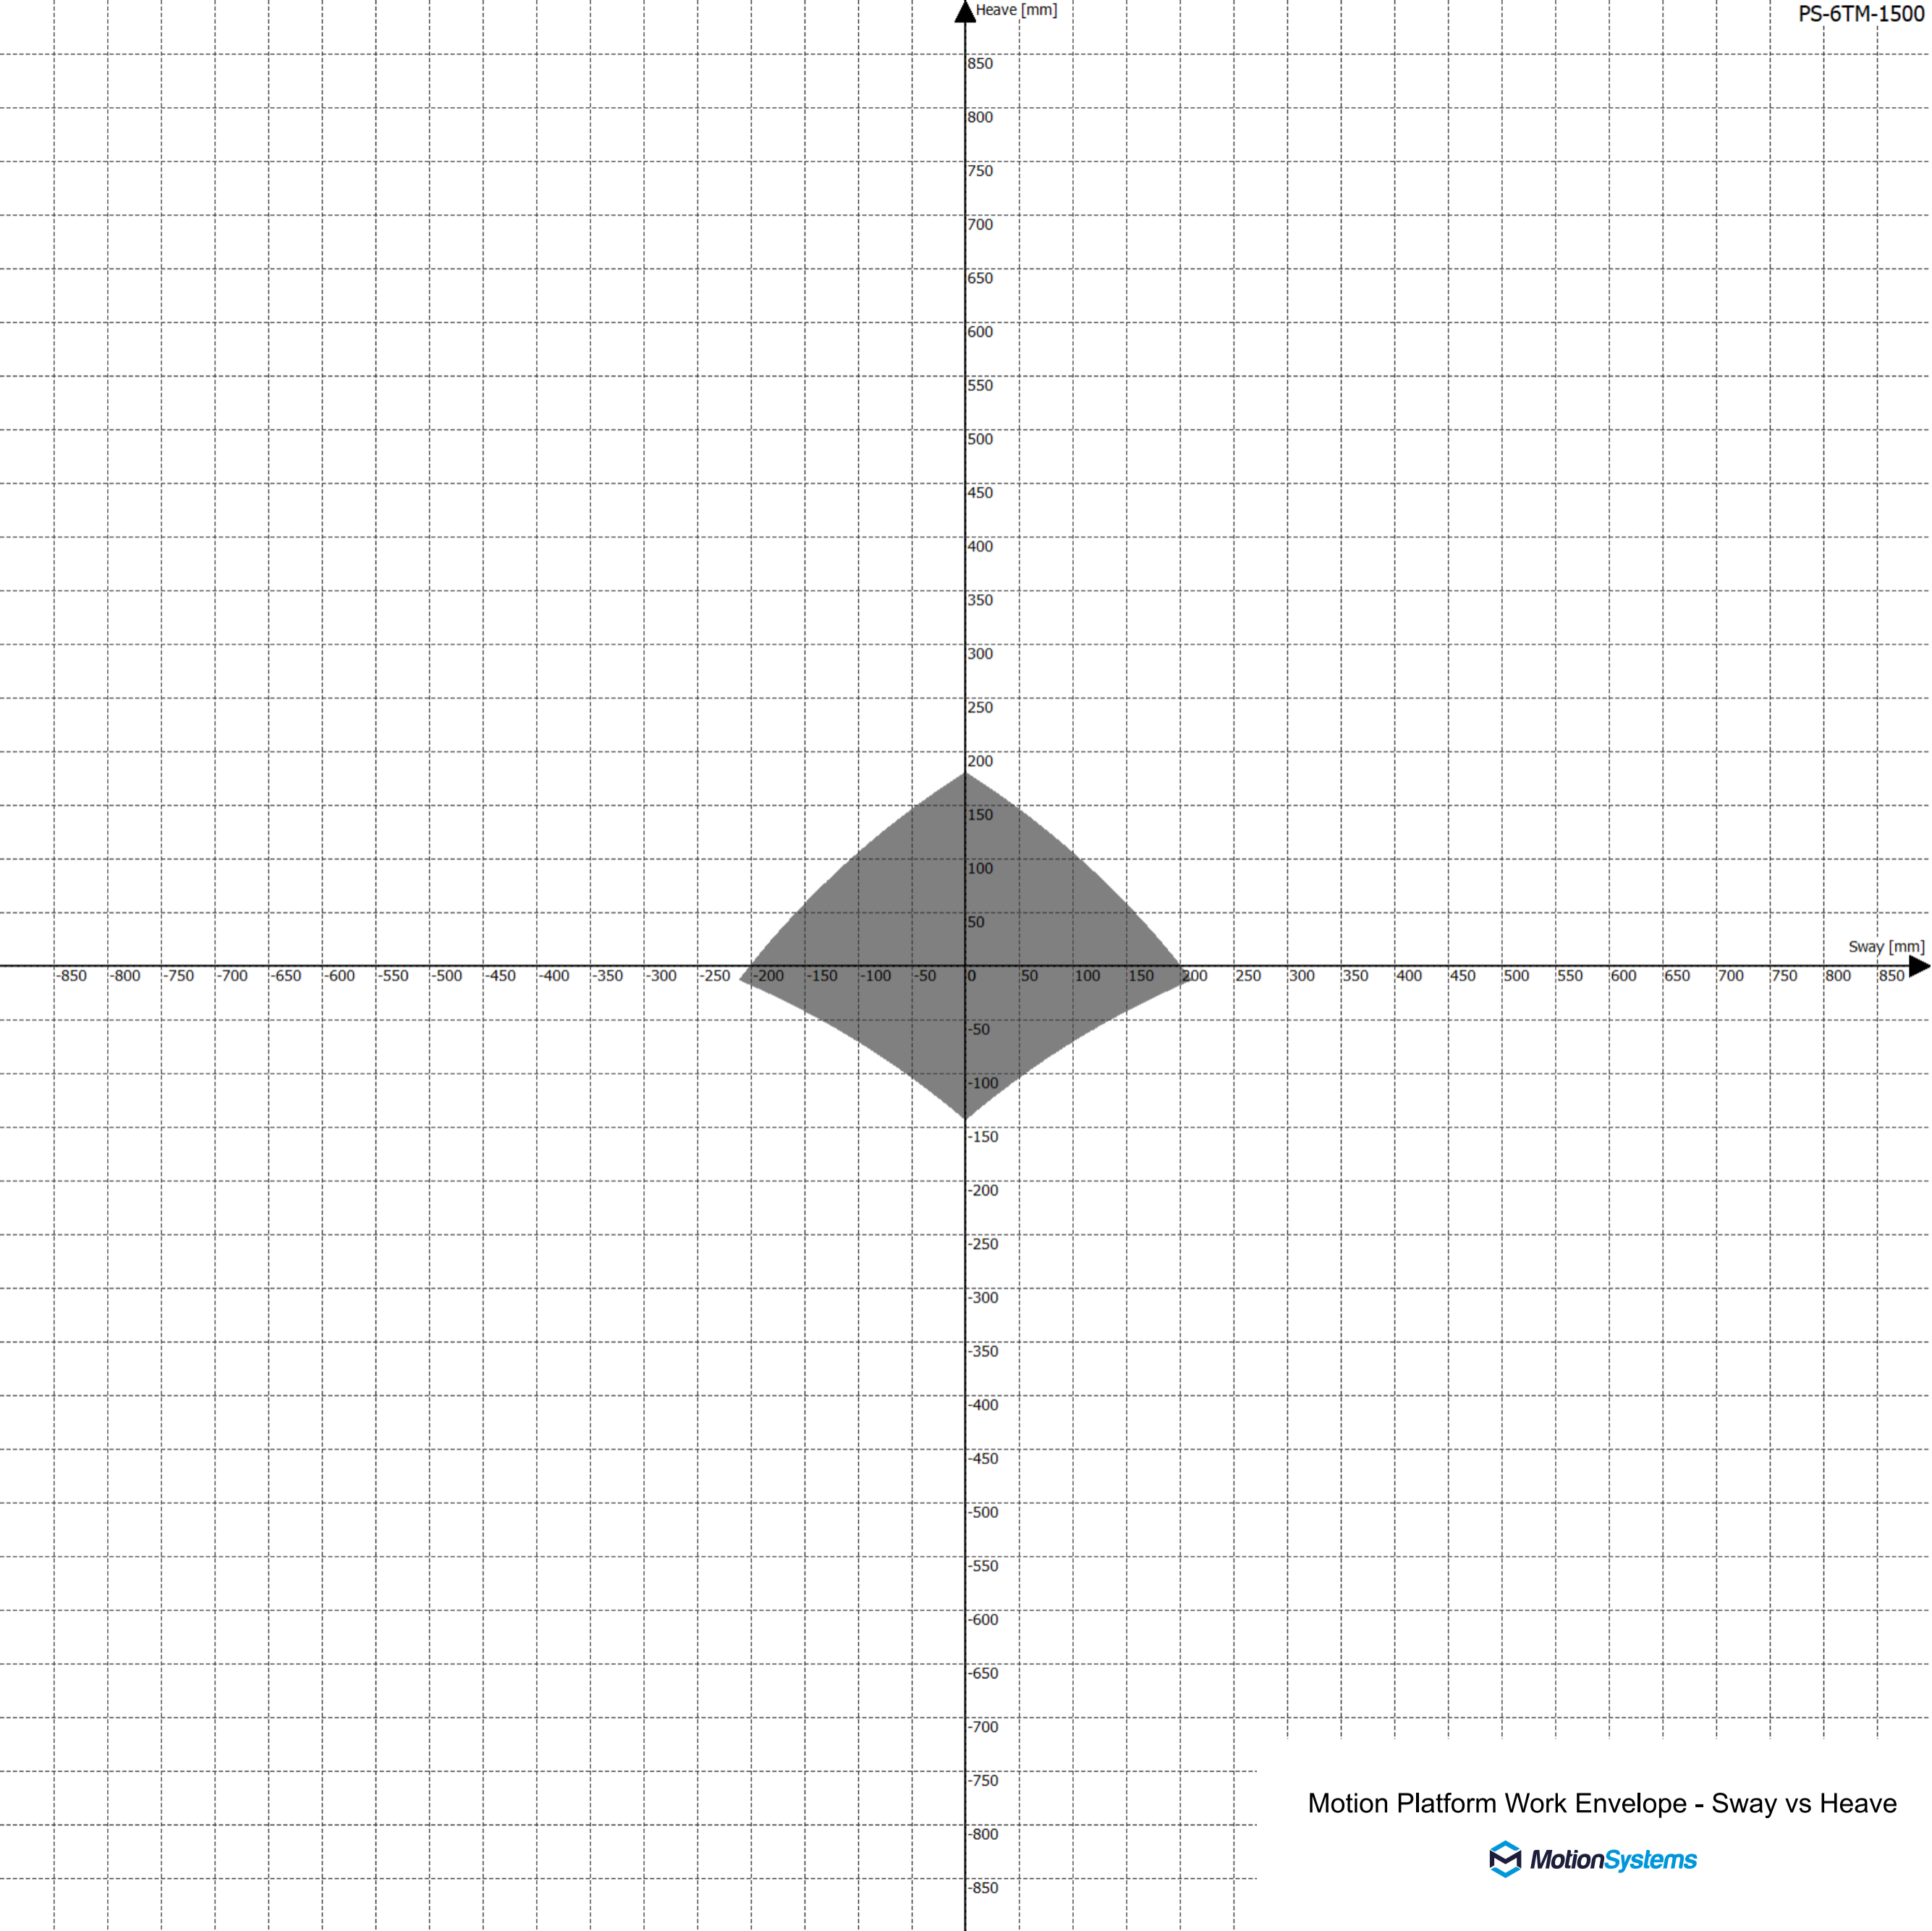


Motion Platform Work Envelope - Sway vs Heave



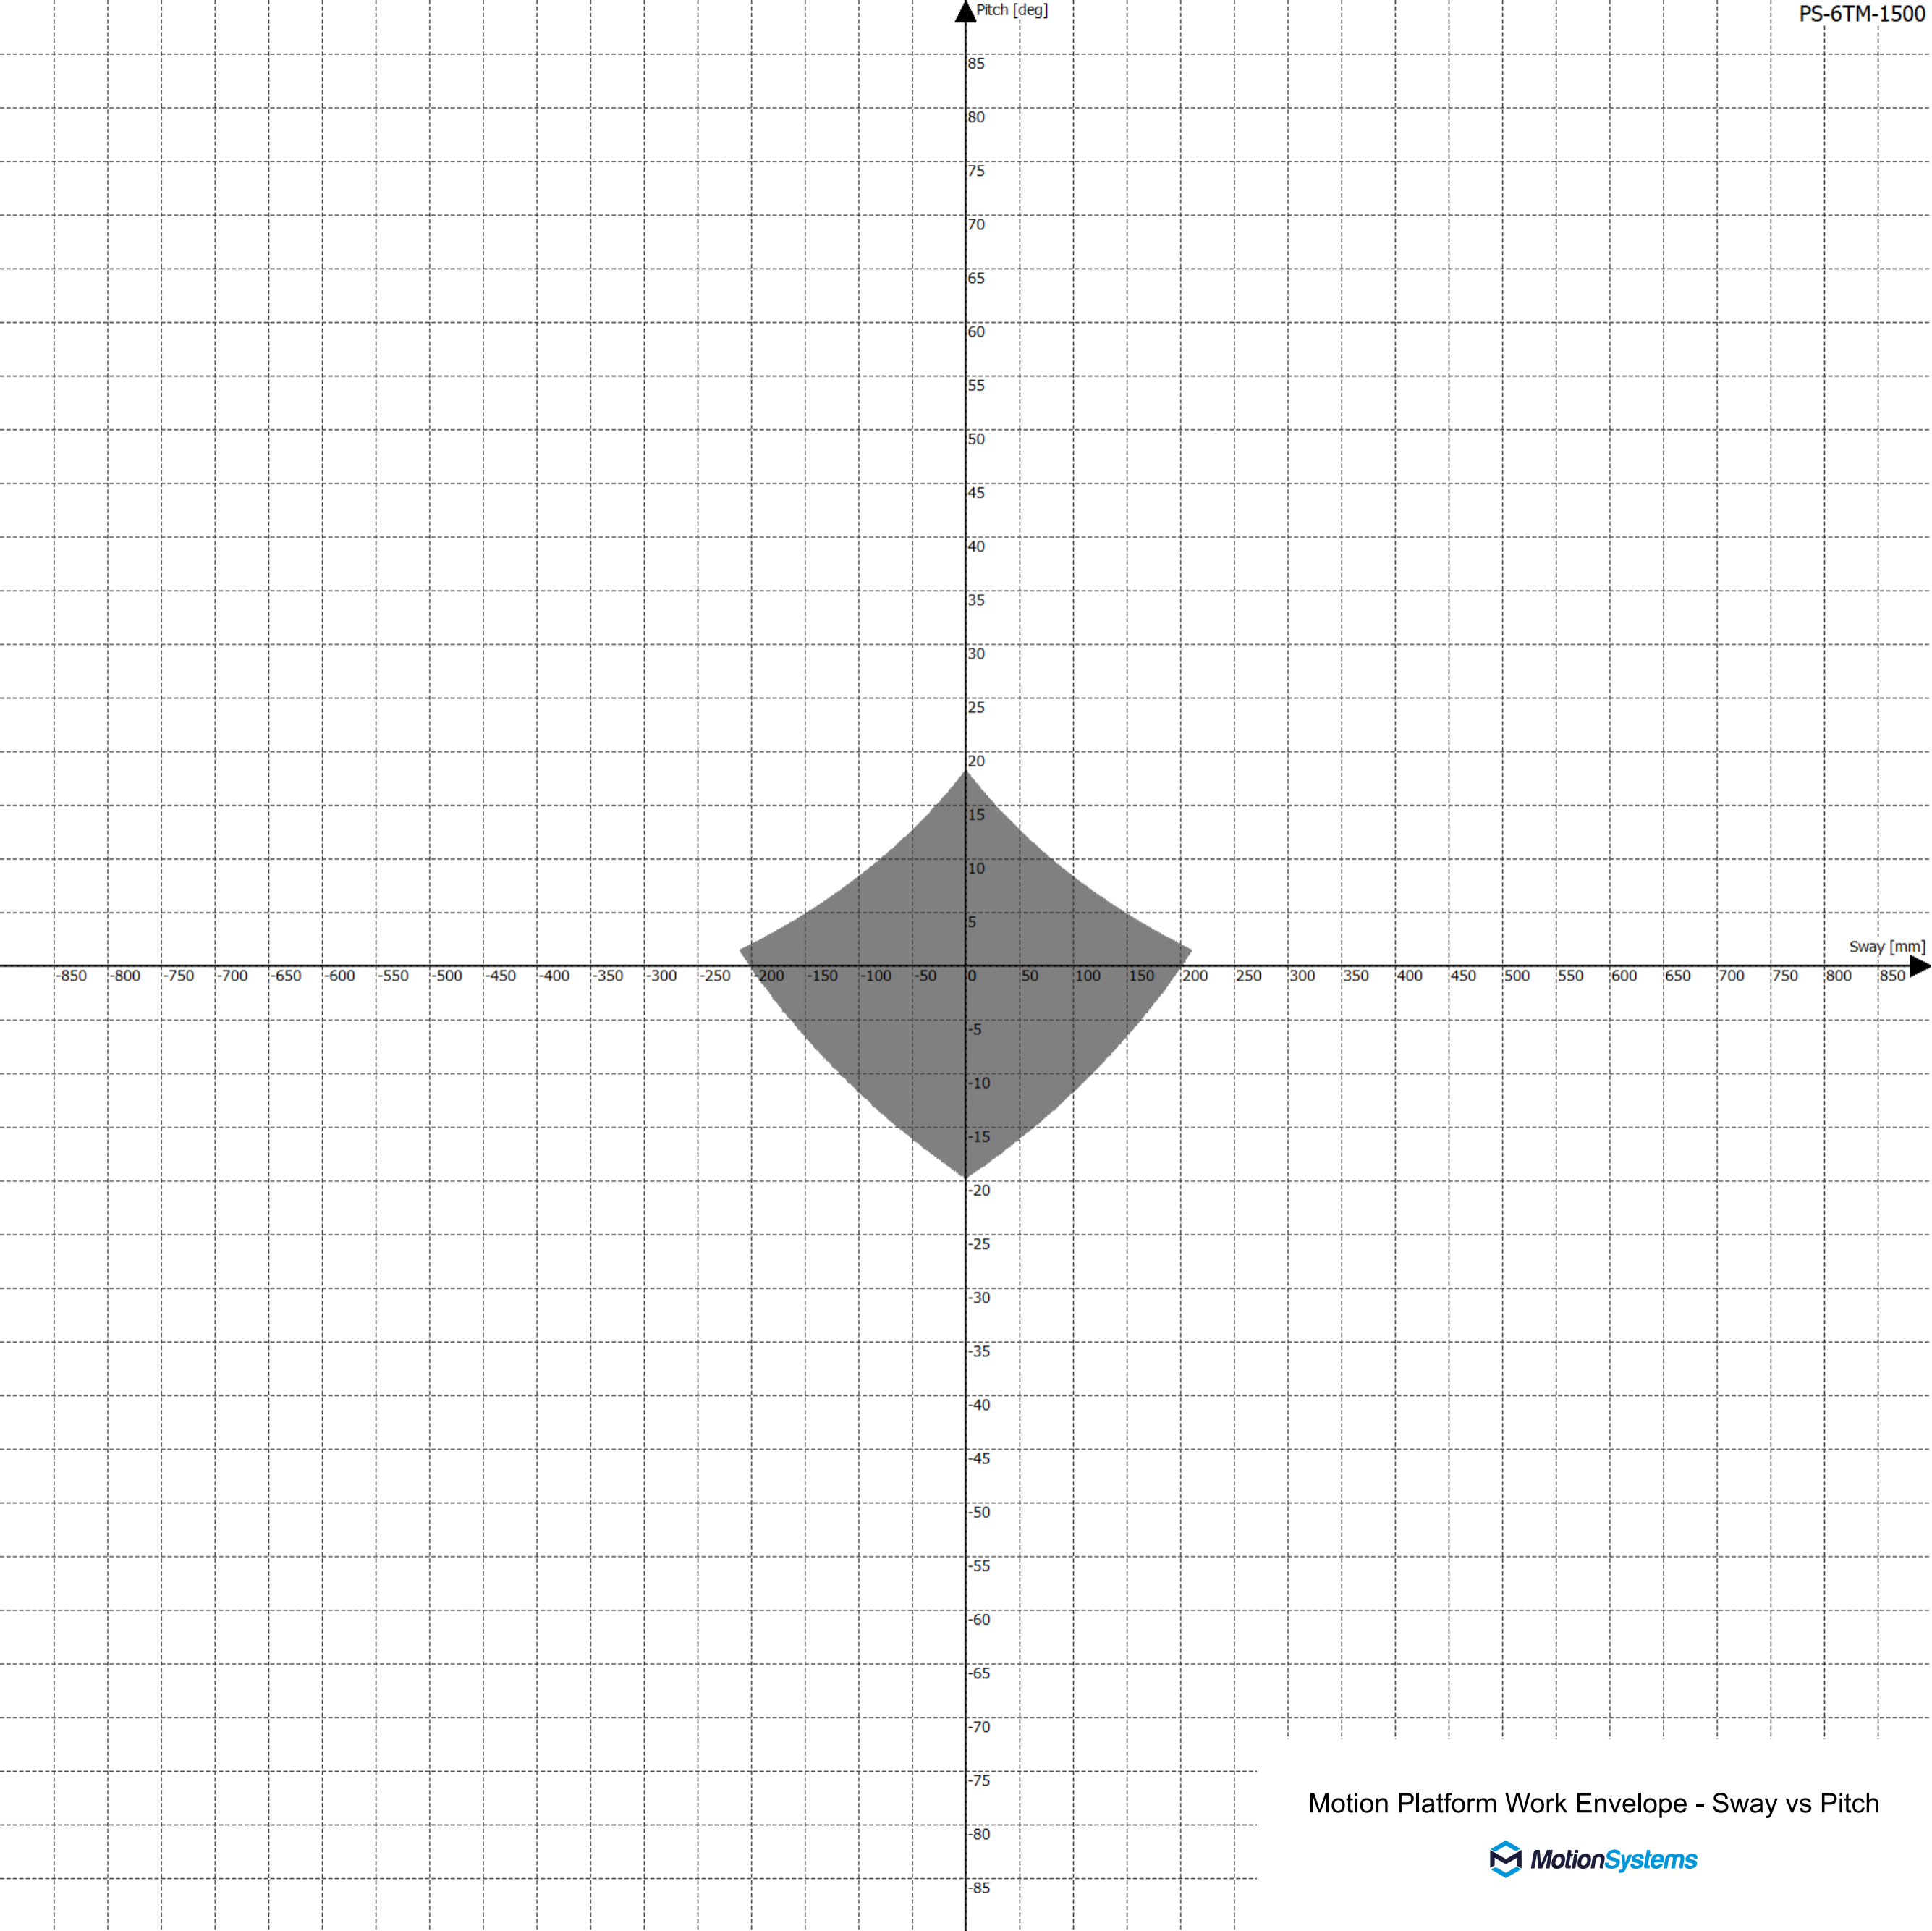


Motion Platform Work Envelope - Sway vs Pitch



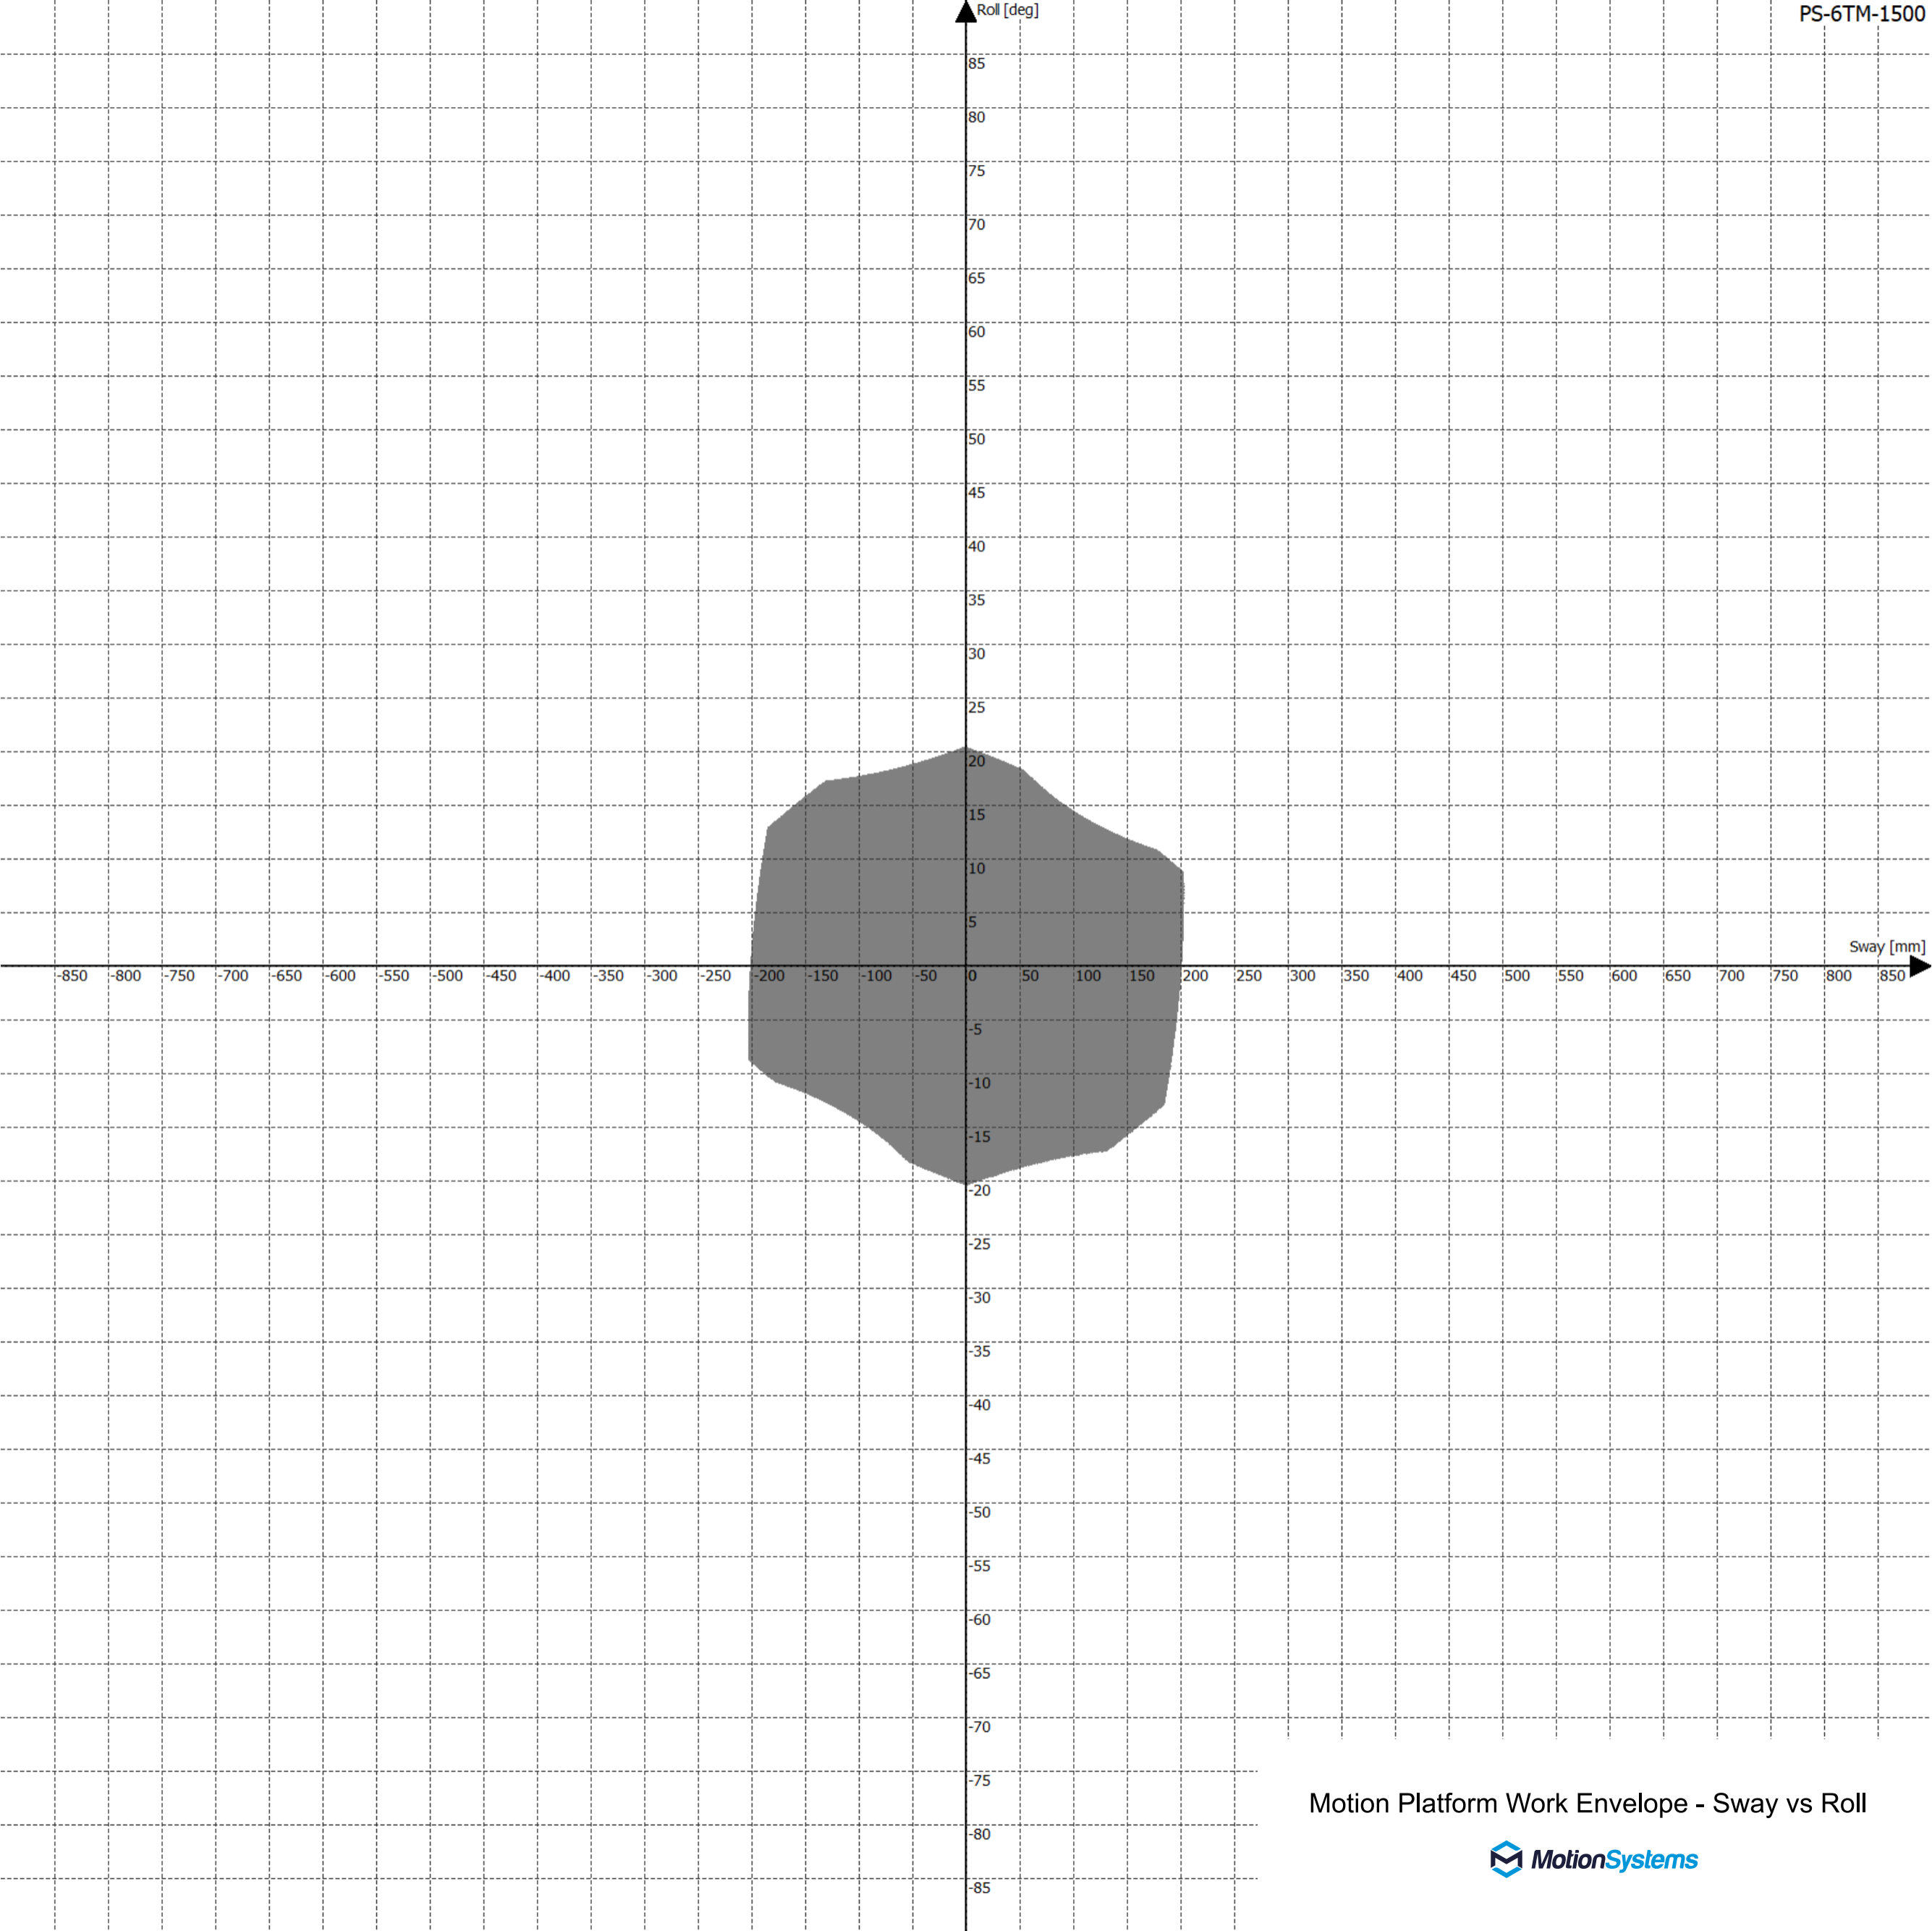

Motion Platform Work Envelope - Sway vs Roll



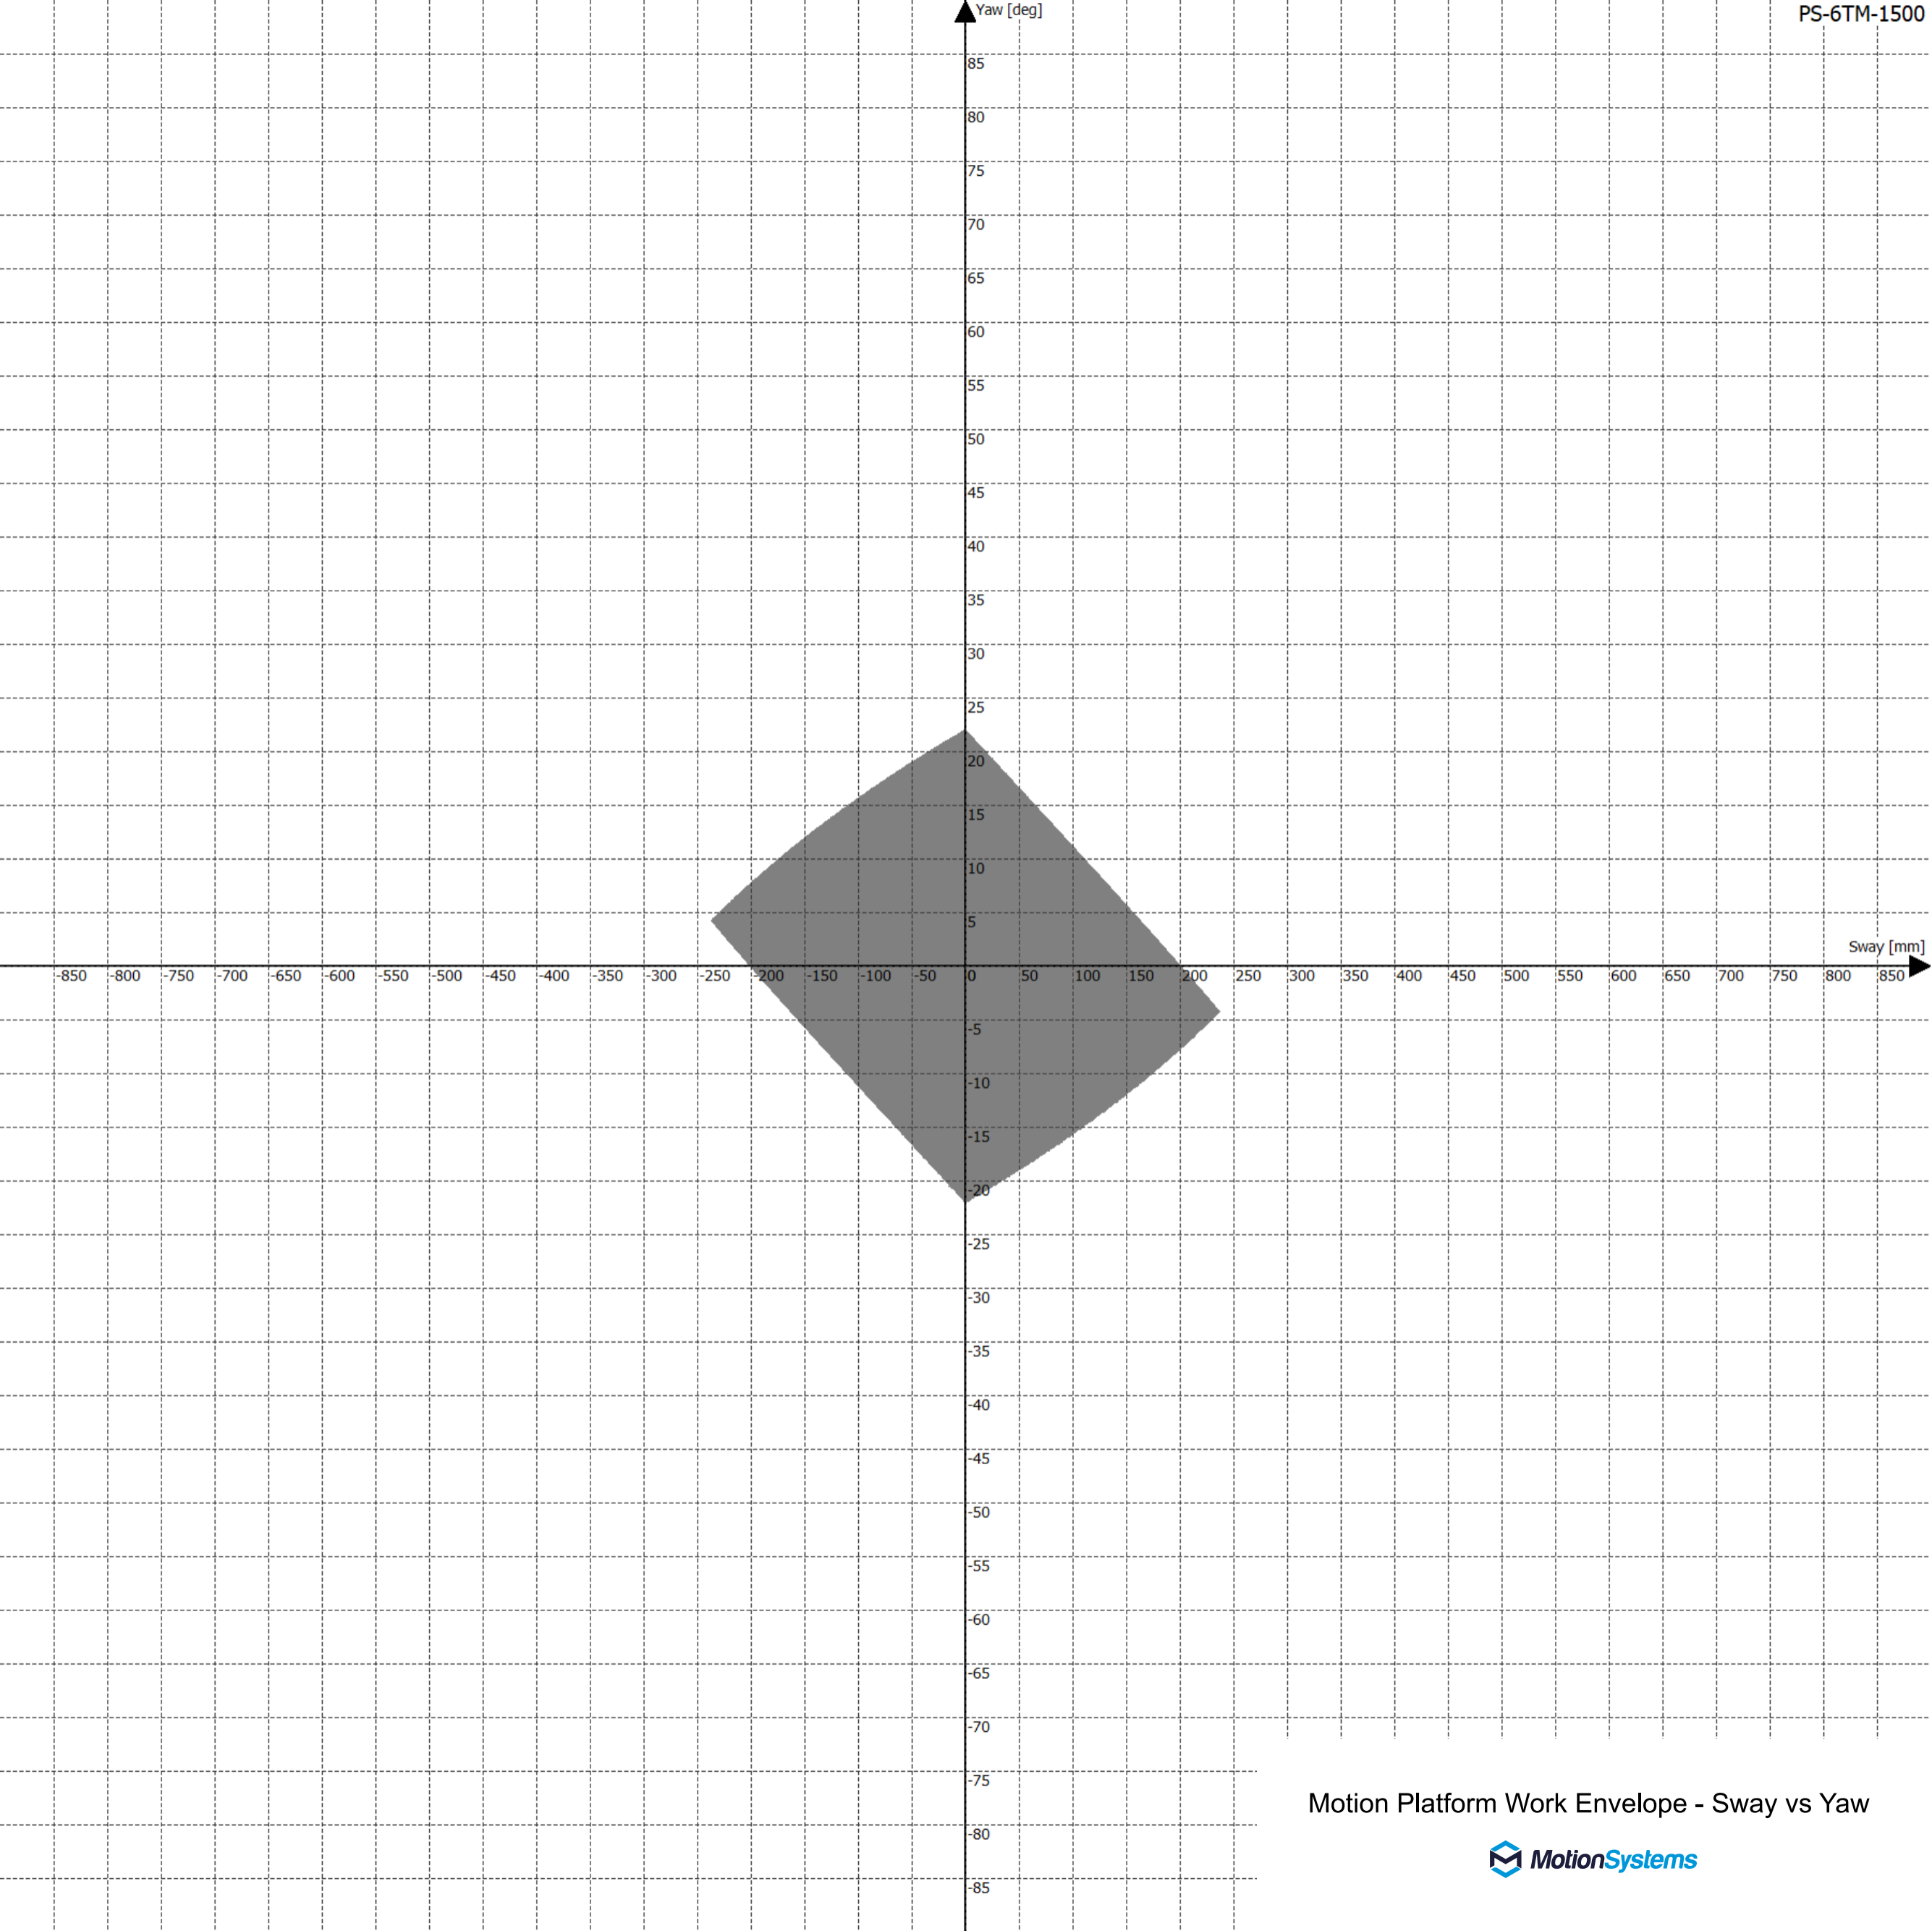

Motion Platform Work Envelope - Sway vs Yaw

