




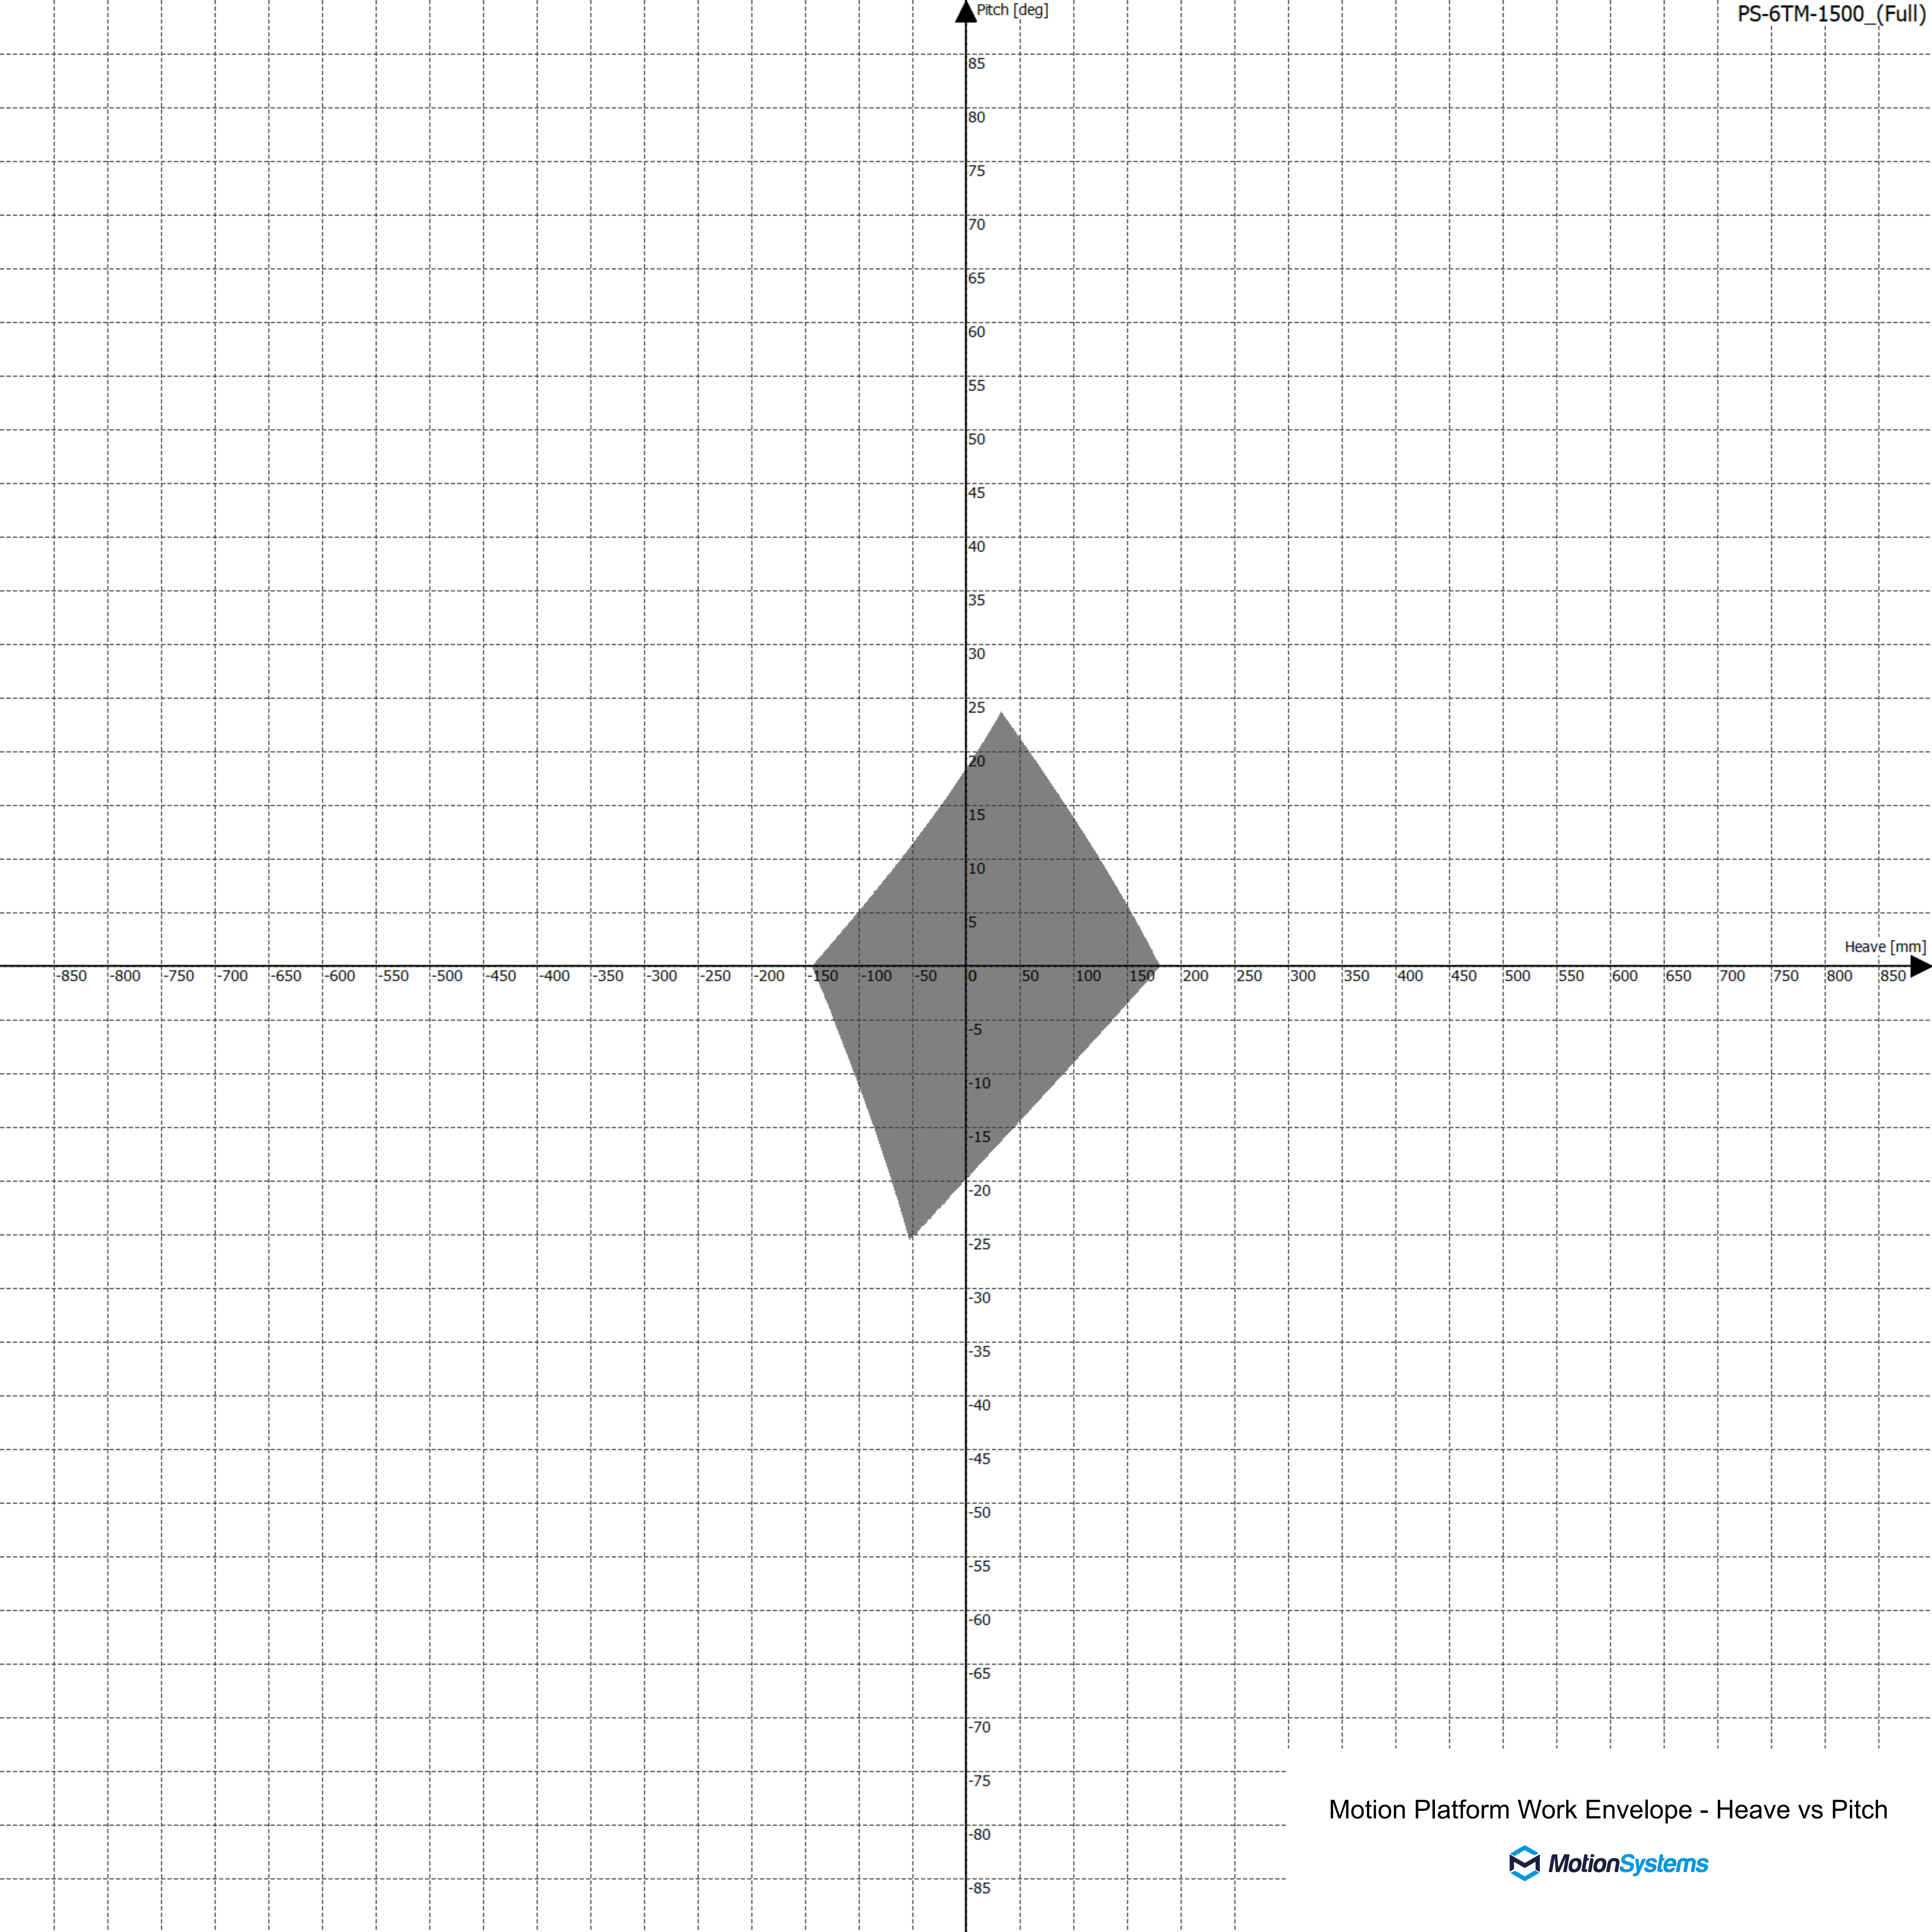


Motion Platform Work Envelope - Heave vs Pitch

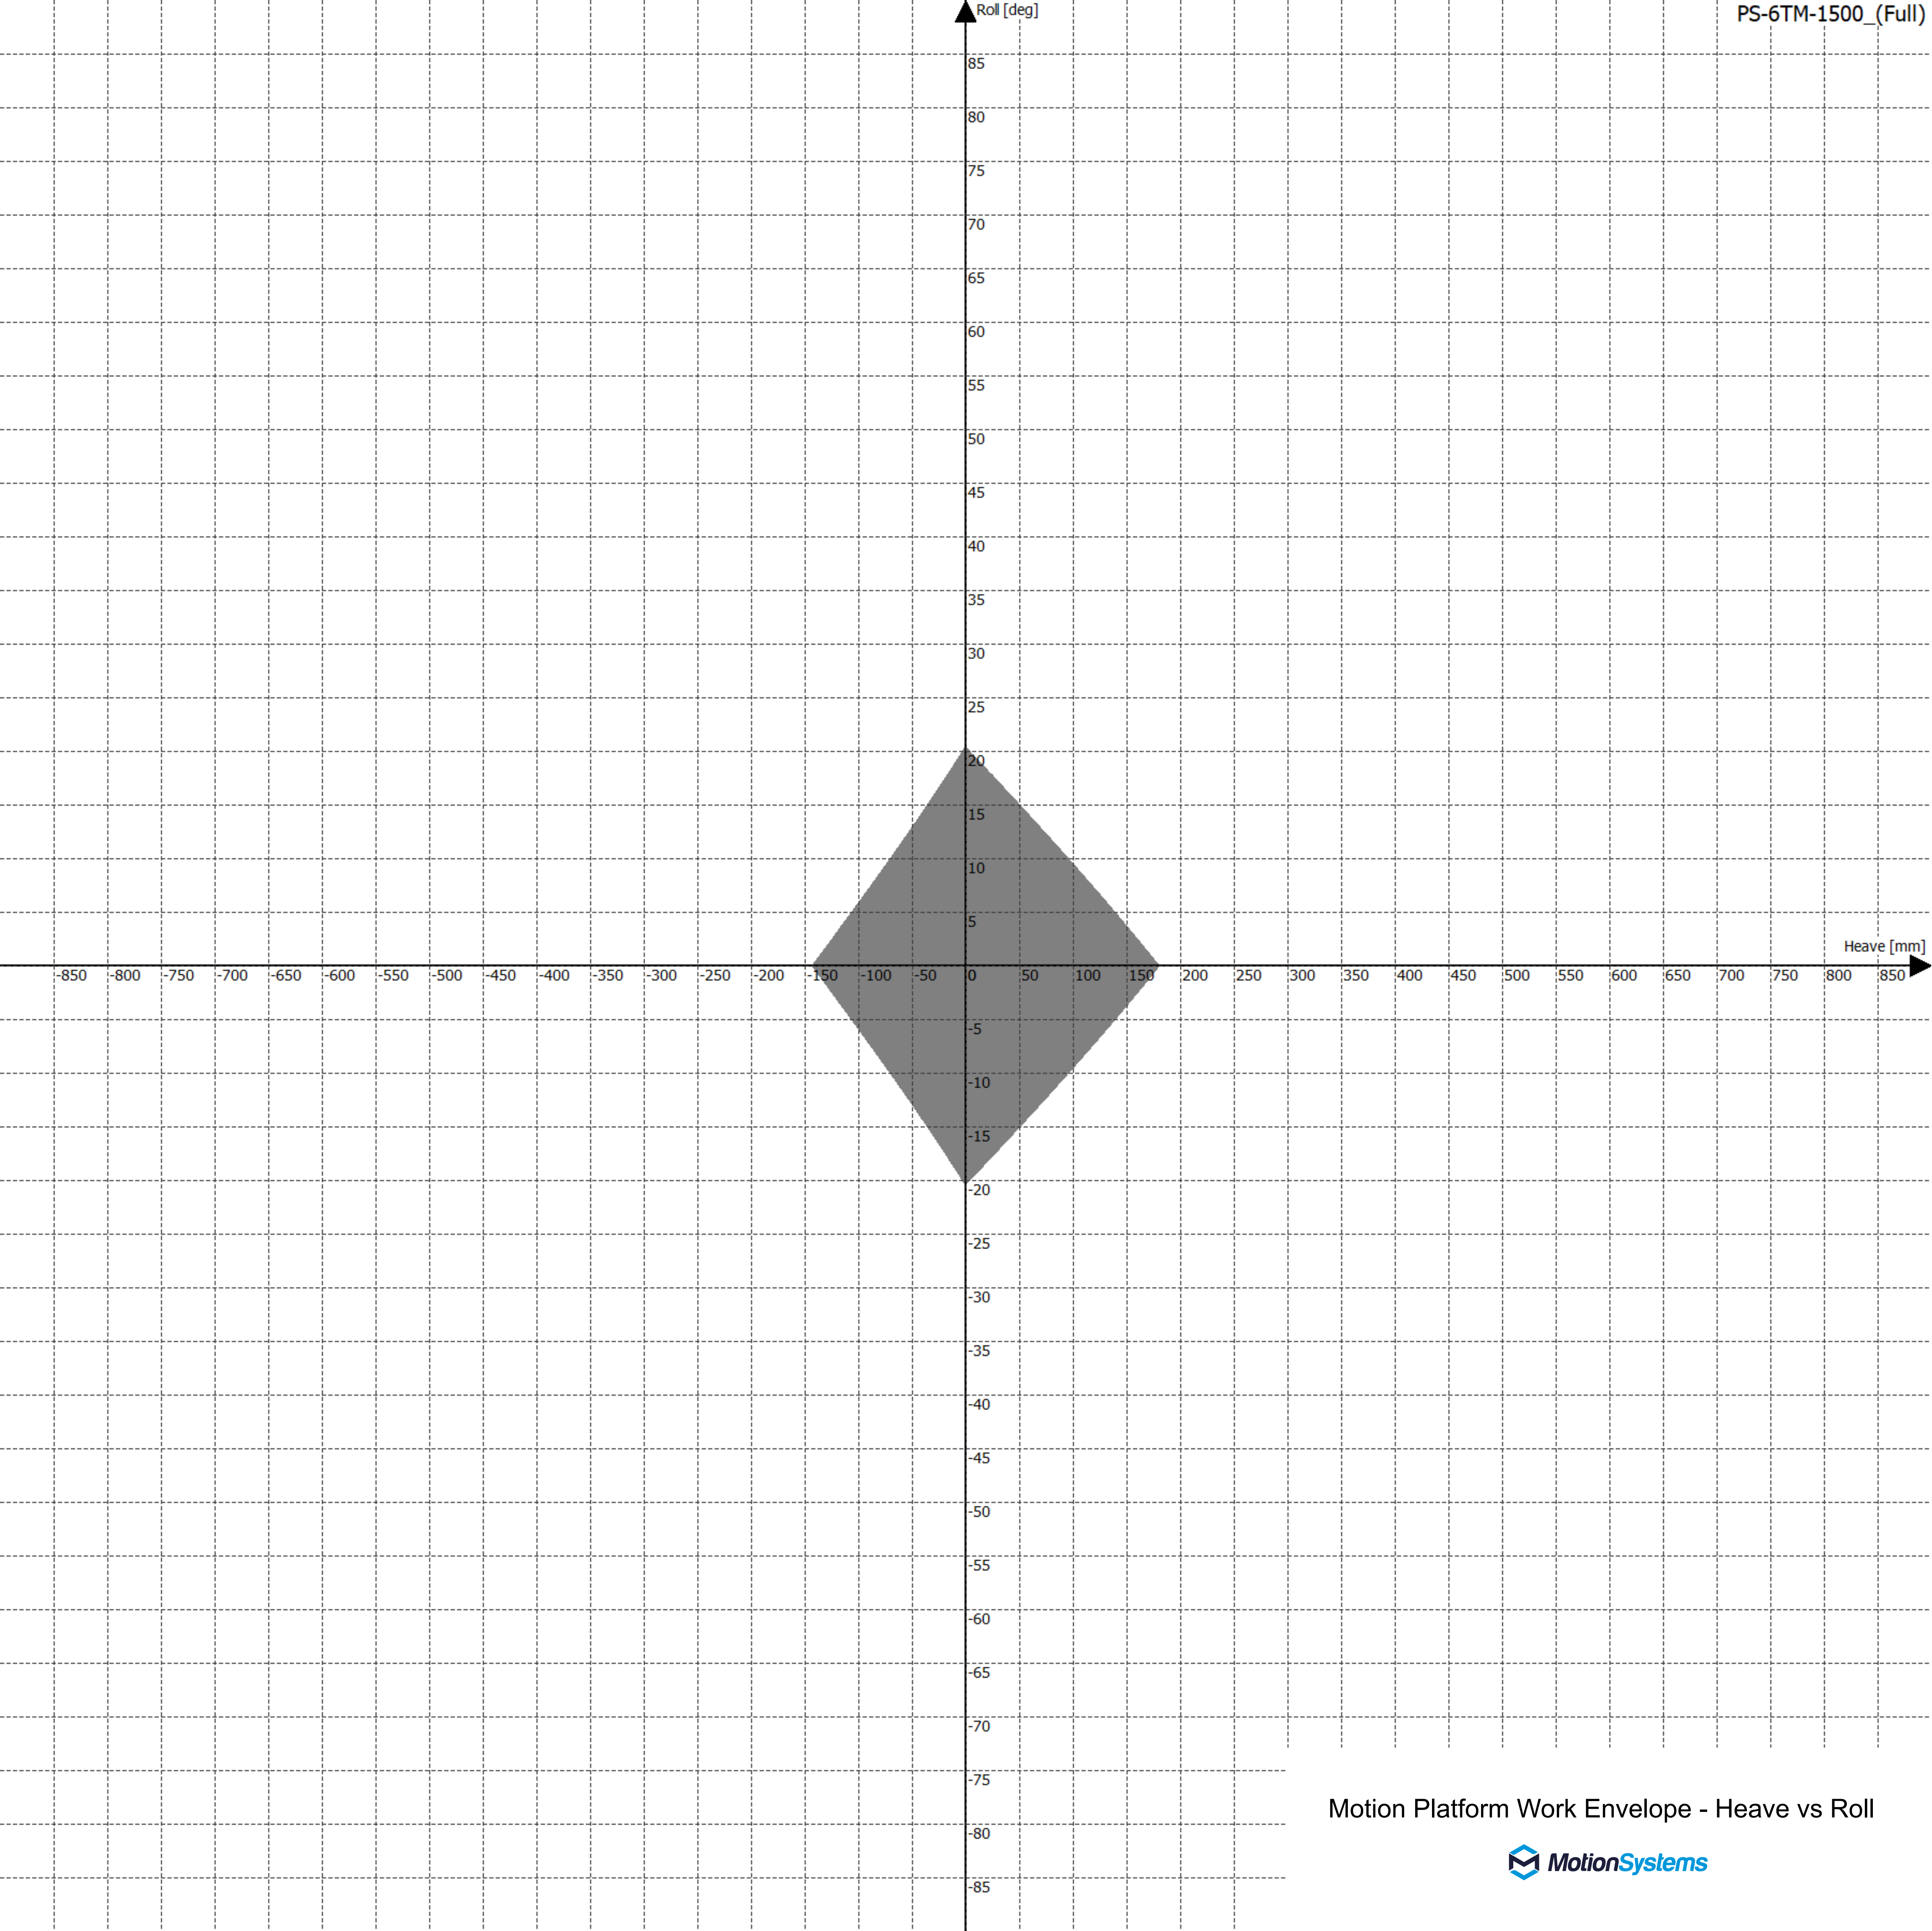


Motion Platform Work Envelope - Heave vs Roll

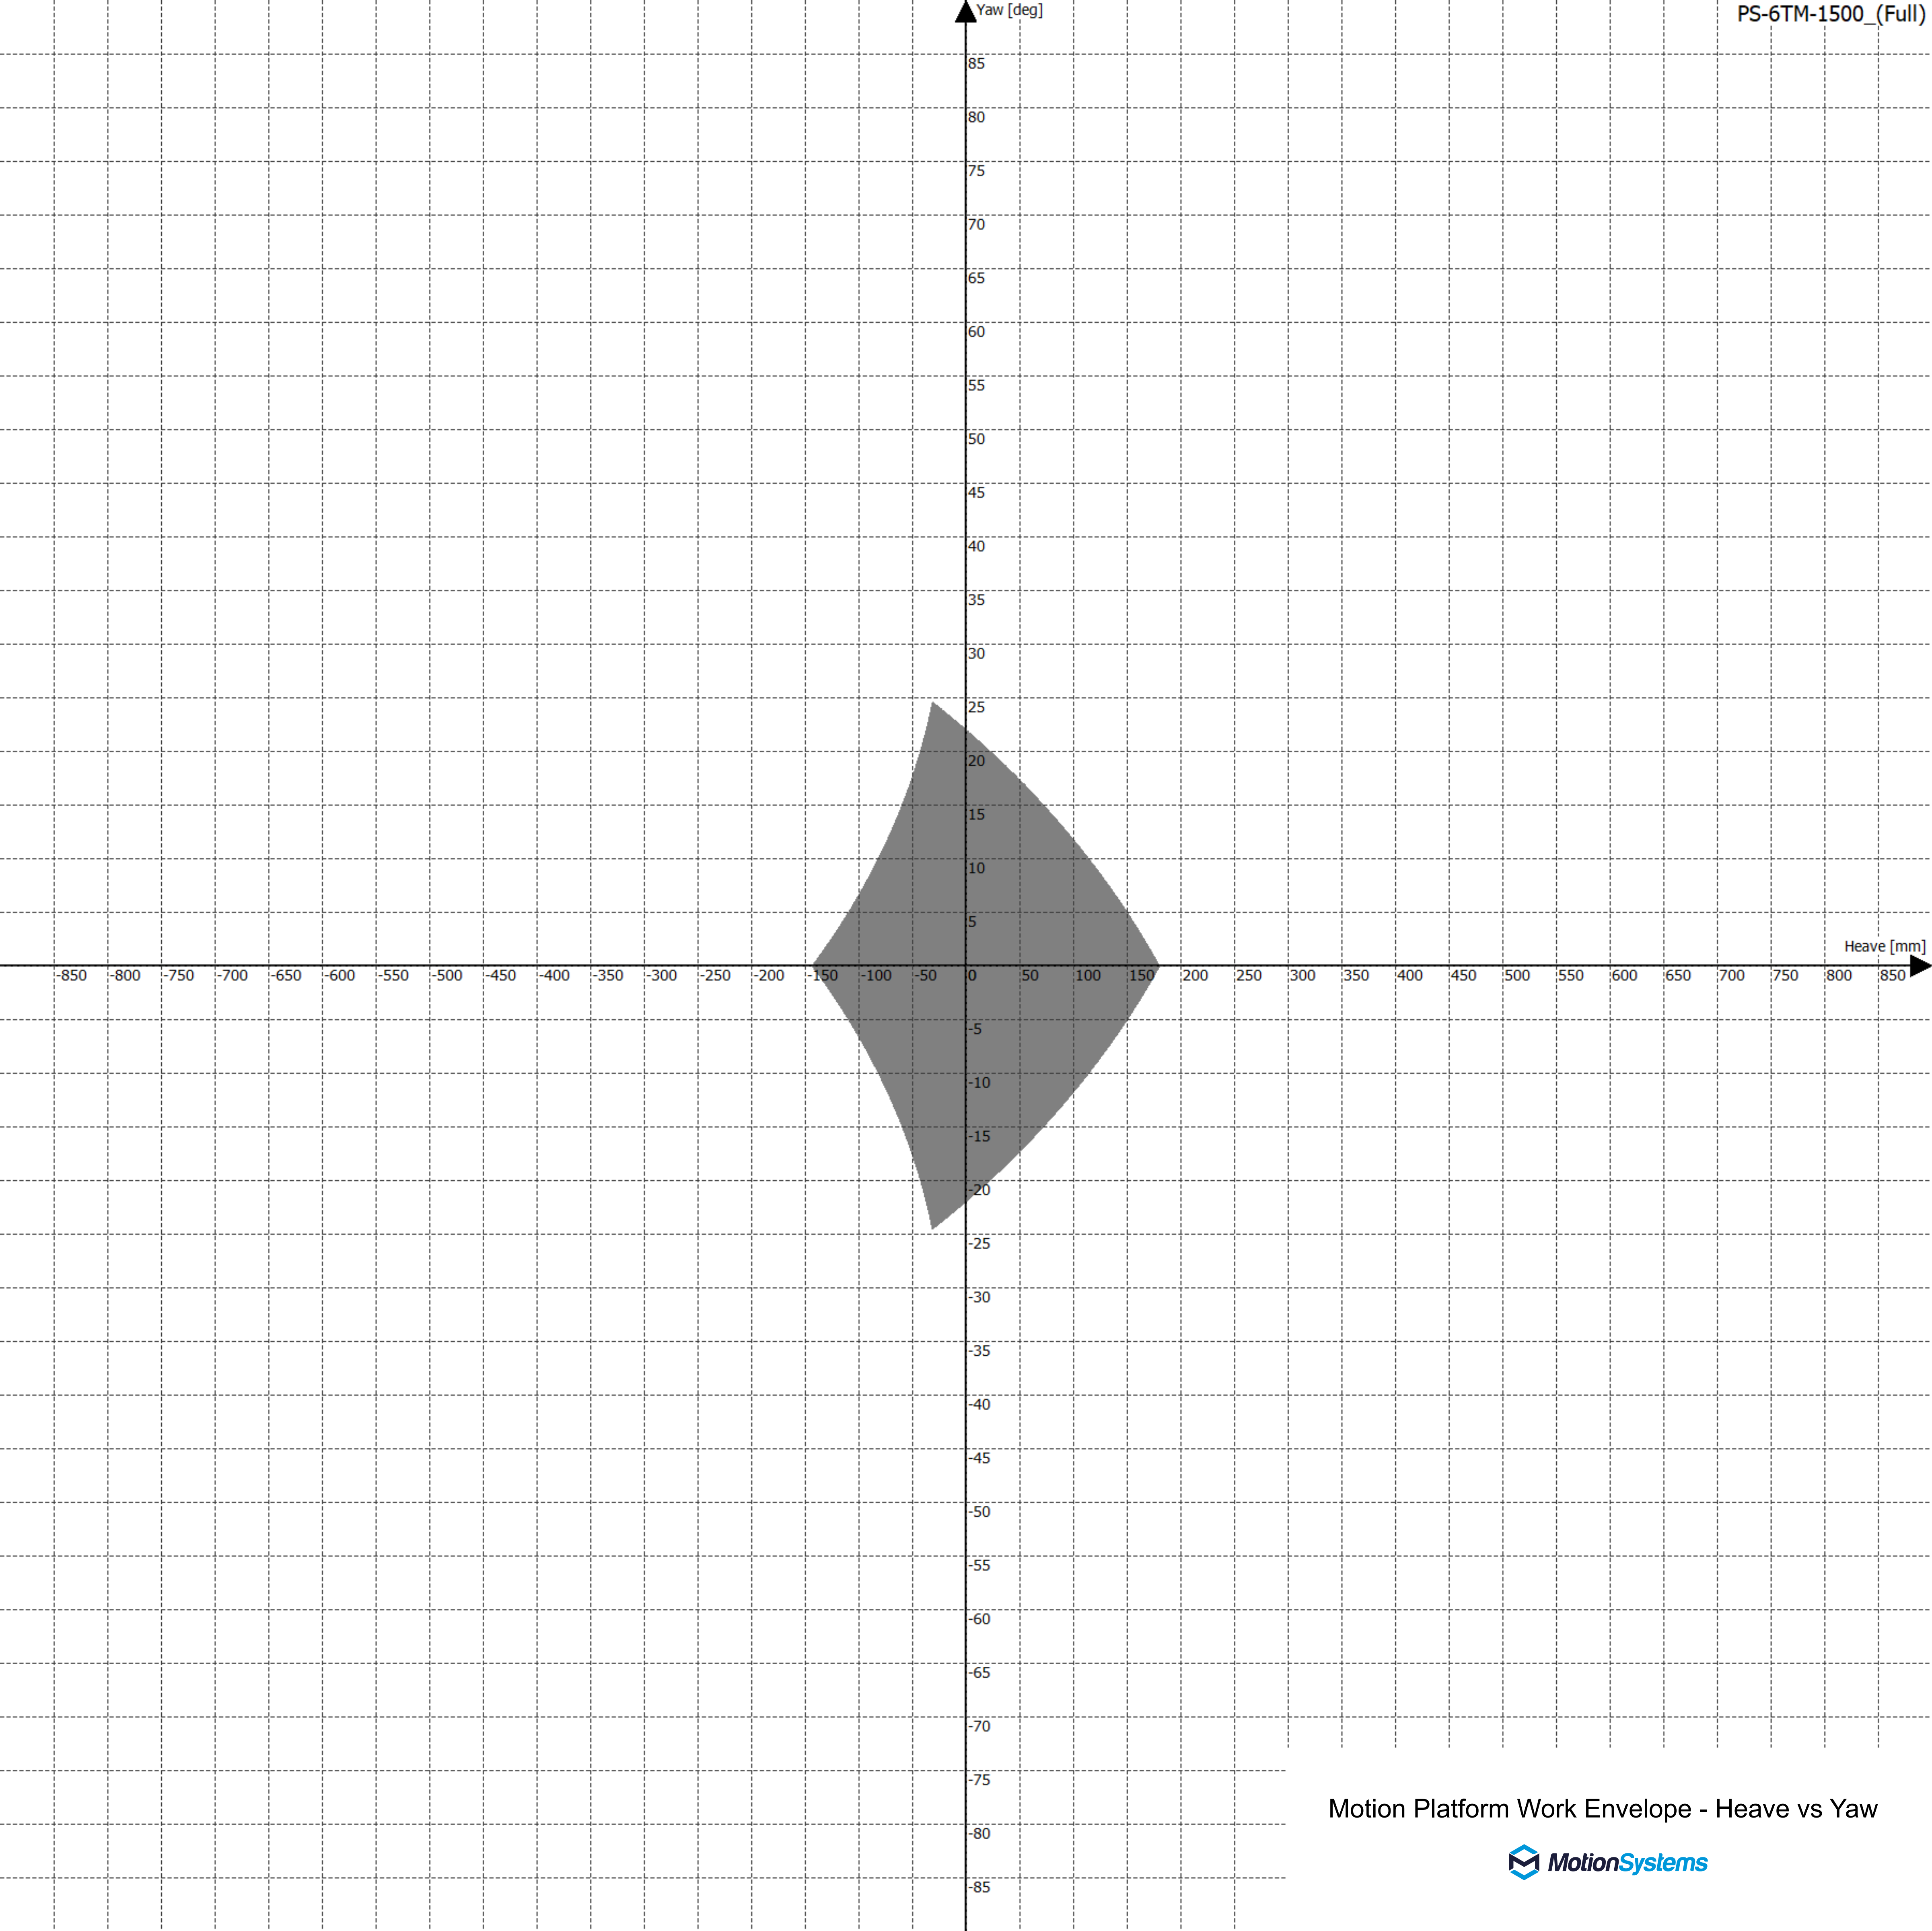

Motion Platform Work Envelope - Heave vs Yaw

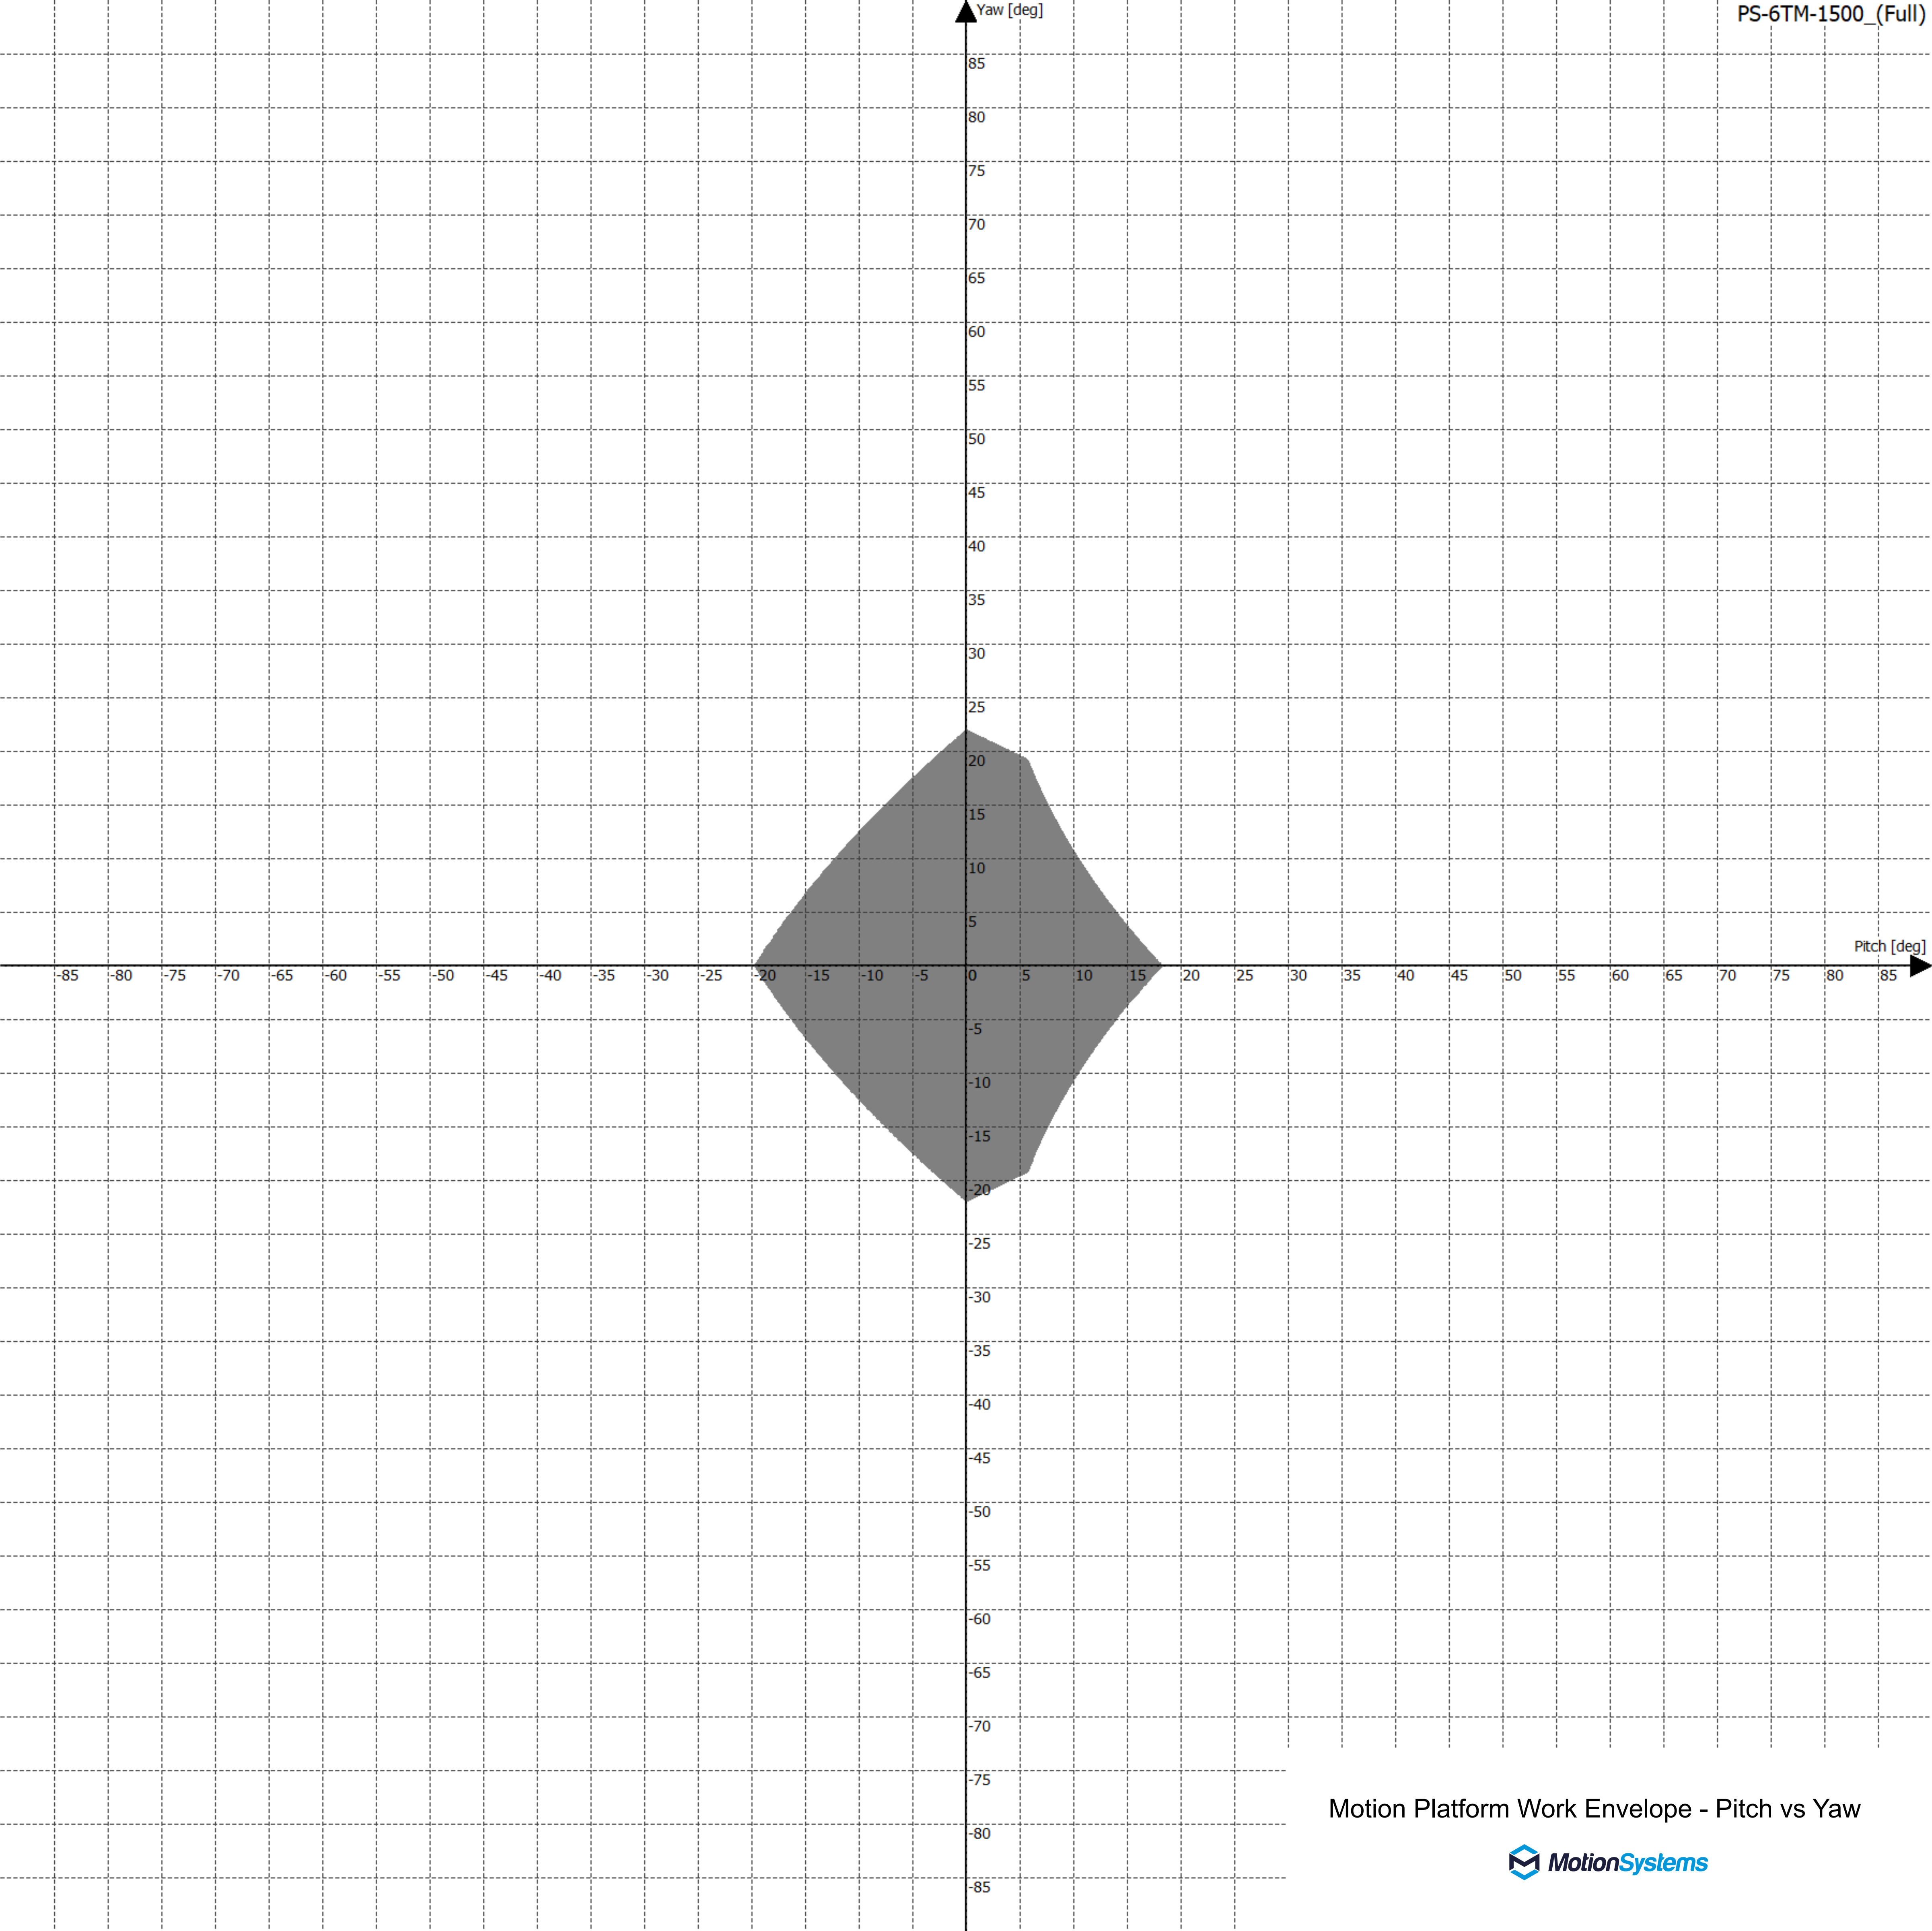


Motion Platform Work Envelope - Pitch vs Yaw

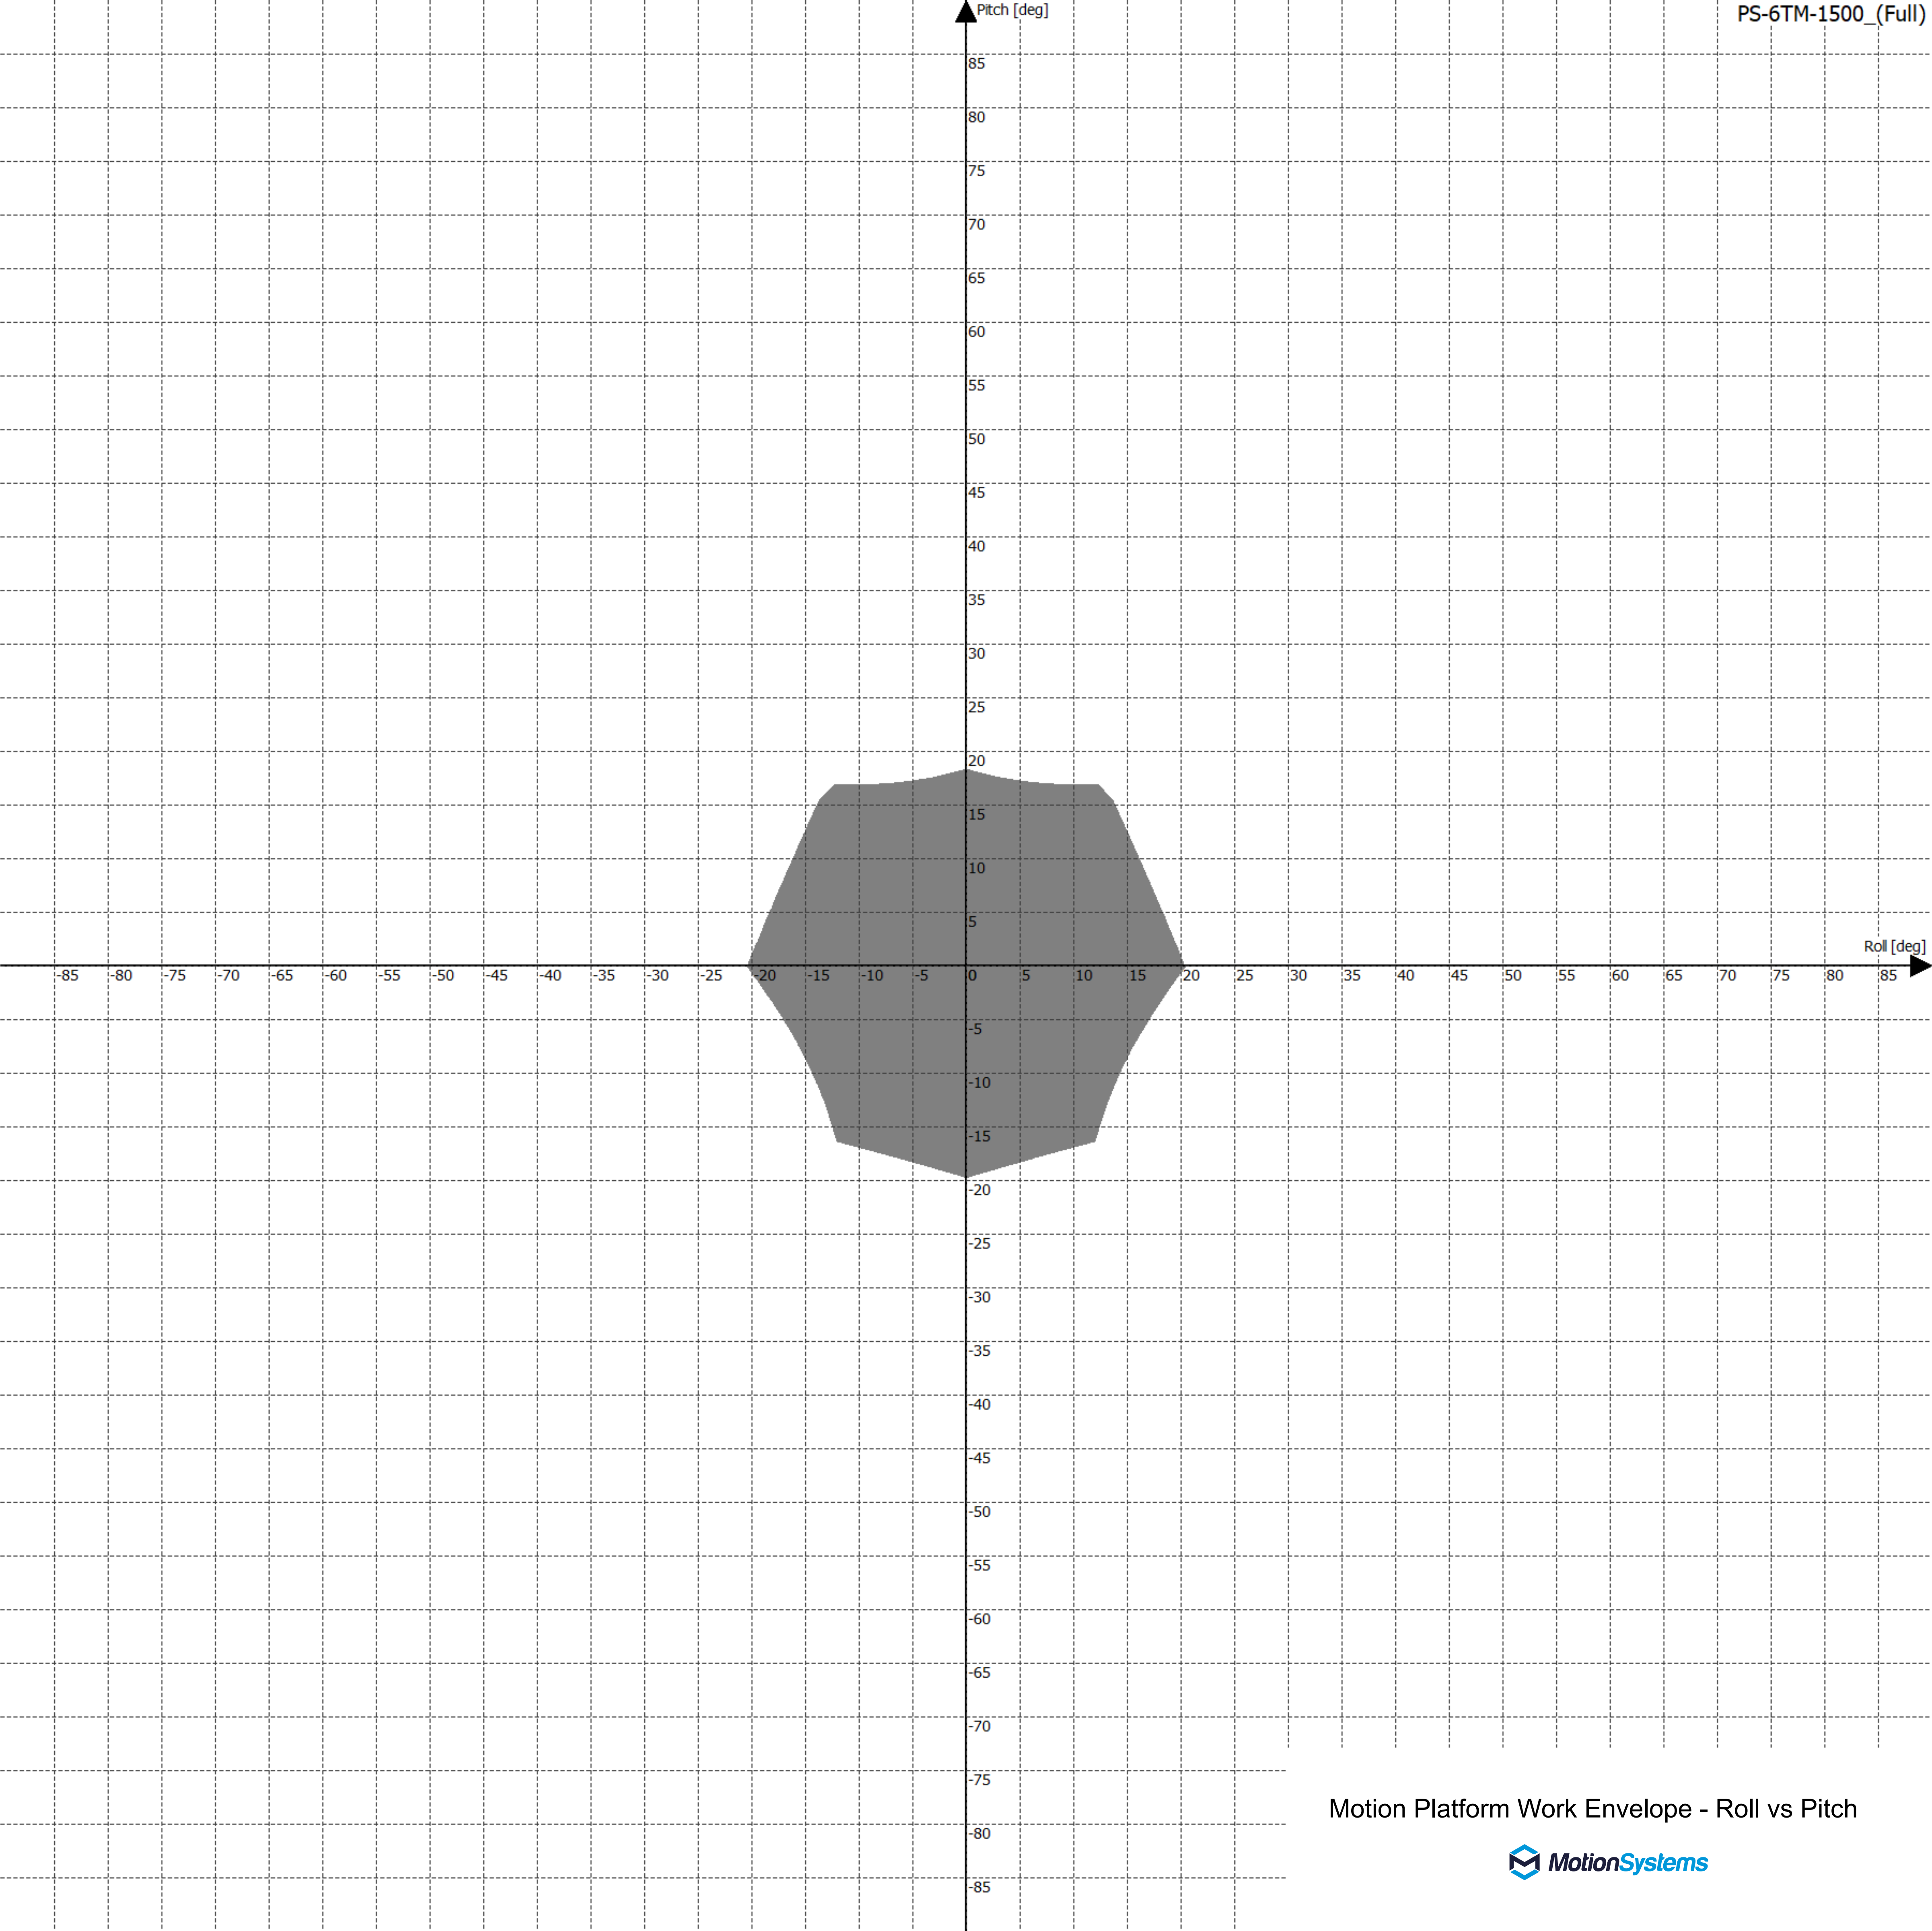


Motion Platform Work Envelope - Roll vs Pitch




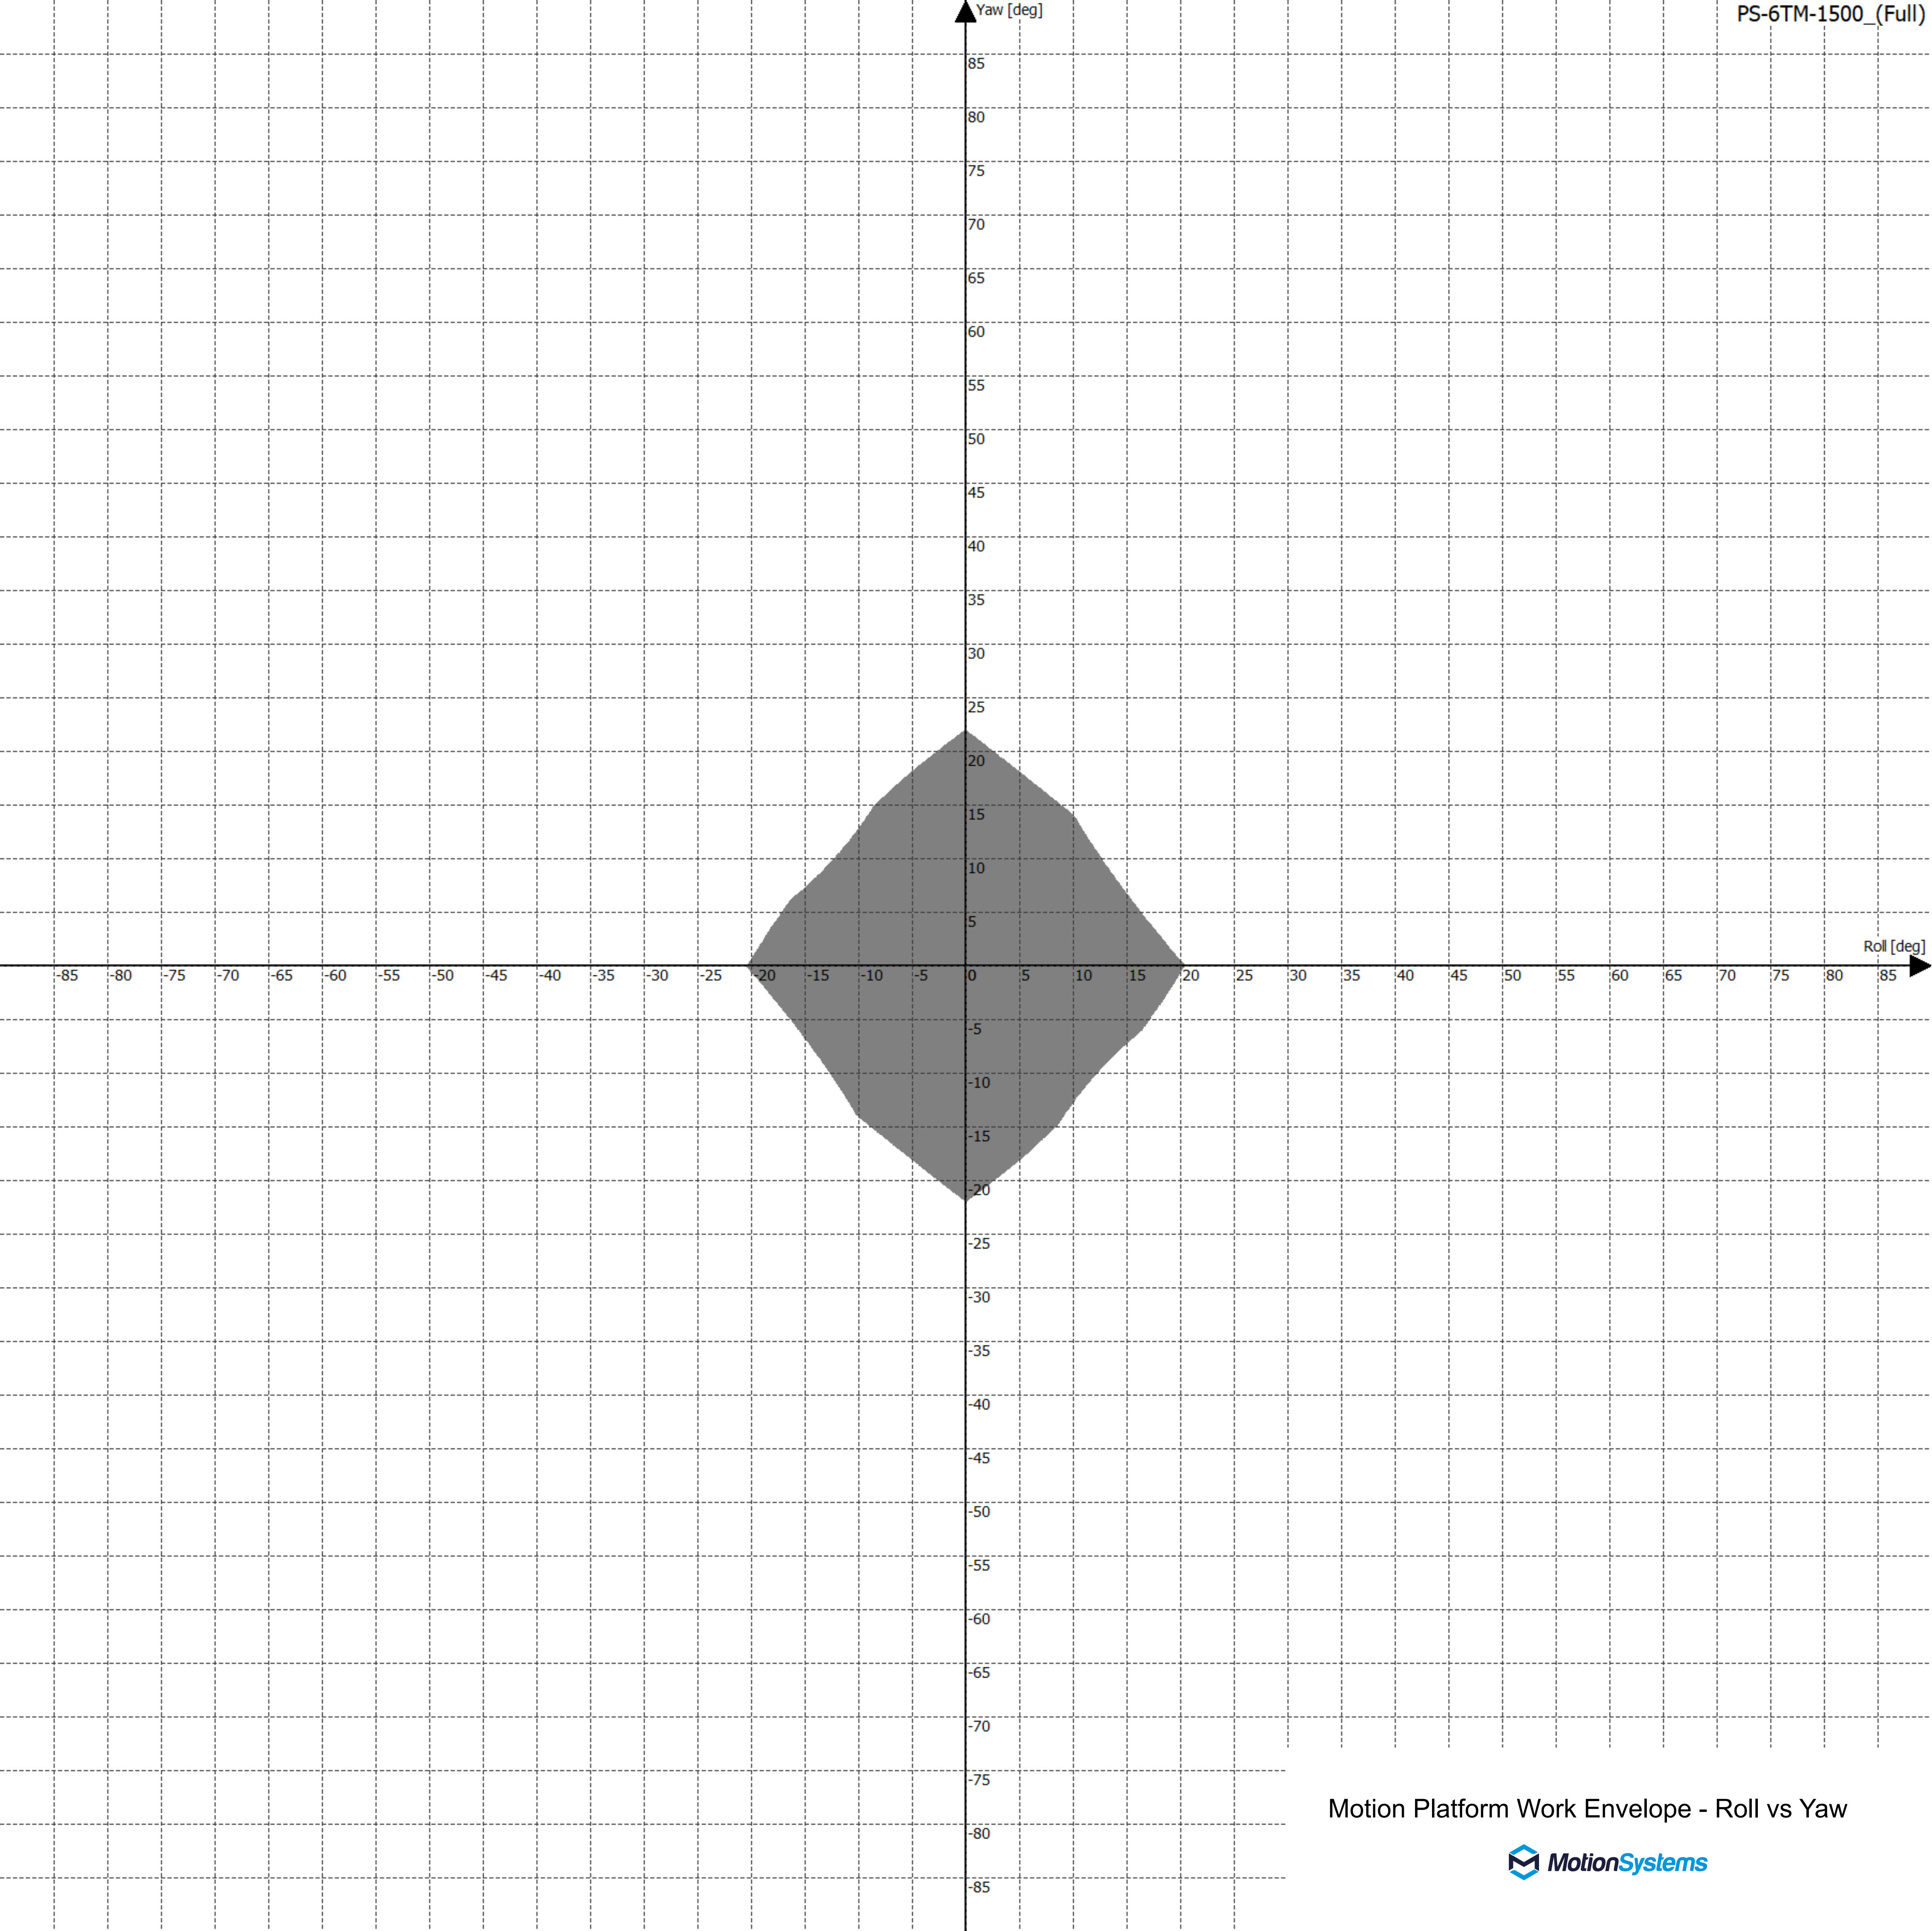


Motion Platform Work Envelope - Roll vs Yaw

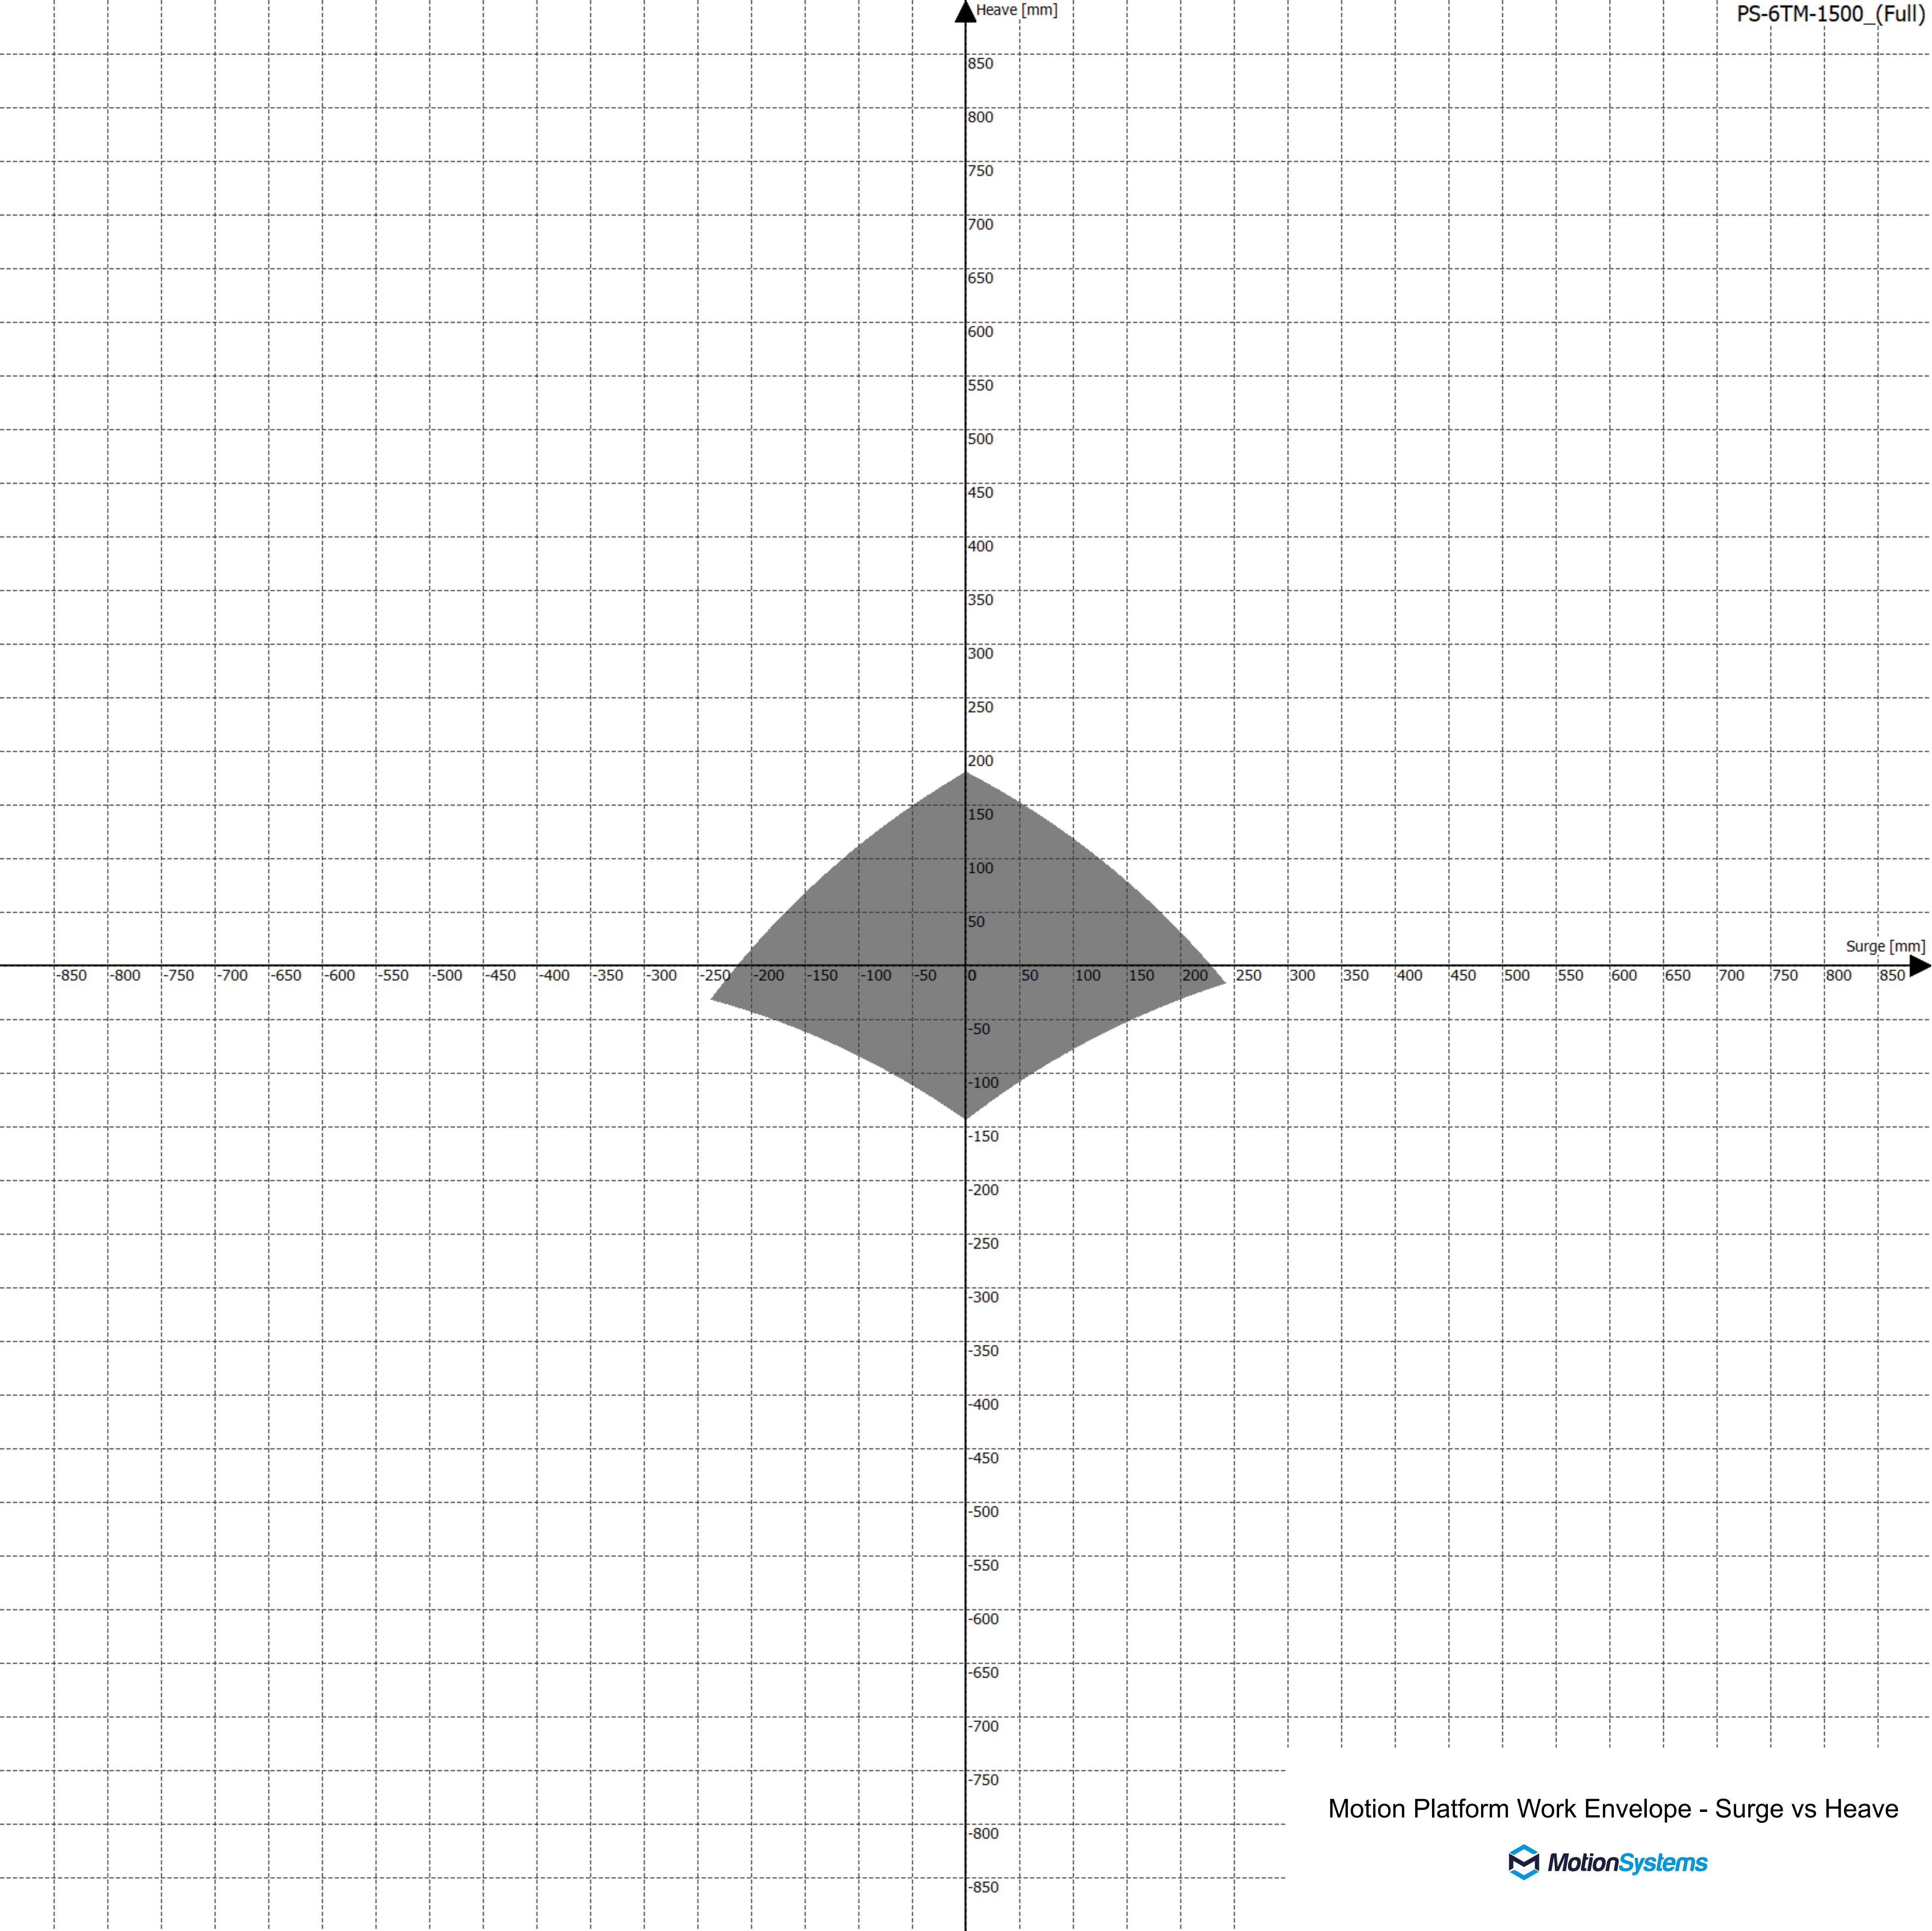


Motion Platform Work Envelope - Surge vs Heave

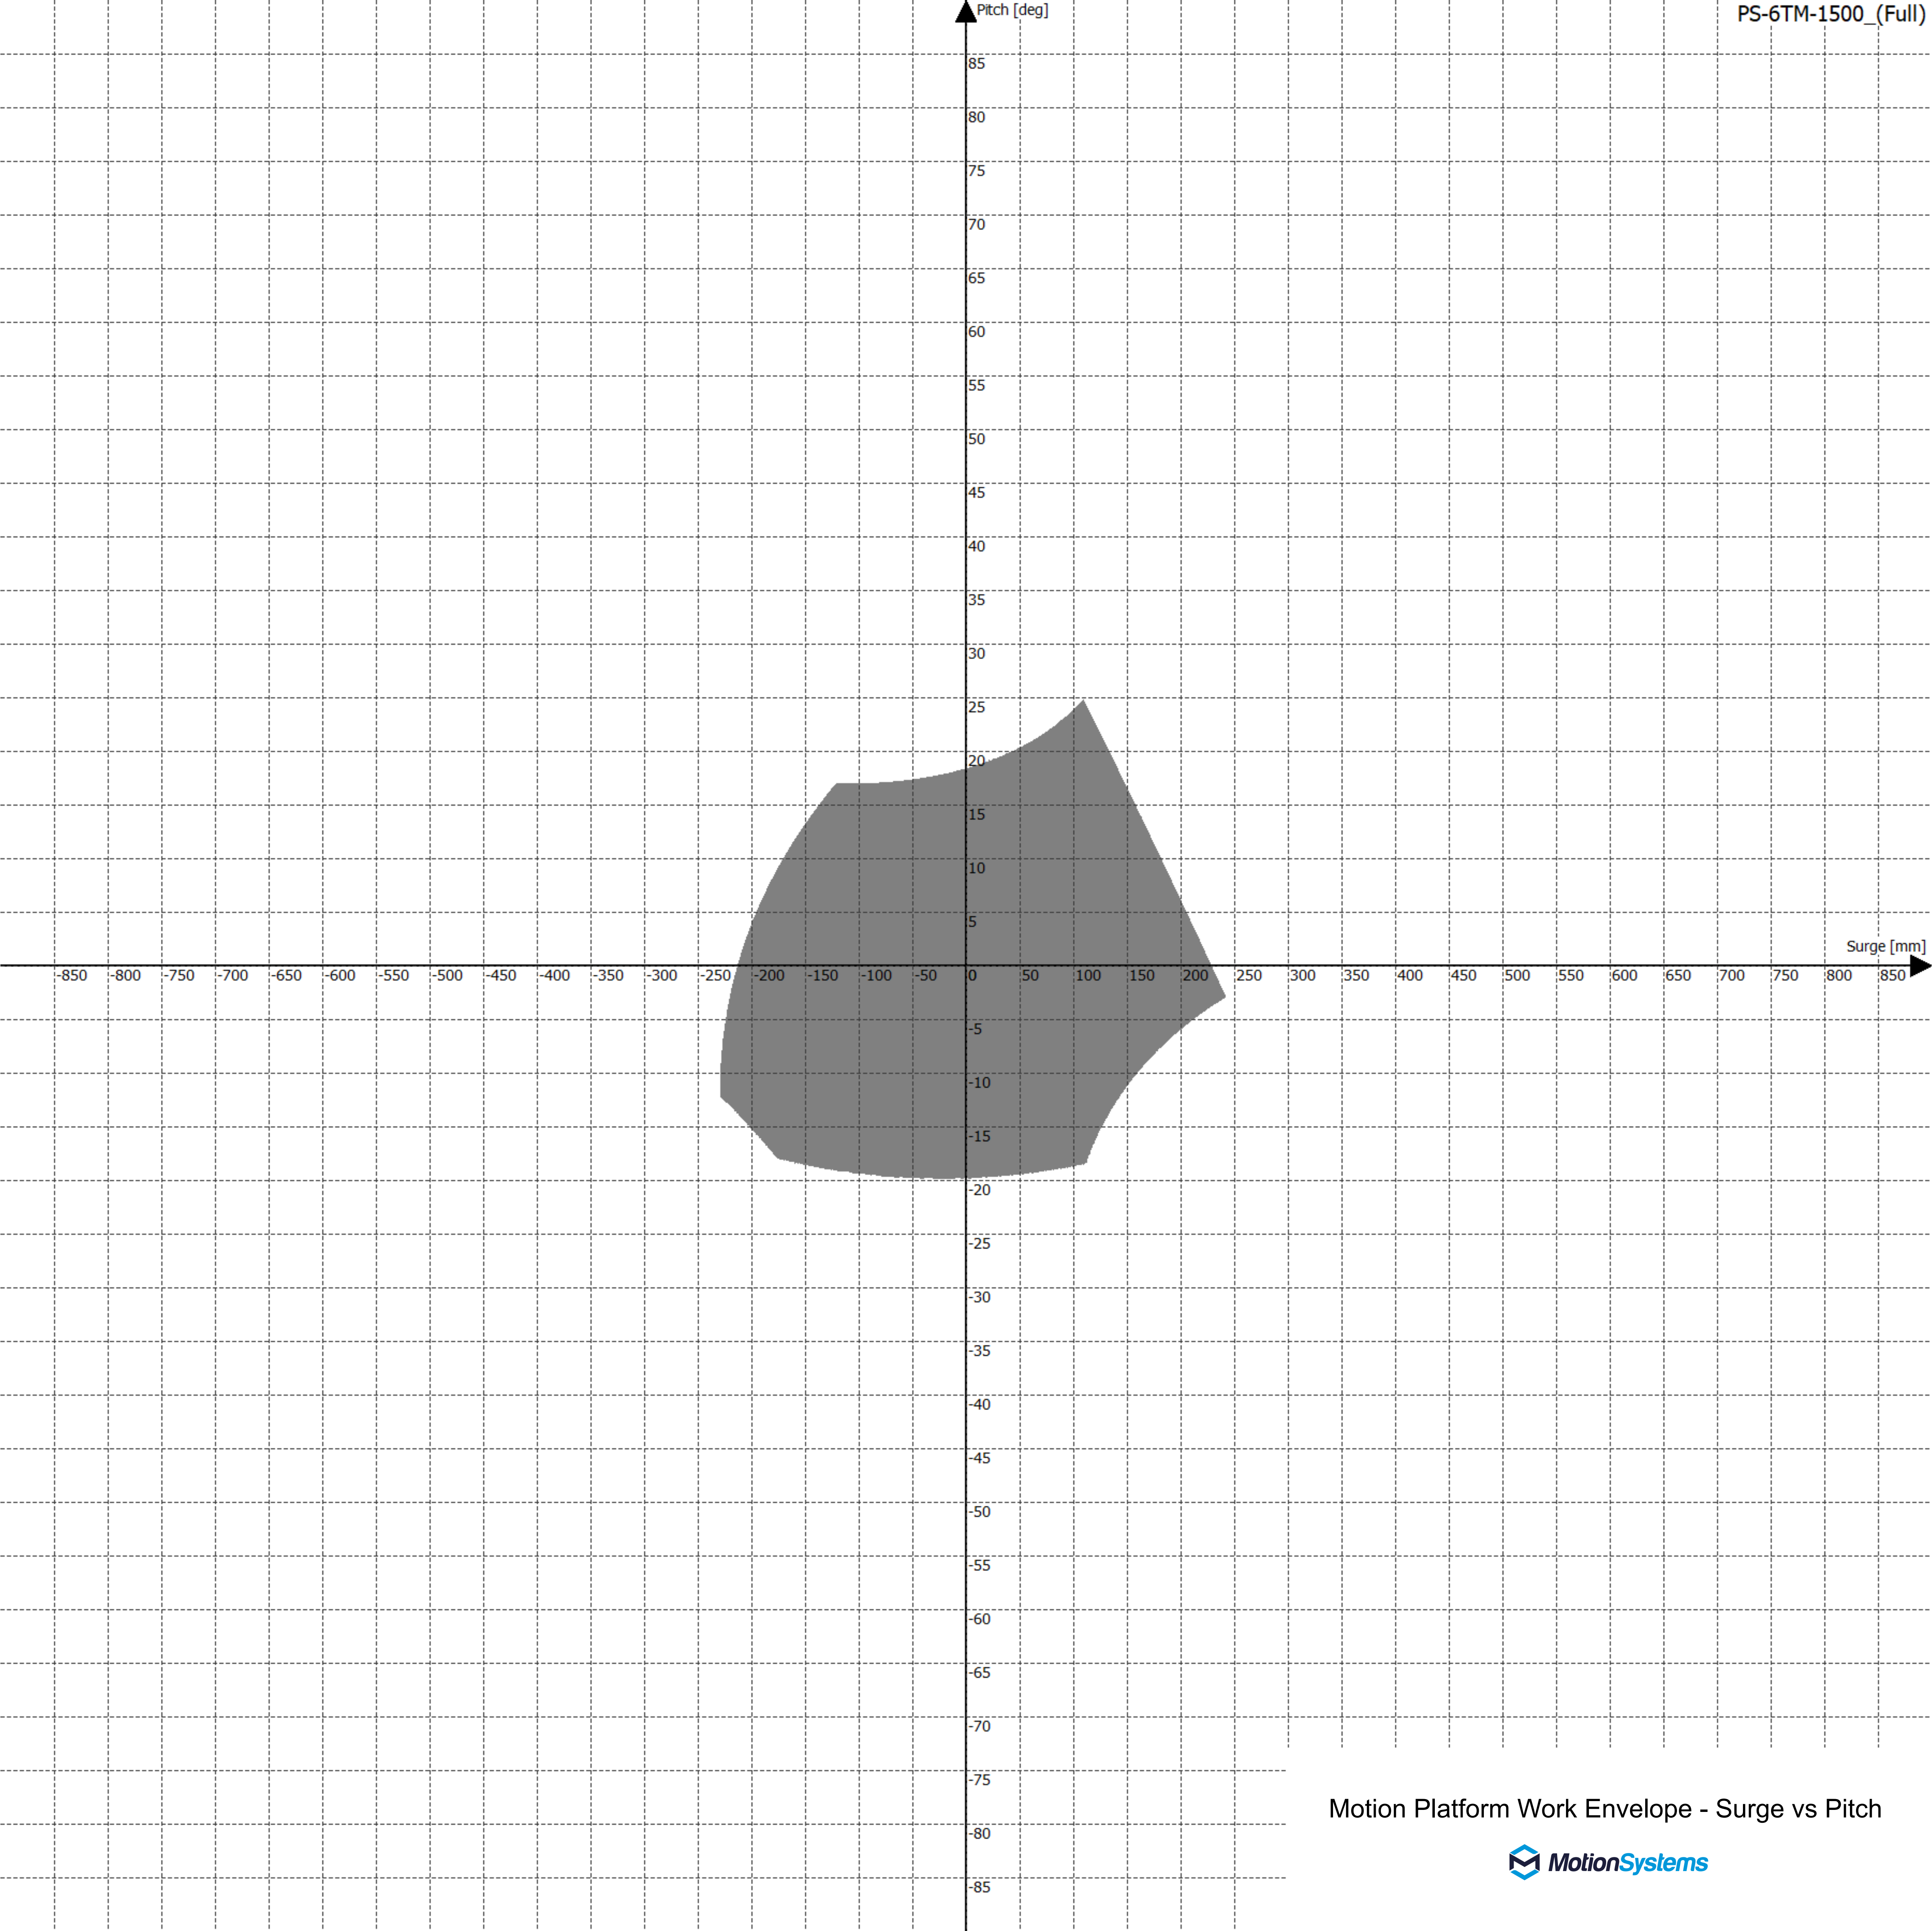


Motion Platform Work Envelope - Surge vs Pitch

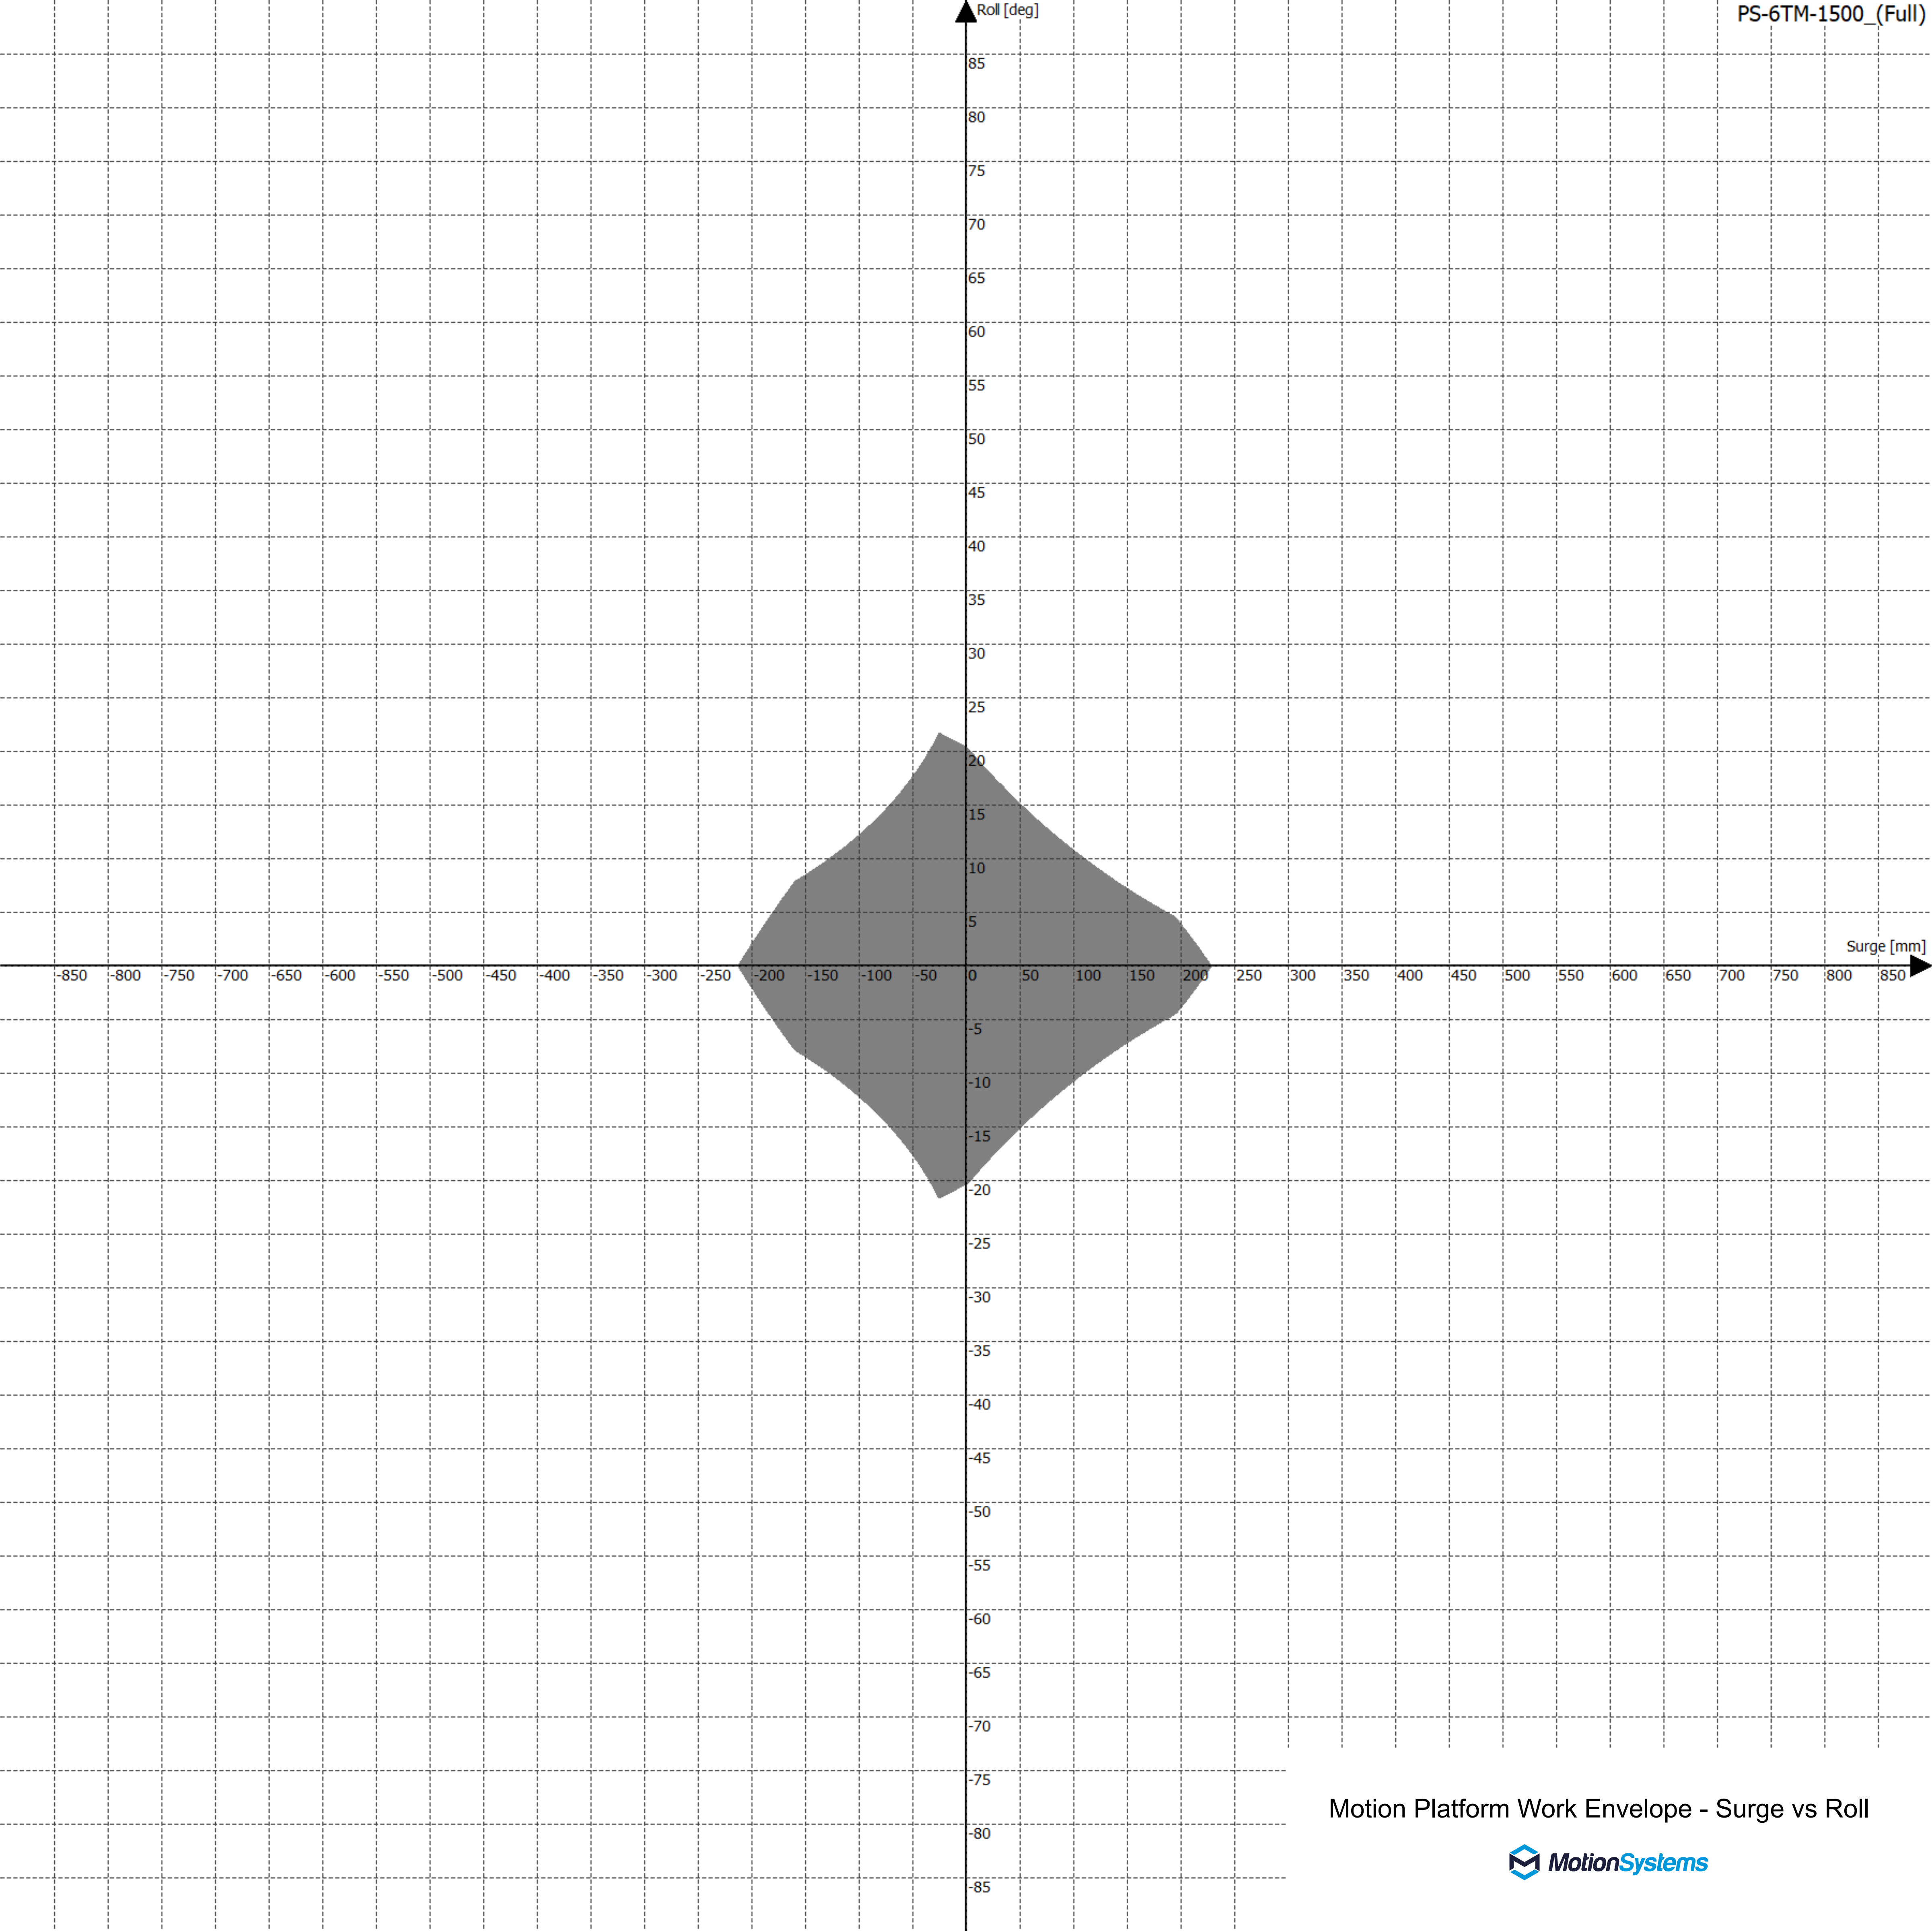


Motion Platform Work Envelope - Surge vs Roll

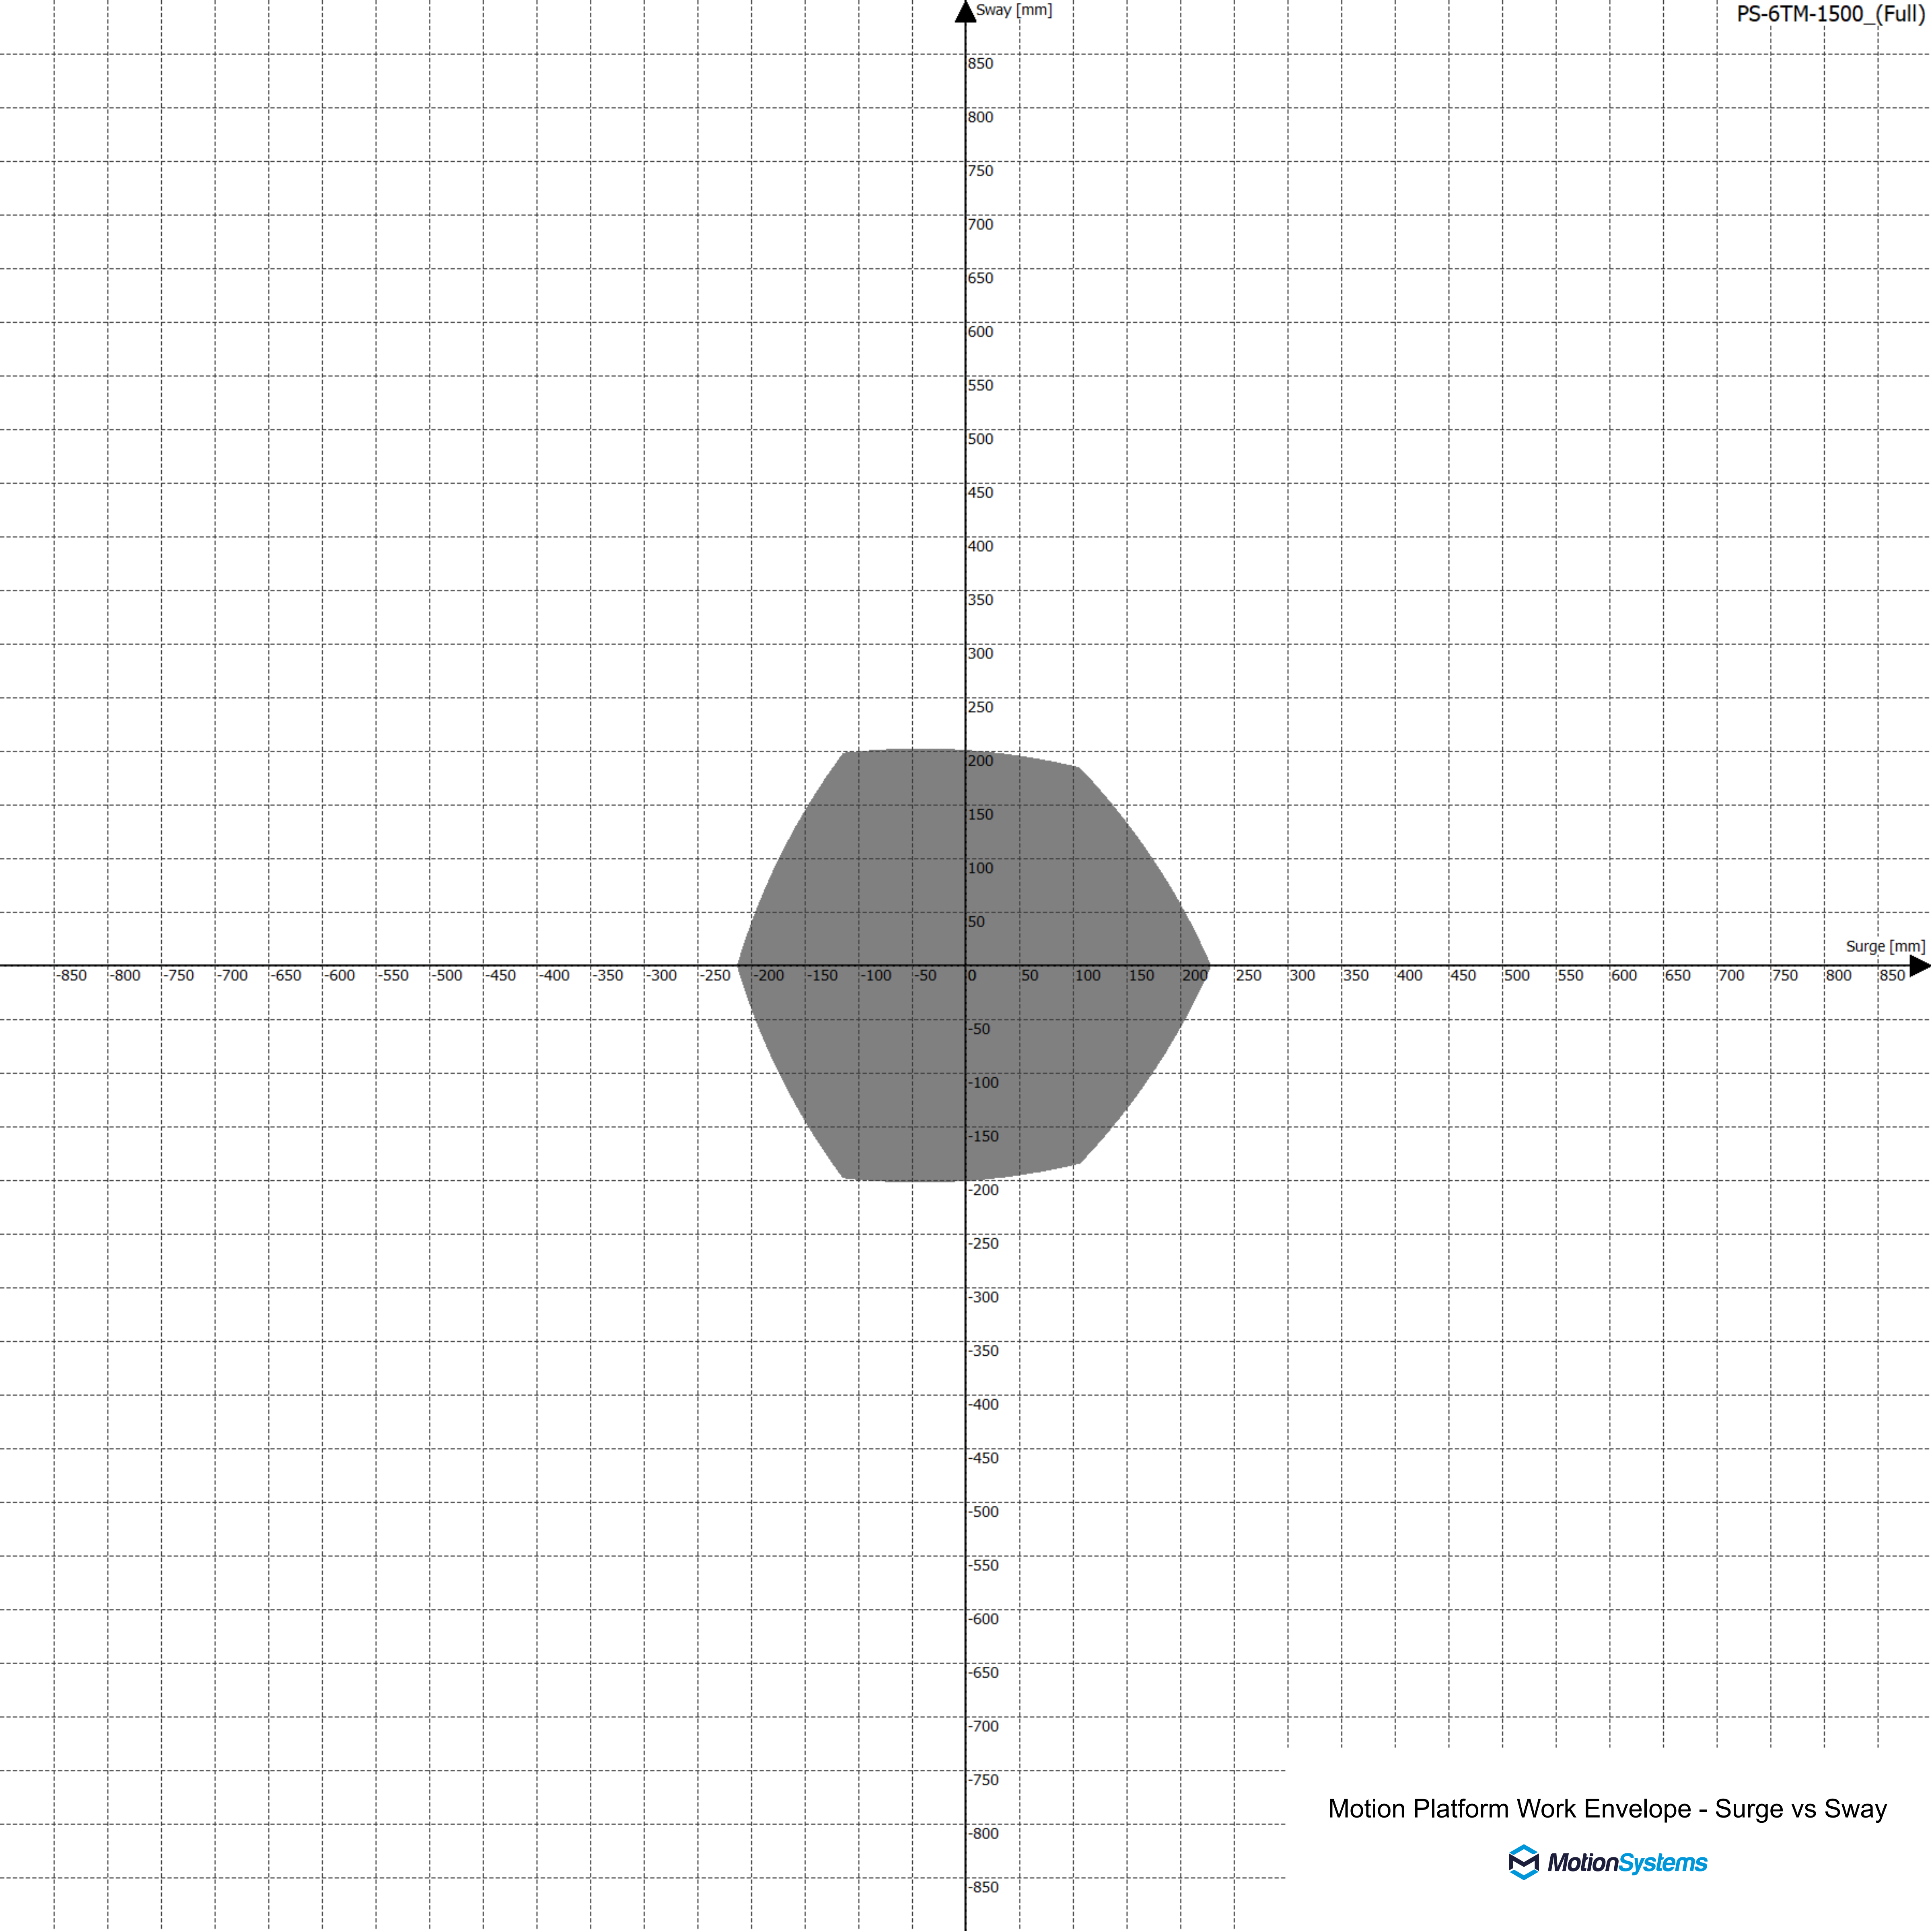

Motion Platform Work Envelope - Surge vs Sway

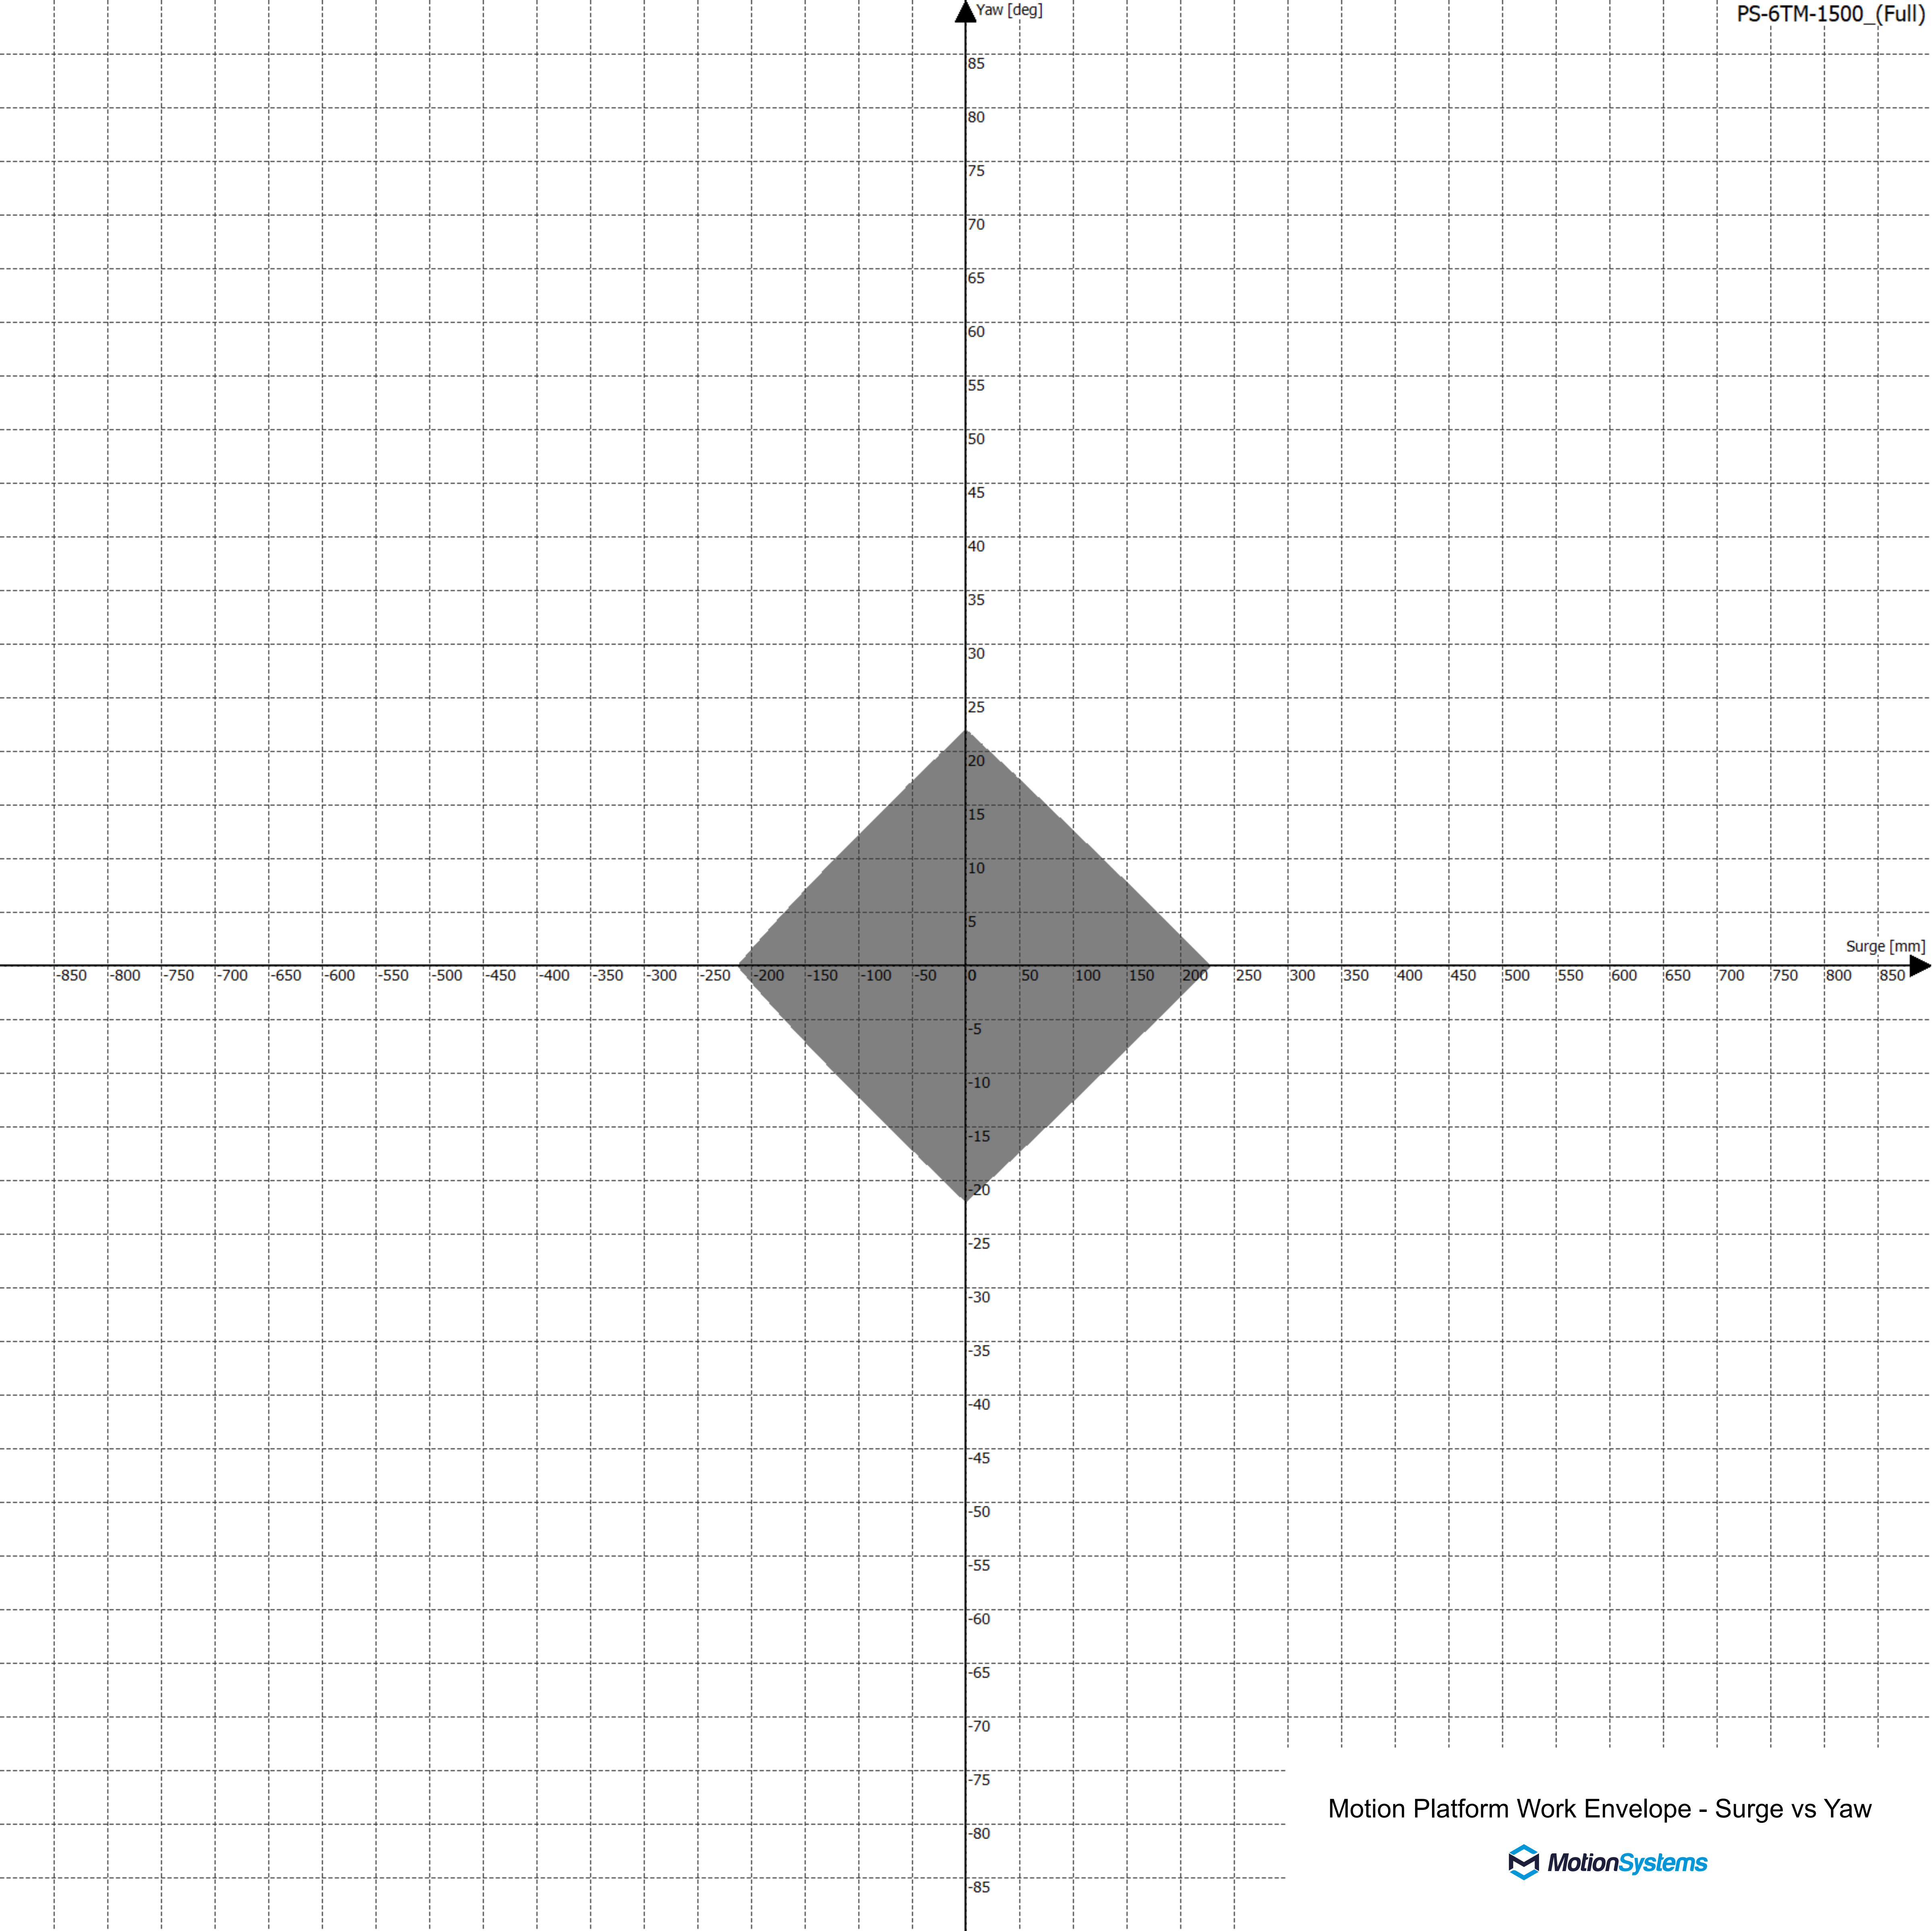


Motion Platform Work Envelope - Surge vs Yaw

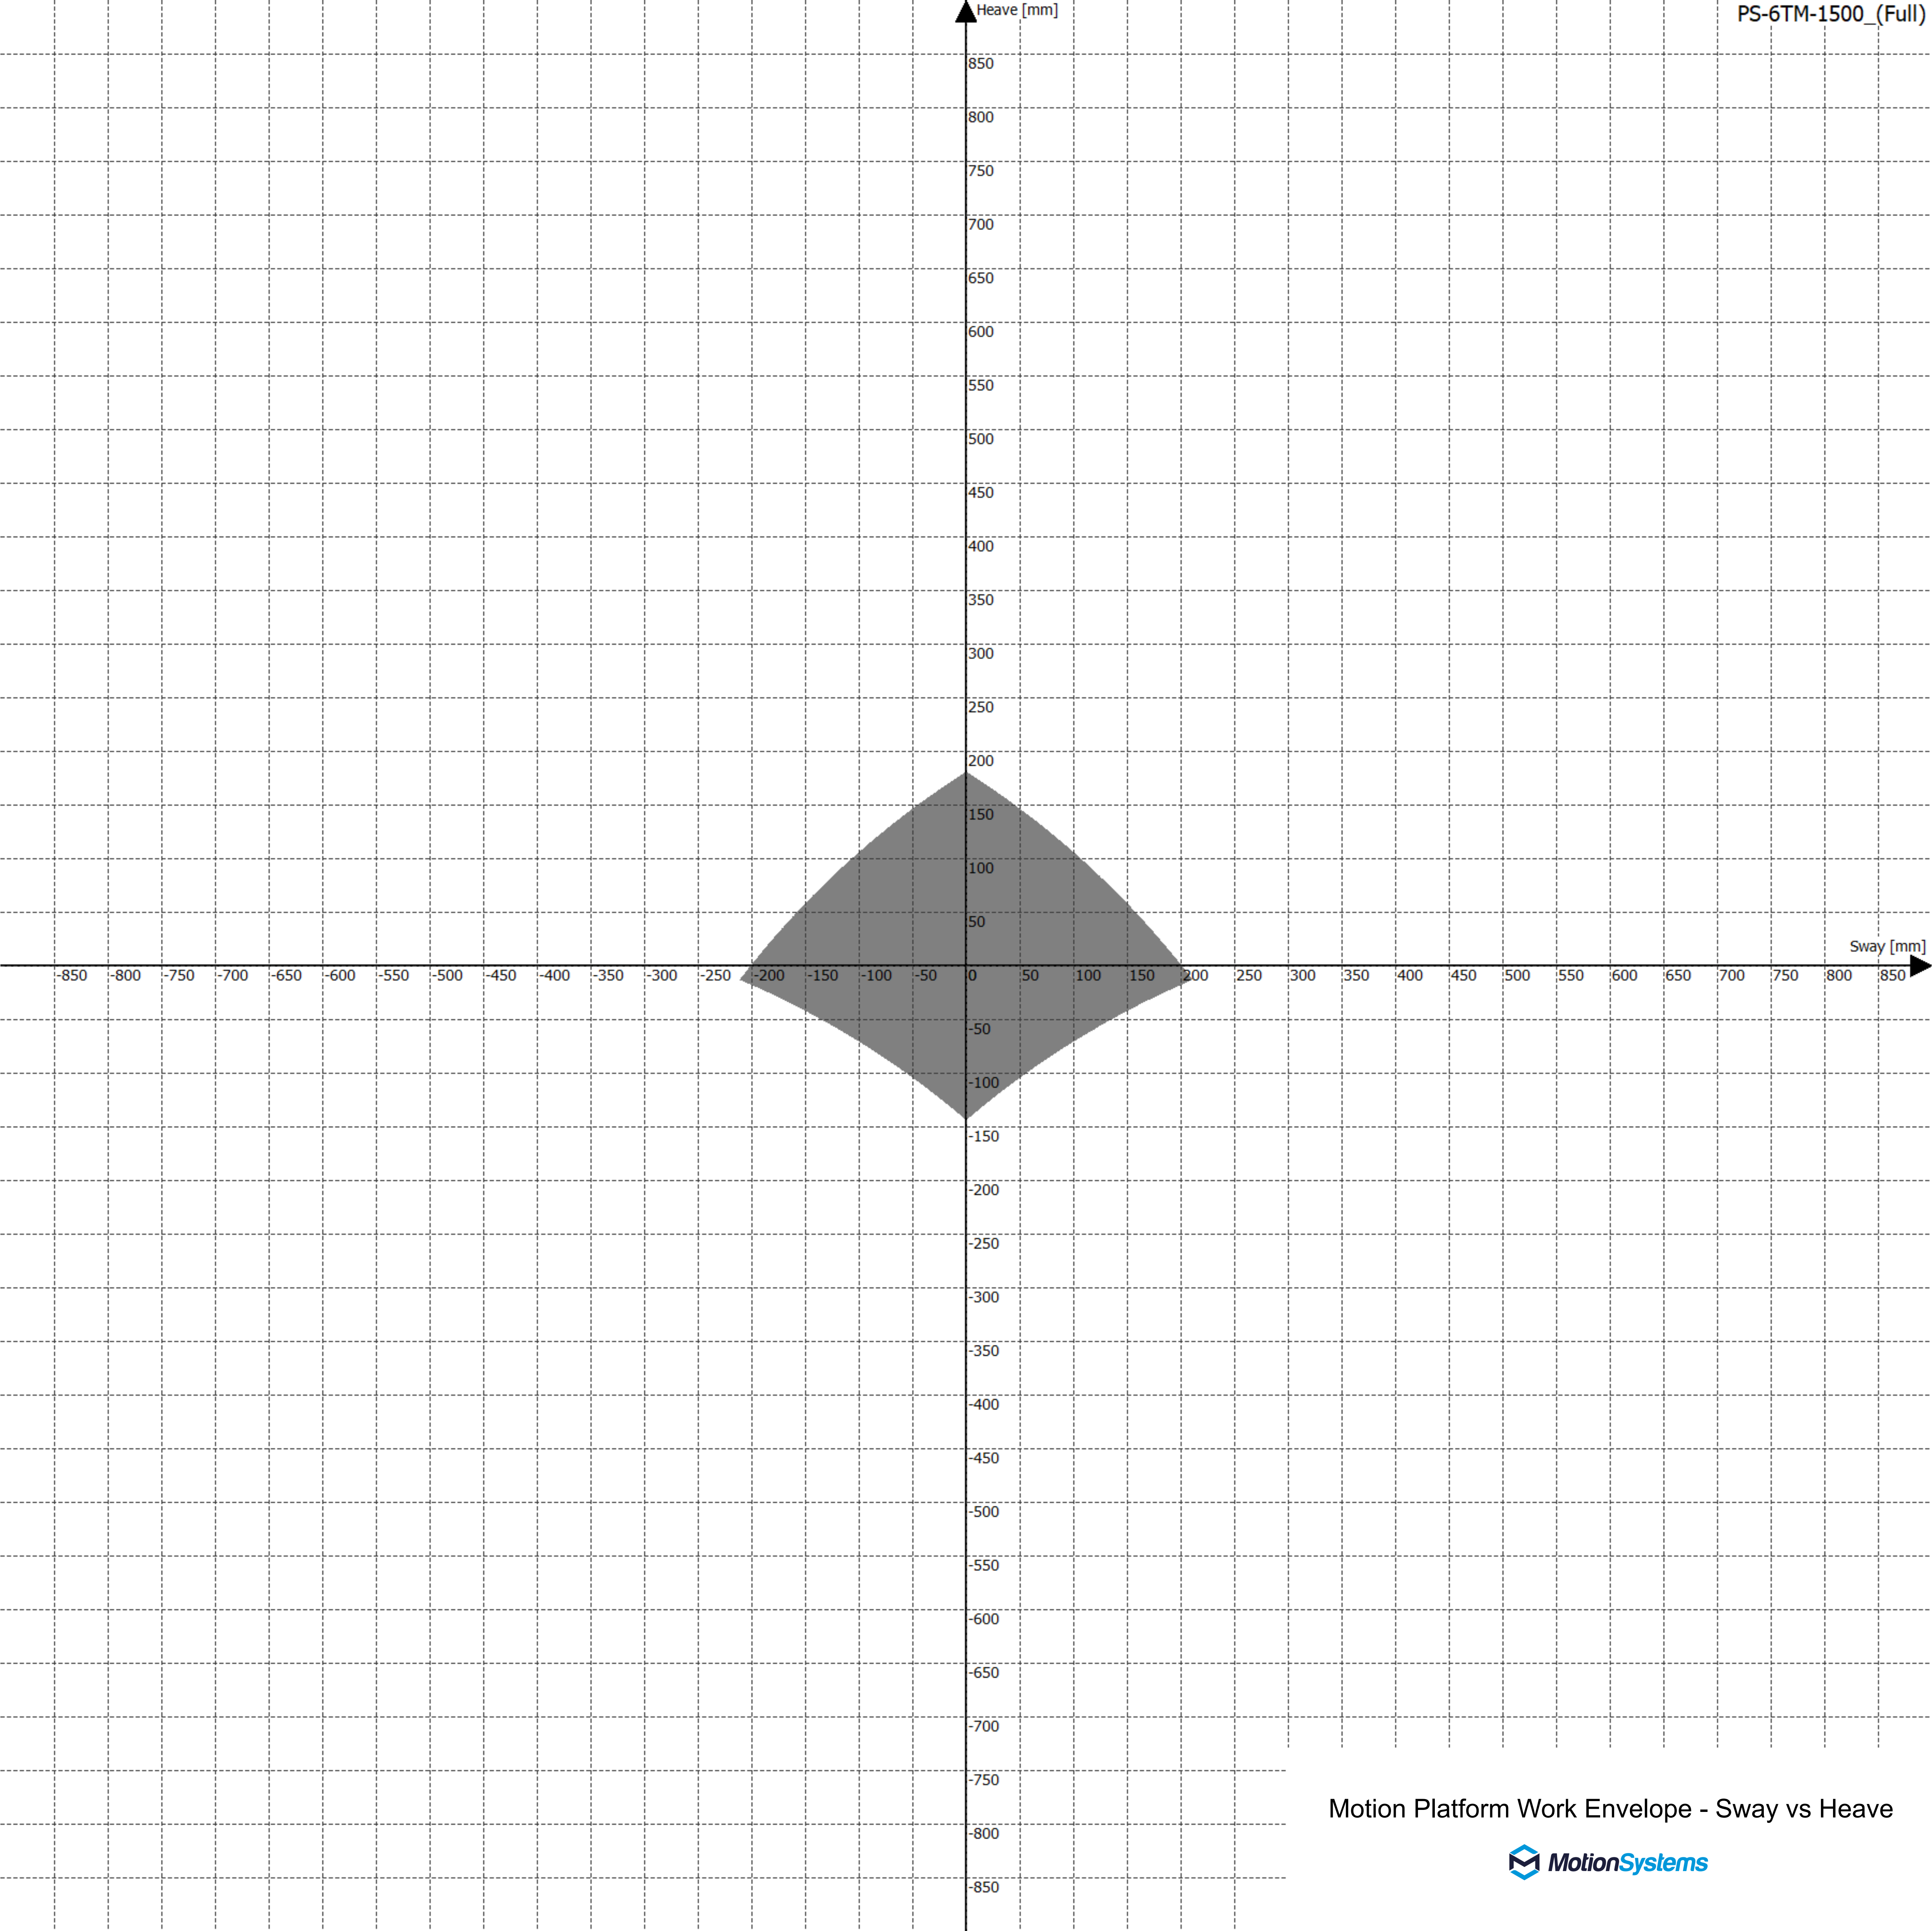


Motion Platform Work Envelope - Sway vs Heave




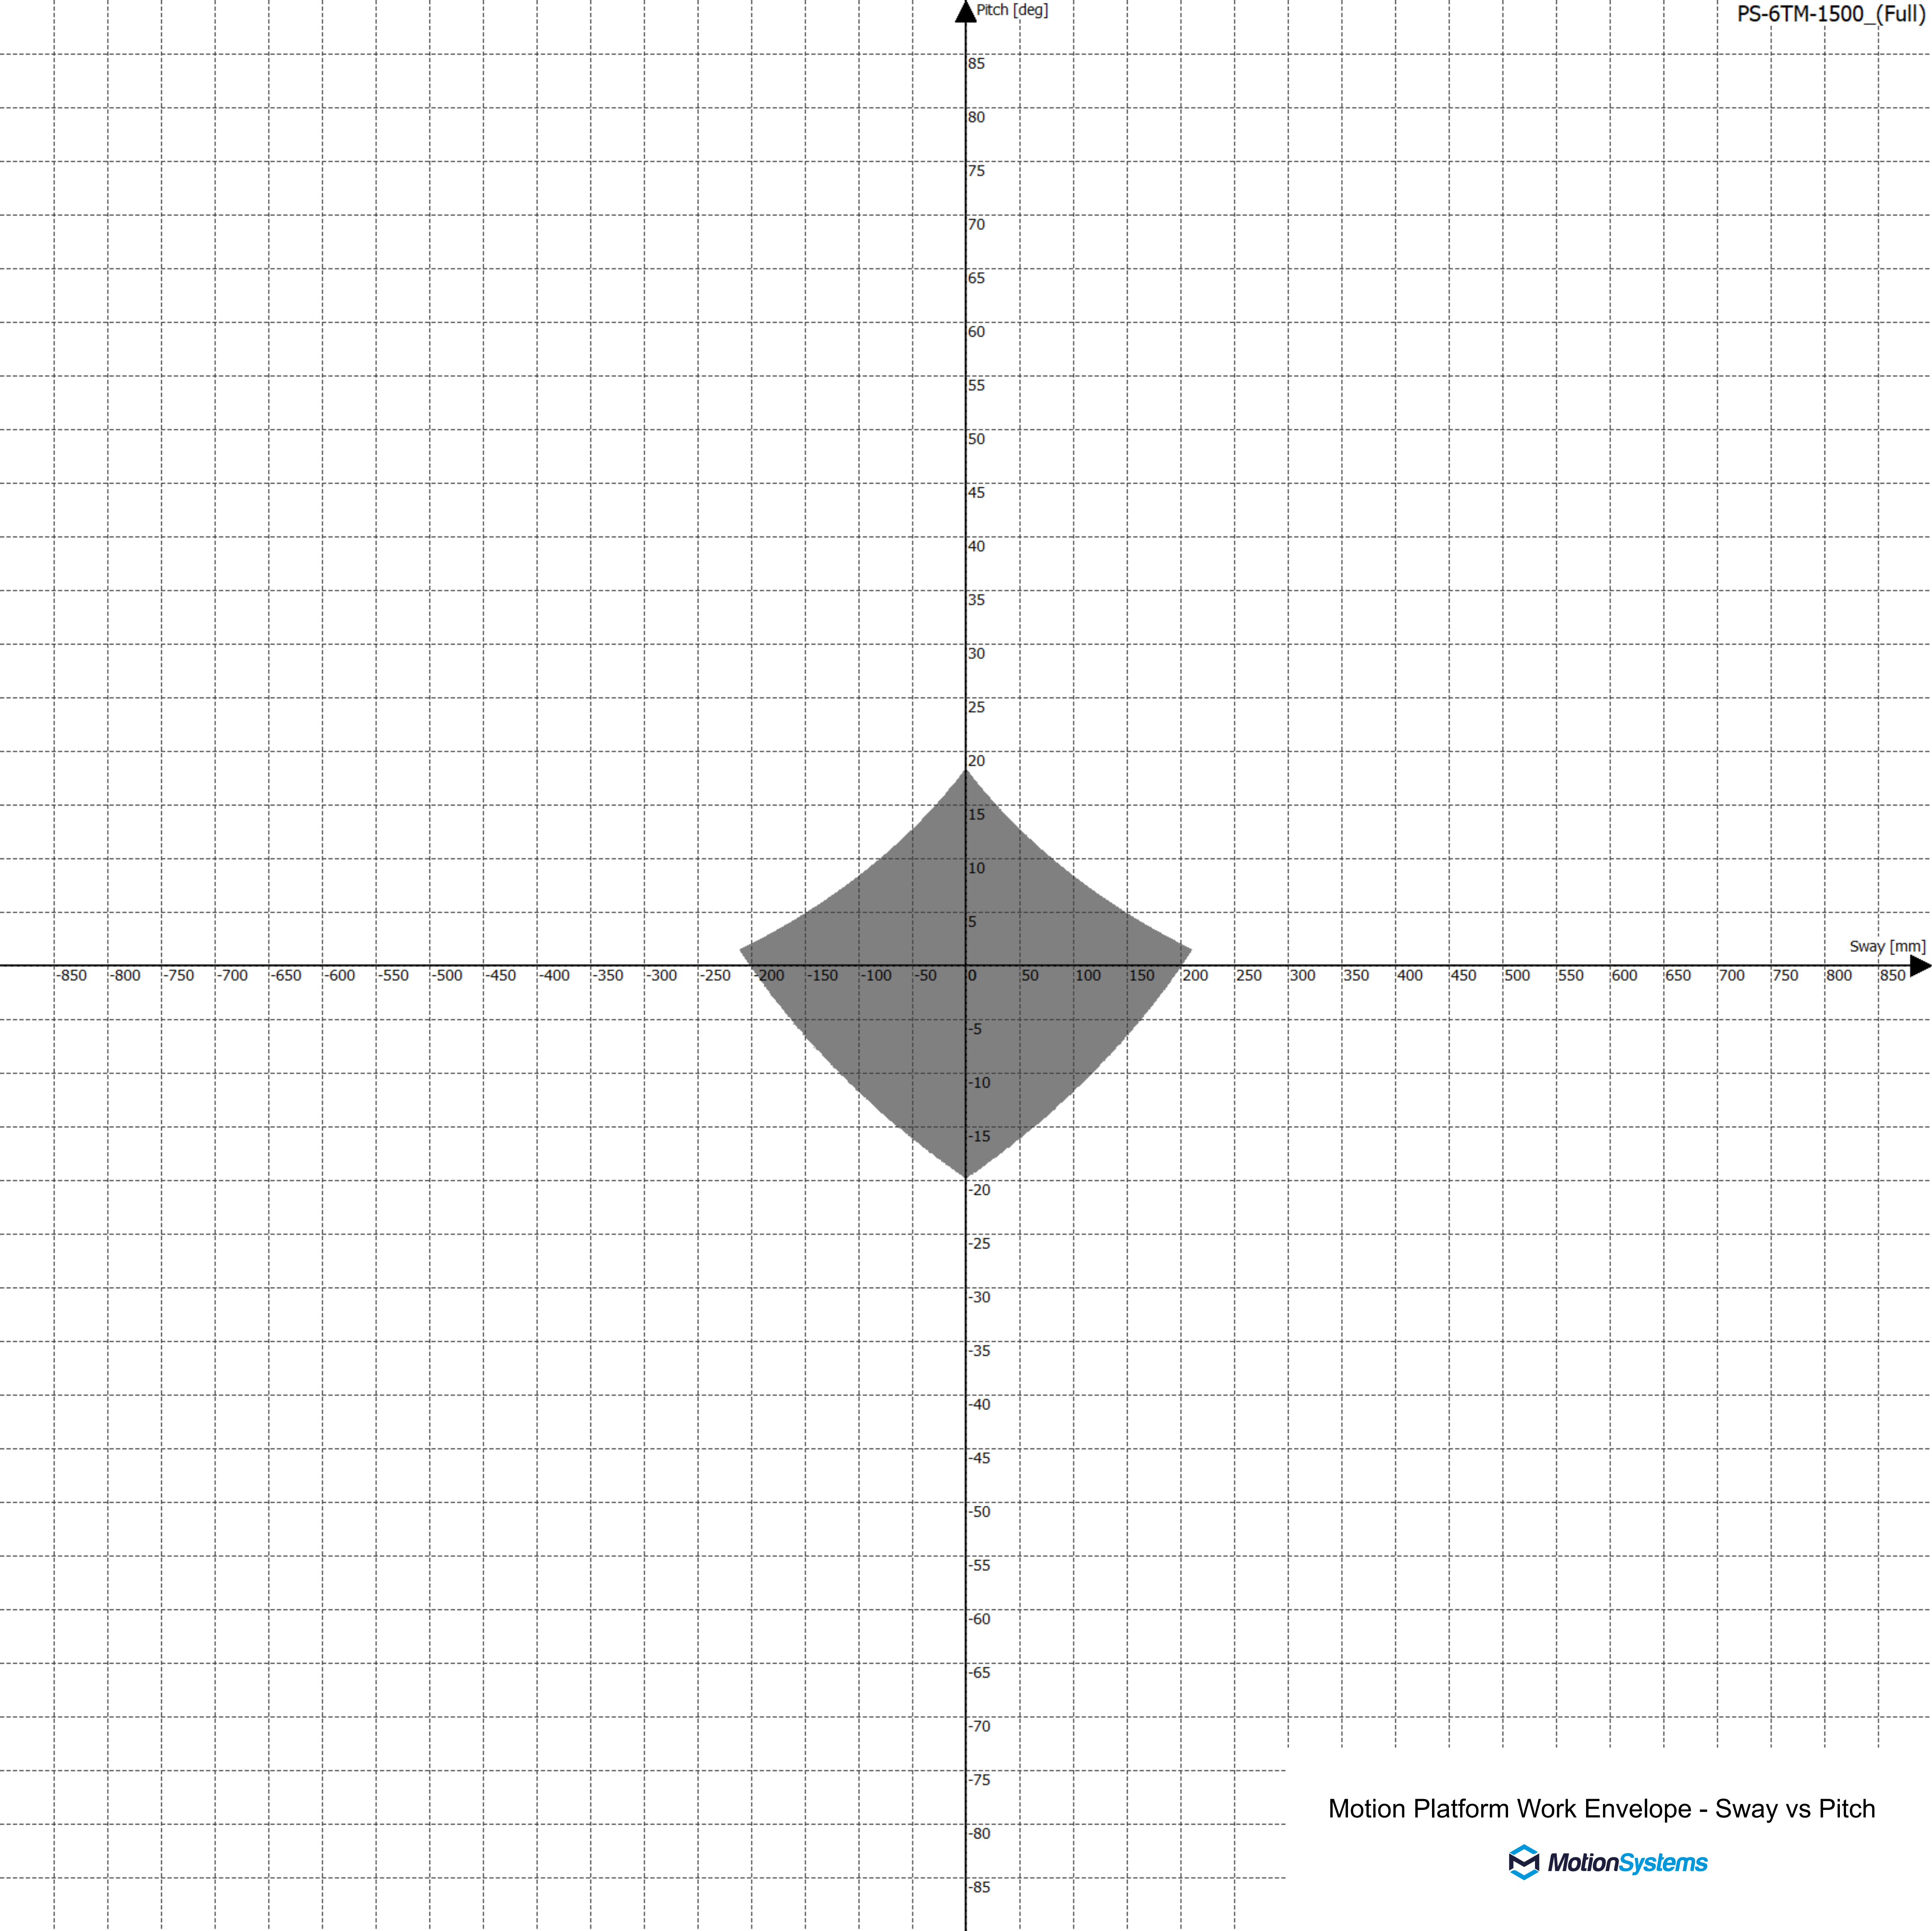

Motion Platform Work Envelope - Sway vs Pitch

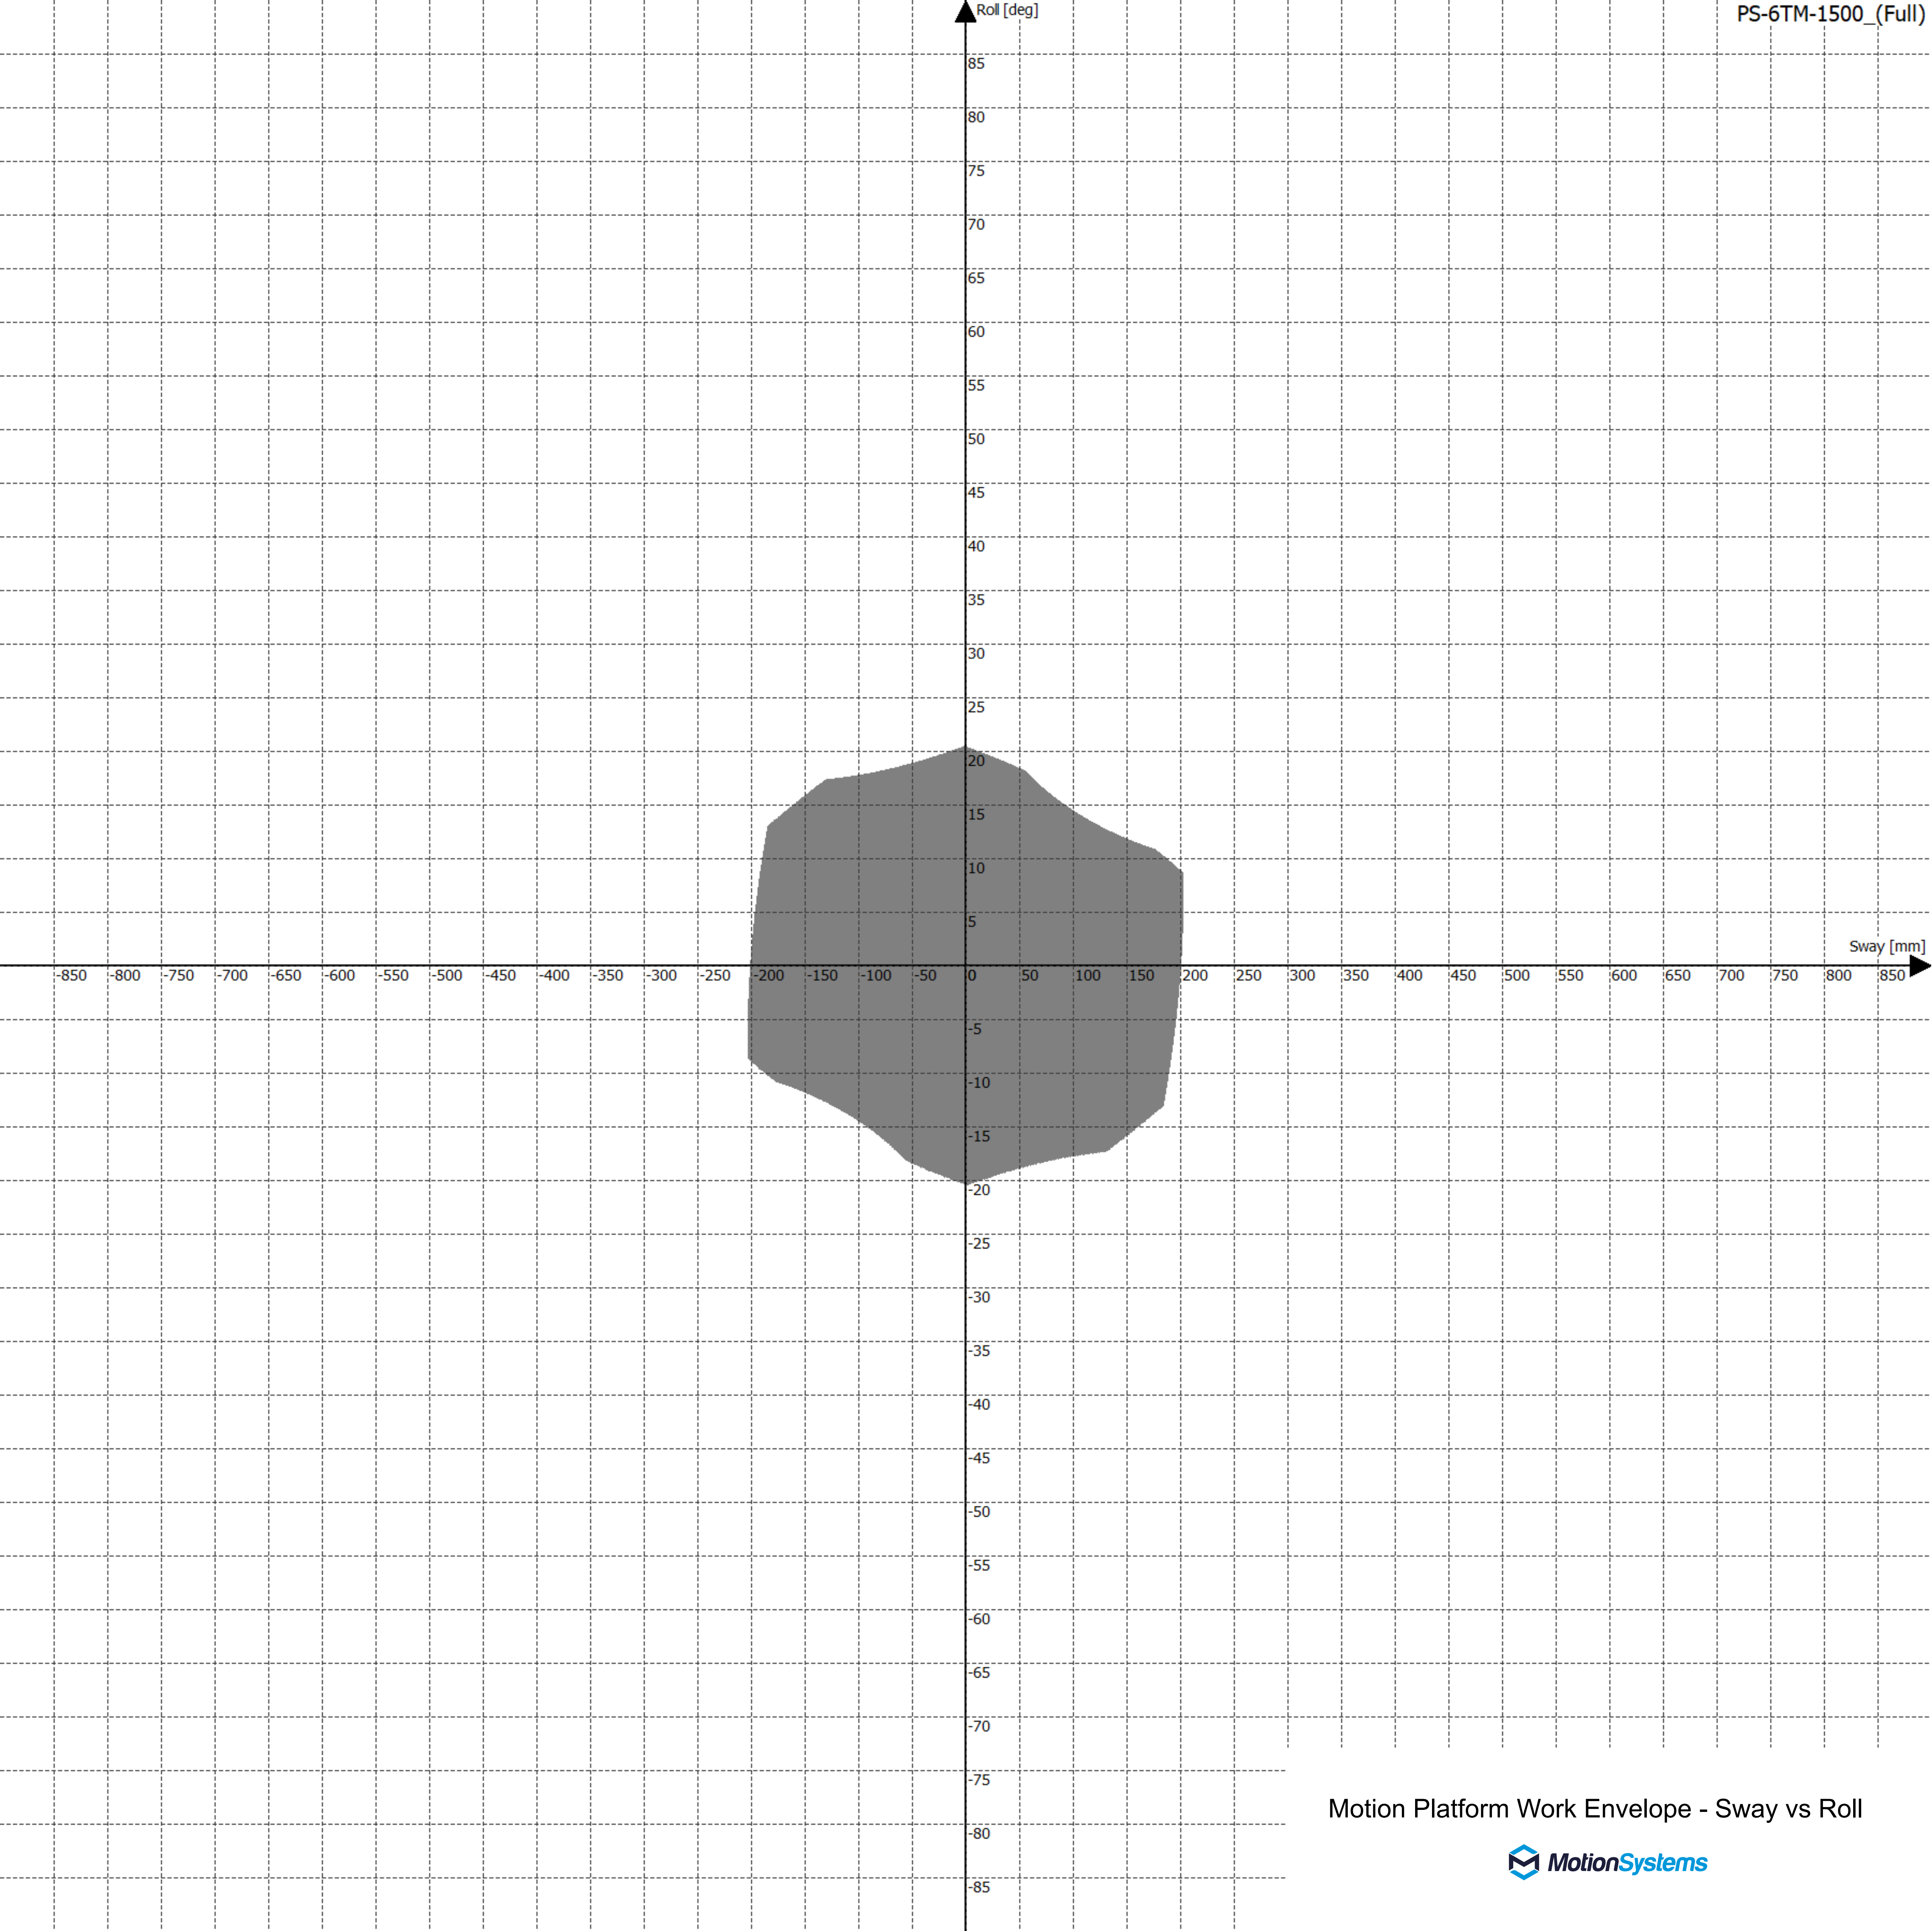

Motion Platform Work Envelope - Sway vs Roll

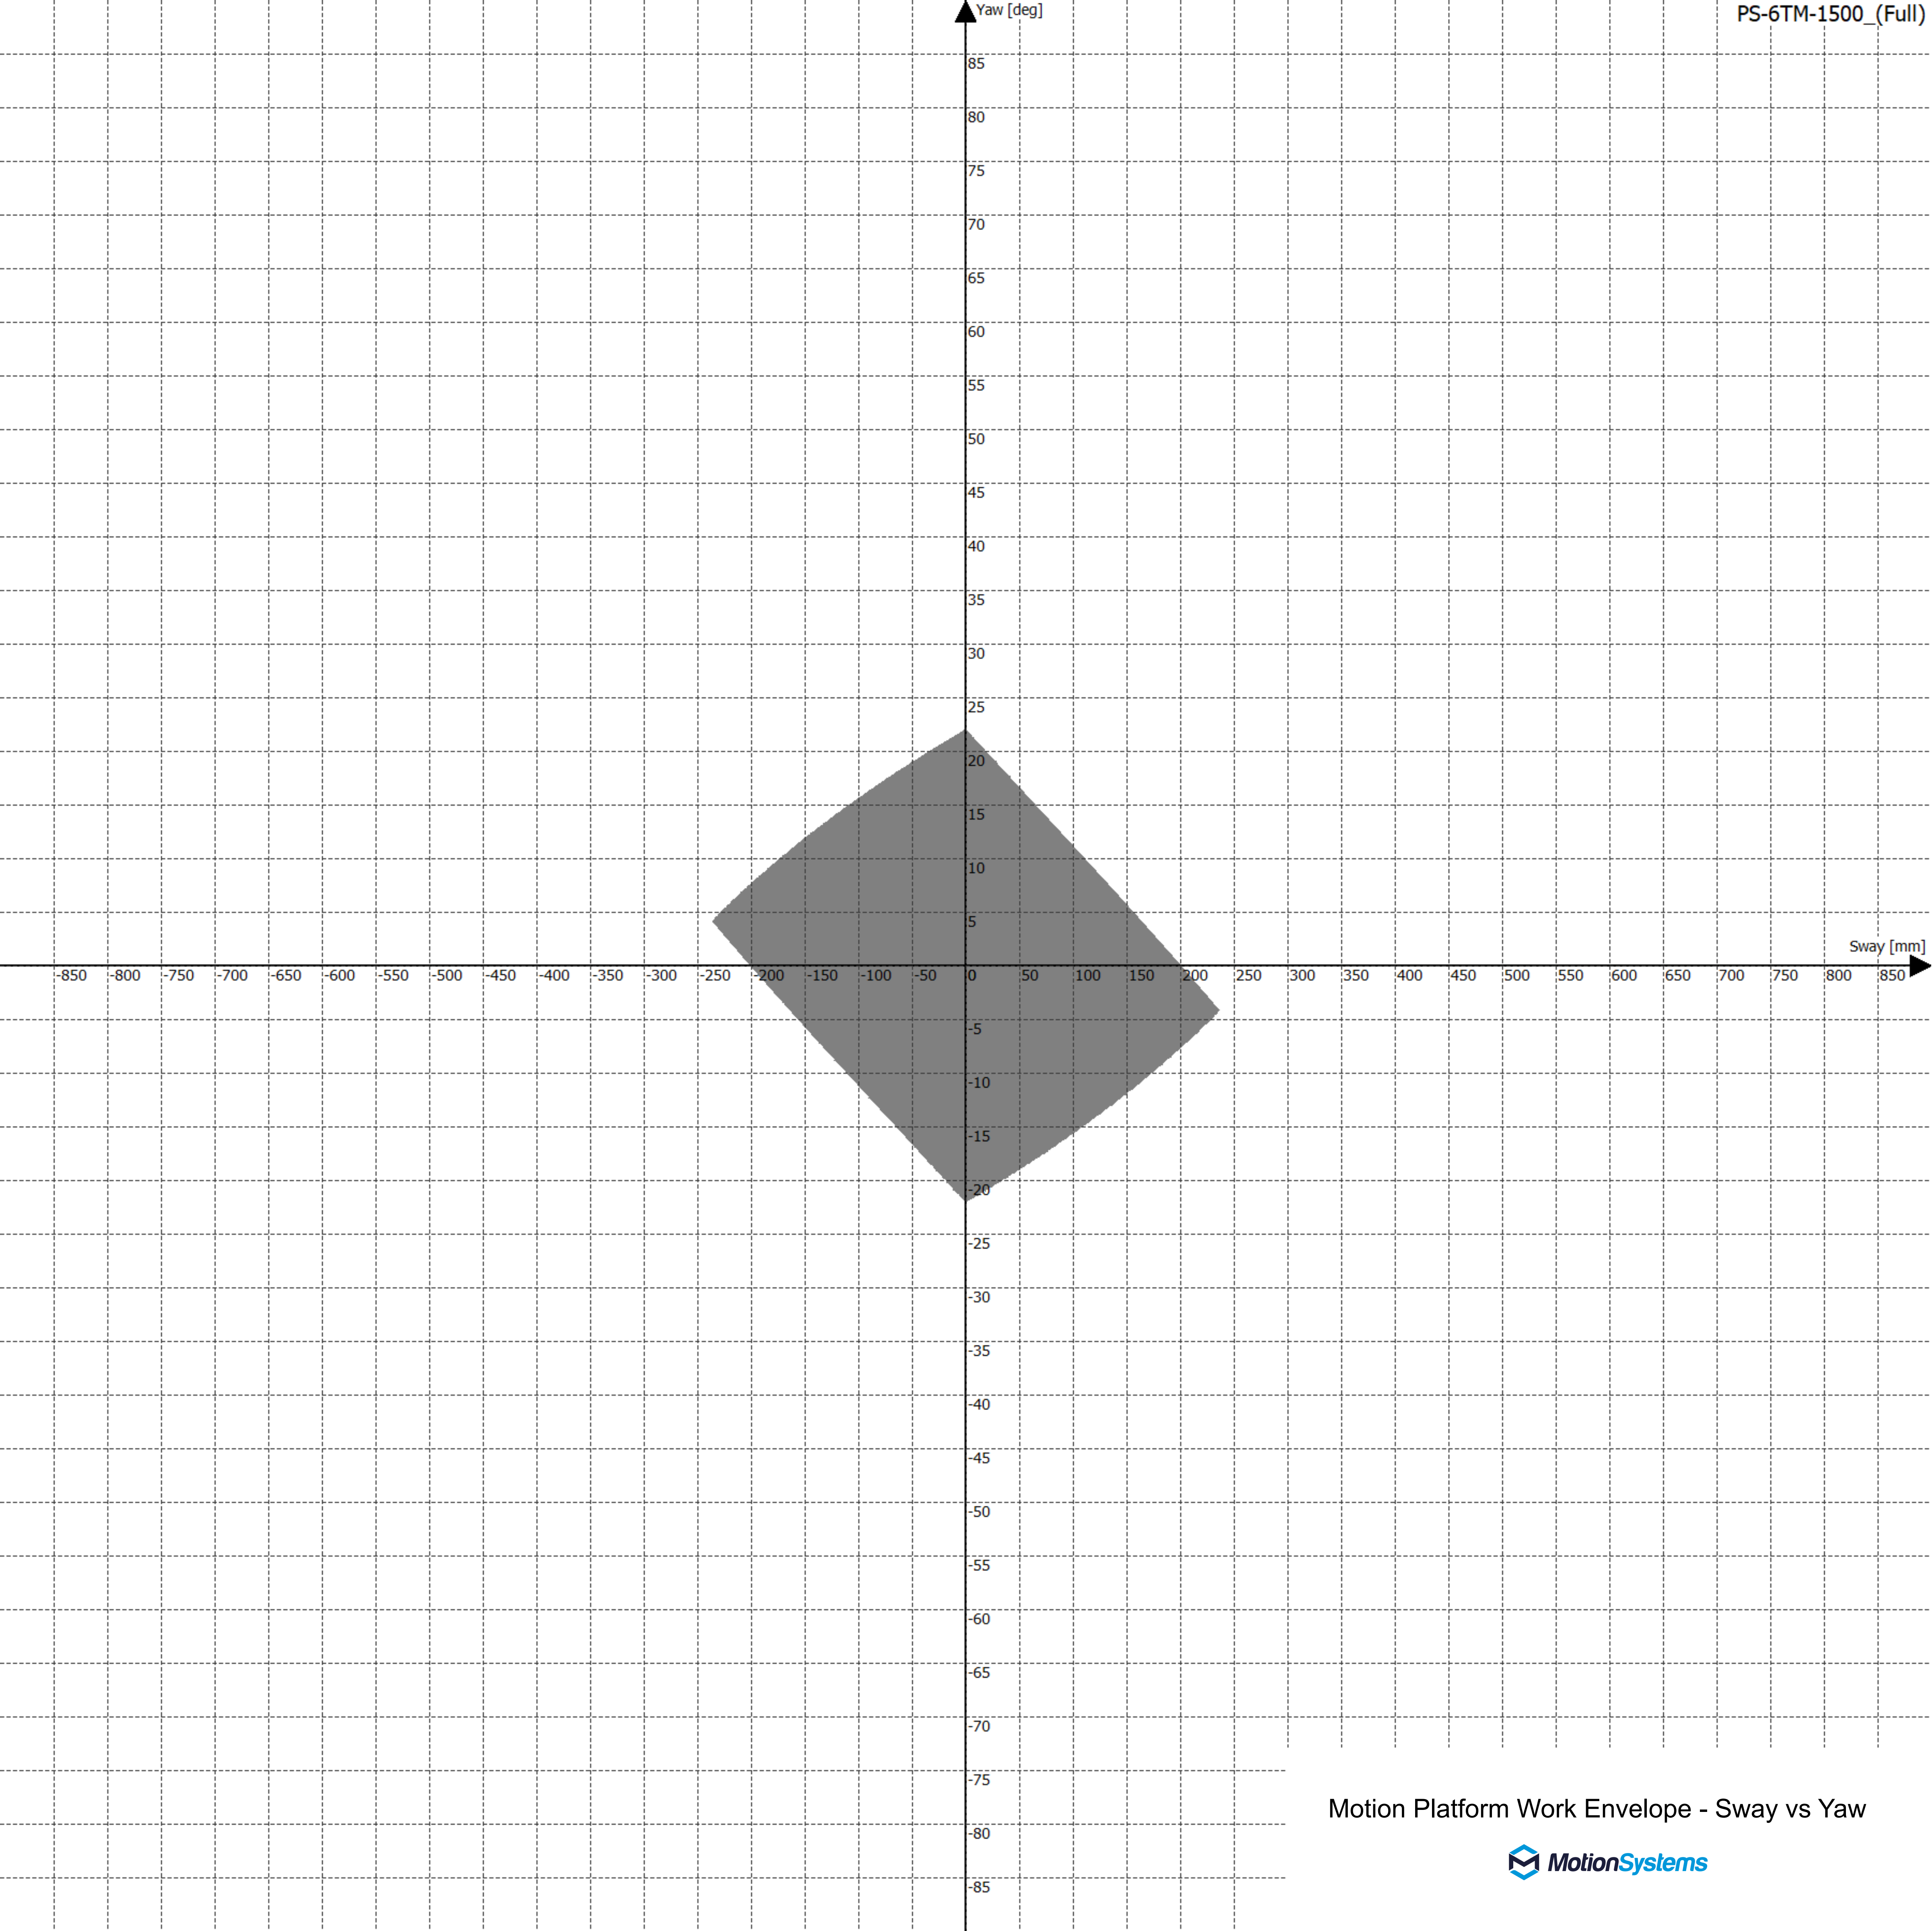

Motion Platform Work Envelope - Sway vs Yaw